


MEDIA









OFFICE

LIVING


MAJA
MÖBEL

4019

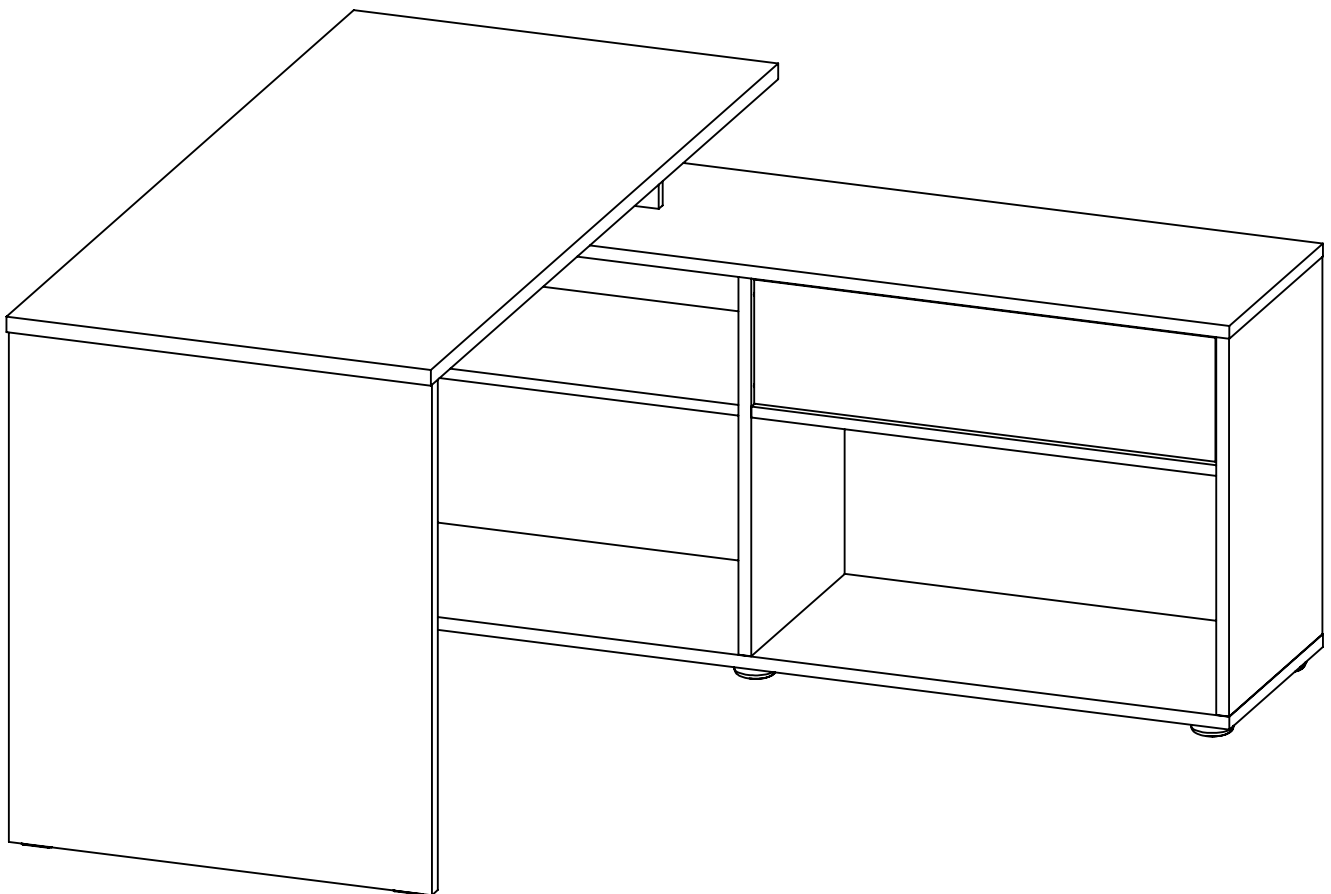

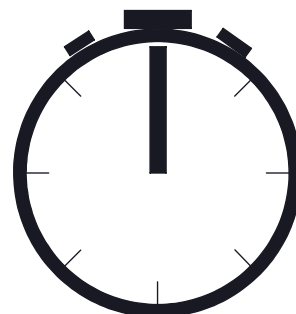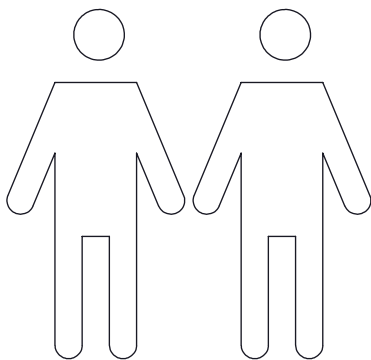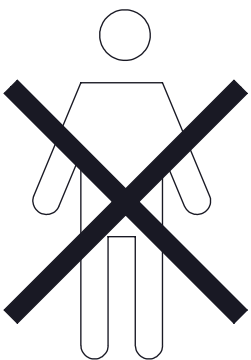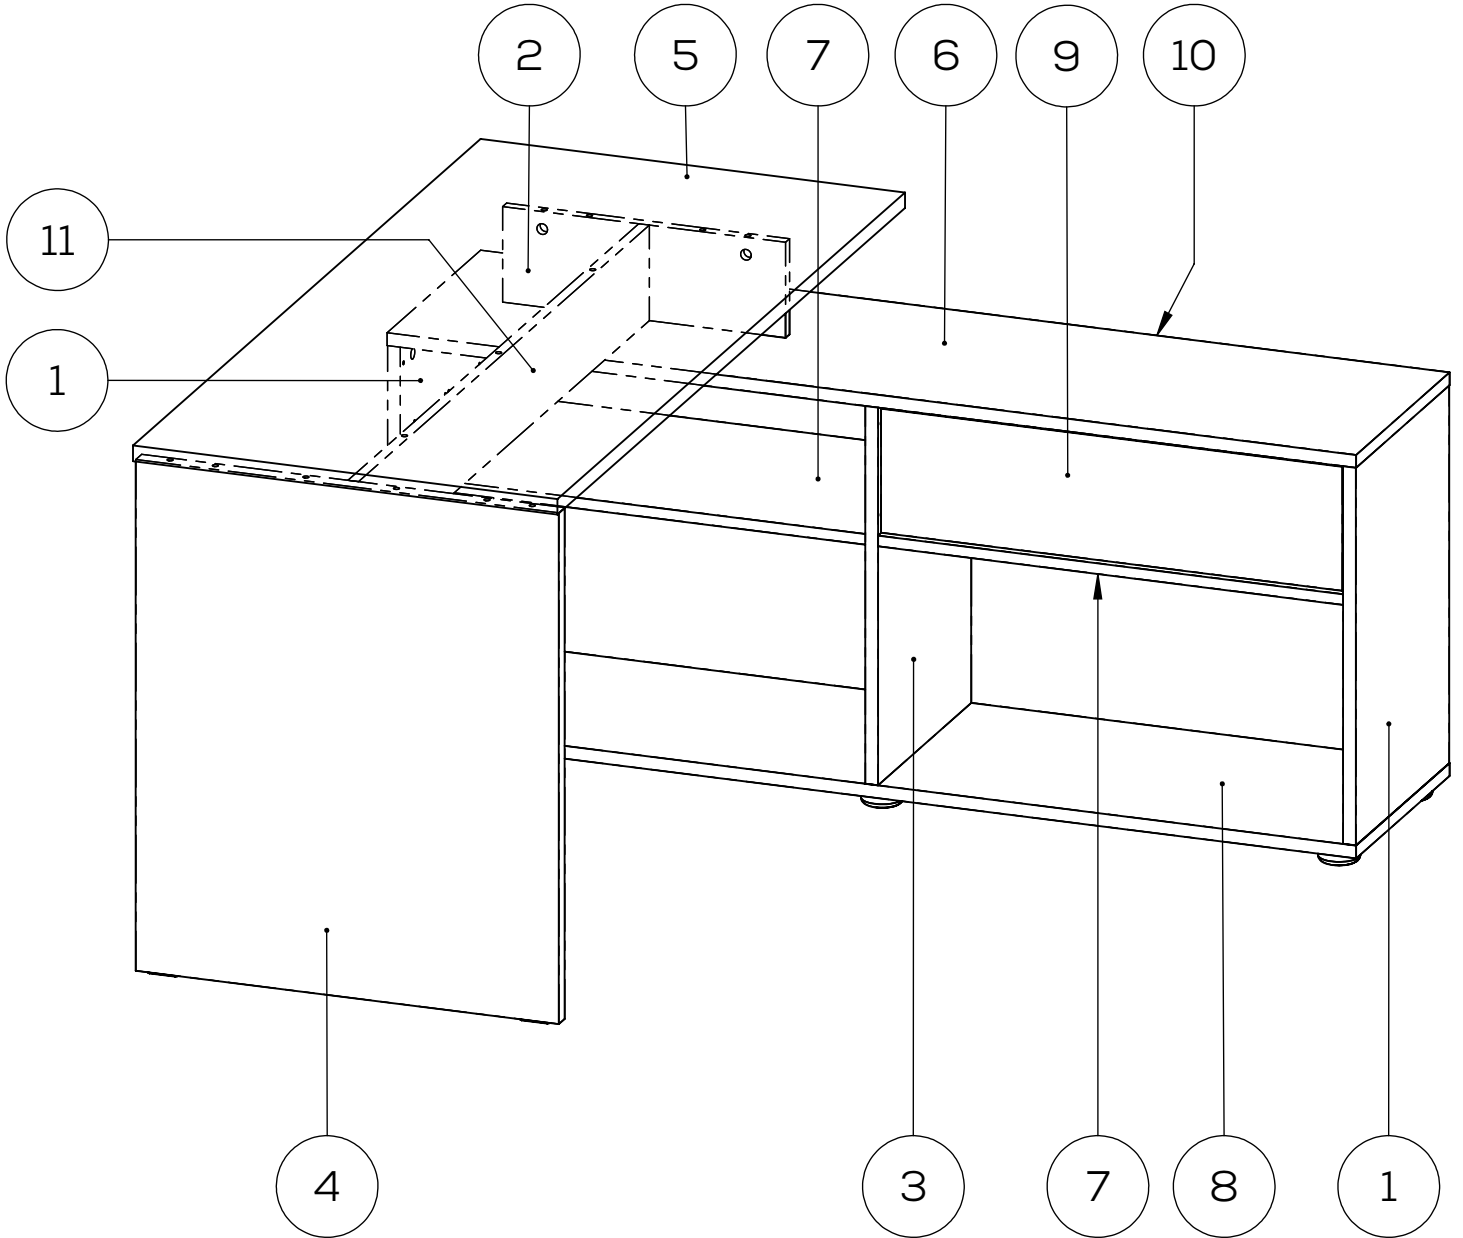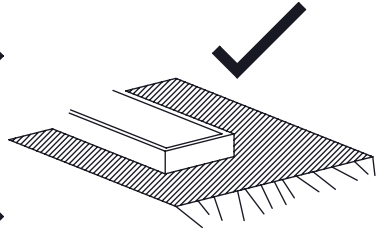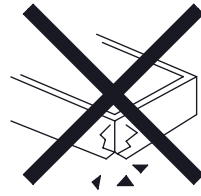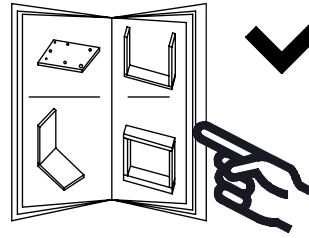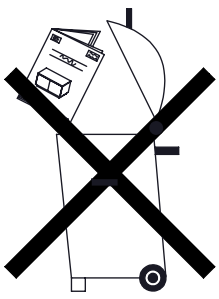















60 min

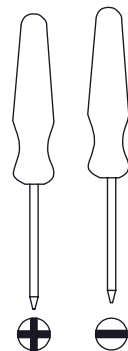
















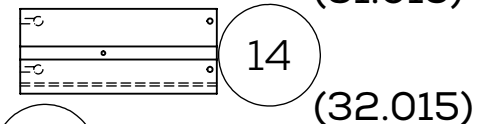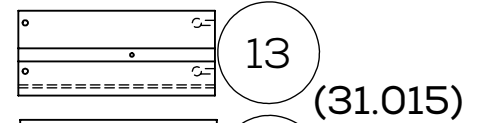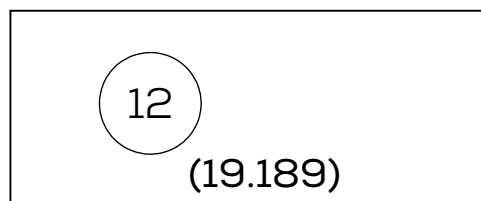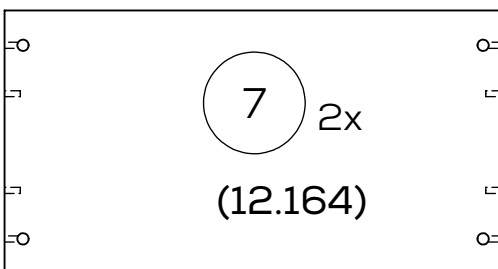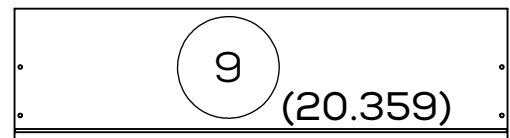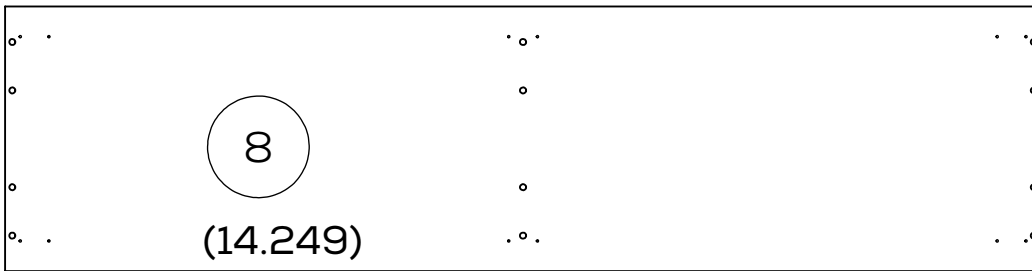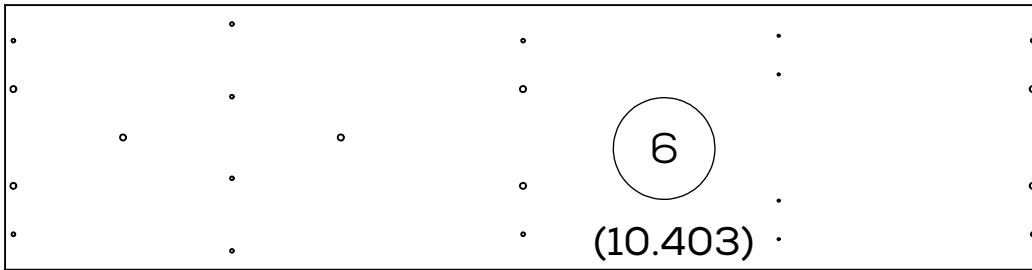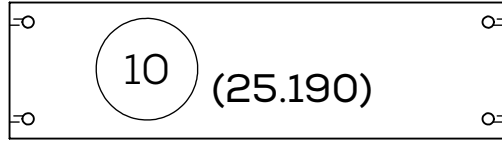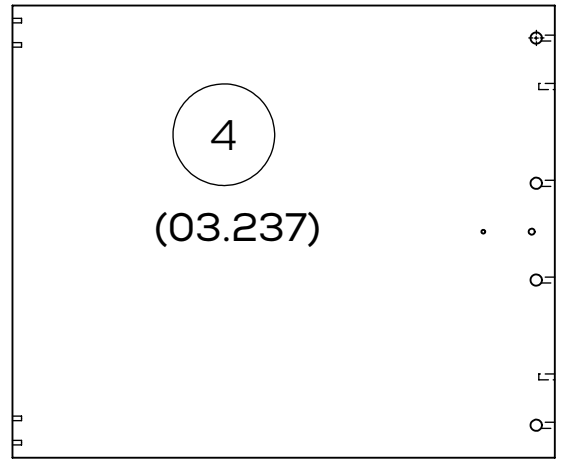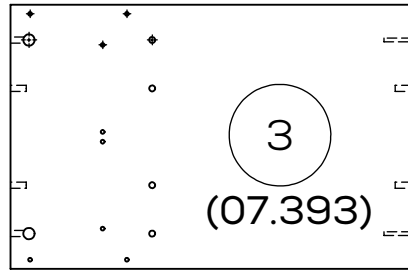
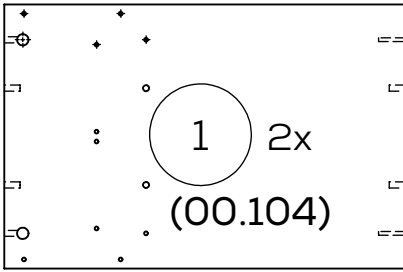




23.02.2021

1



maja-moebel.de

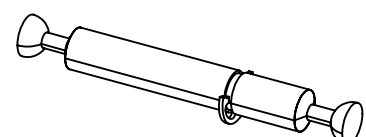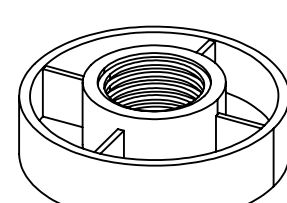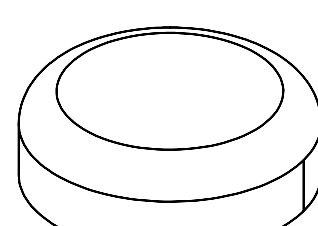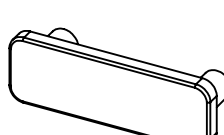

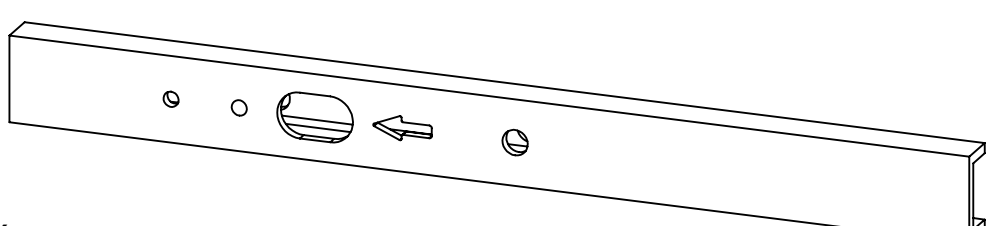
<p>A (E701000)</p>  <p>30x</p>	<p>B (E701153)</p>  <p>29x</p>	<p>C (E701231)</p>  <p>27x</p>	<p>D (E701010)</p>  <p>4x</p>
<p>E (E700060)</p>  <p>2x Ø 4,0 x 40mm</p>	<p>F (E701149)</p>  <p>2x</p>	<p>G (E700000)</p>  <p>12x Ø 4,0 x 15mm</p>	<p>H (E700570)</p>  <p>2x M4,0 x 9mm</p>
<p>J (E700020)</p>  <p>2x Ø 3,0 x 12mm</p>	<p>K (E701400)</p>  <p>8x</p>	<p>L (E701292)</p>  <p>2x</p>	
<p>M (E704475-1)</p>  <p>6x</p>		<p>N (E704475-2)</p>  <p>6x</p>	
<p>O (E709801)</p>  <p>1x</p>	<p>P (E704303)</p>  <p>2x</p>	<p>Q (E706332)</p>  <p>1x</p>	<p>R (E706333)</p>  <p>1x</p>
<p>S (E703334)</p>  <p>1x</p>	<p>T (E703017)</p>  <p>2x</p>		

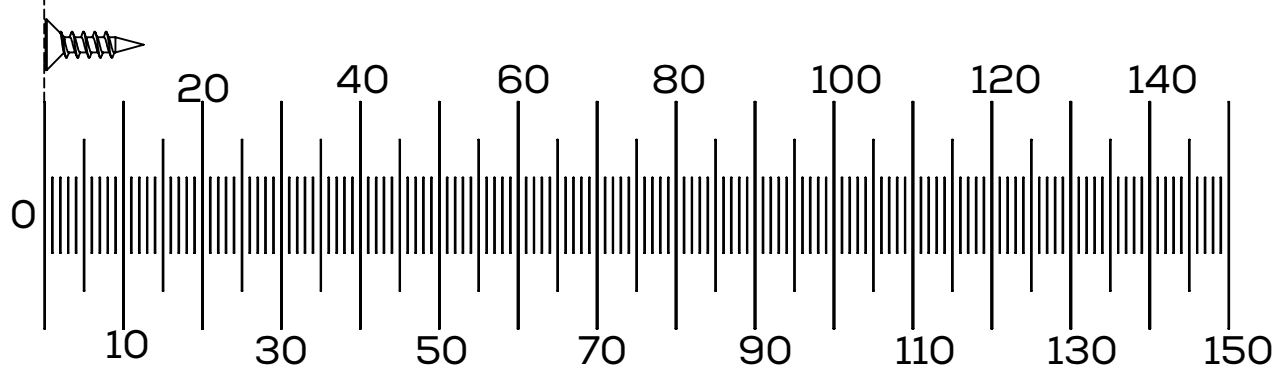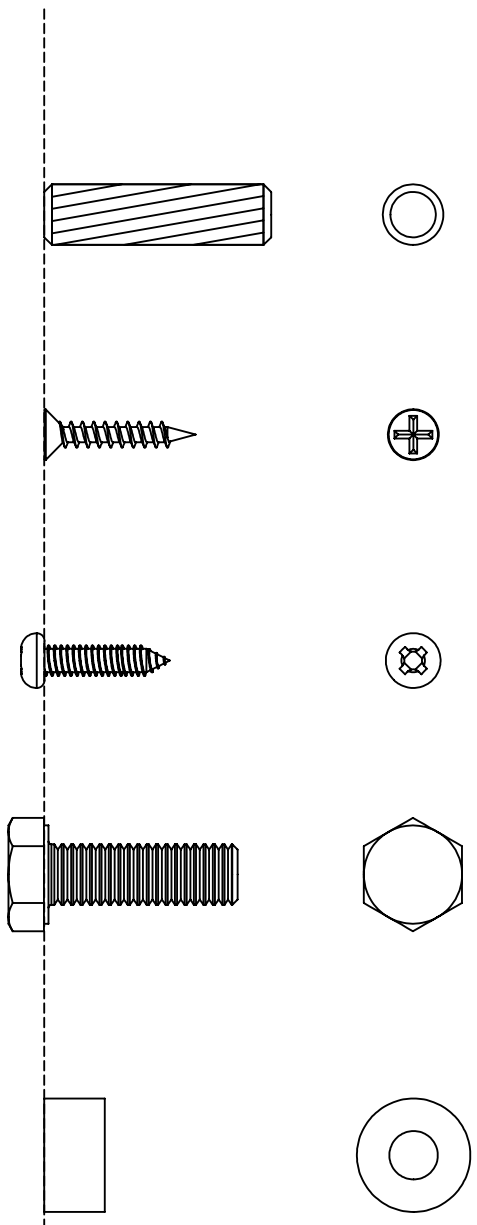



1

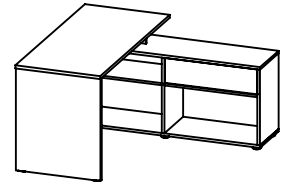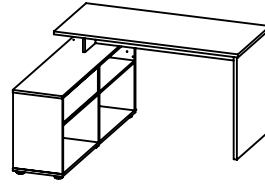

⇒ Step 21

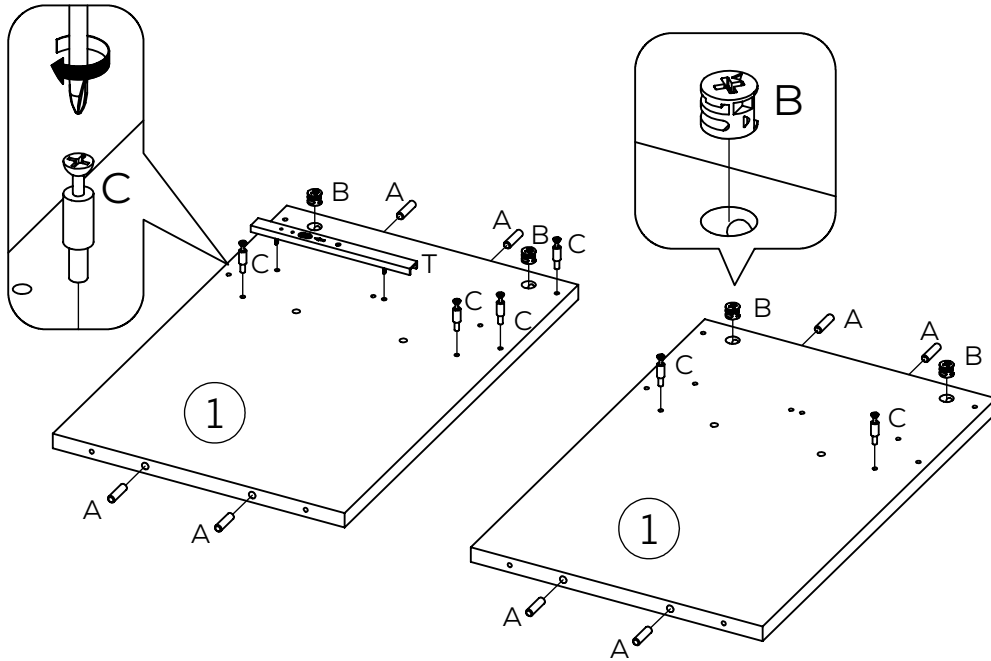



2

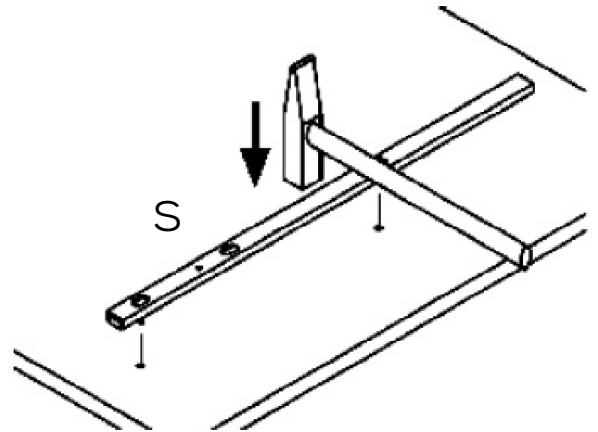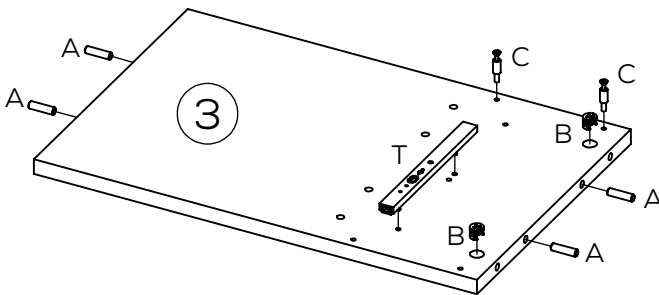

ACHTUNG !!!

Falsch


Richtig

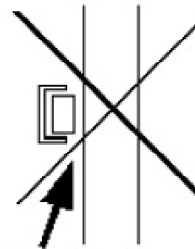


Schienen auf der Fläche aufliegend montieren.
 Runners have to be flush mounted.
 Montage affleuré pour les rails.







3

2x

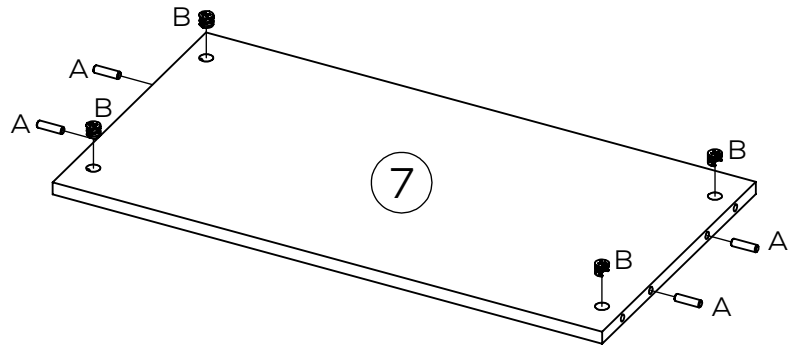


4

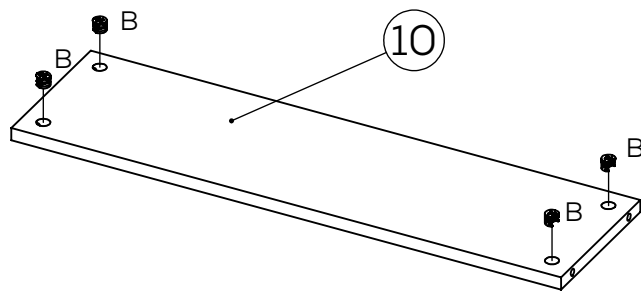


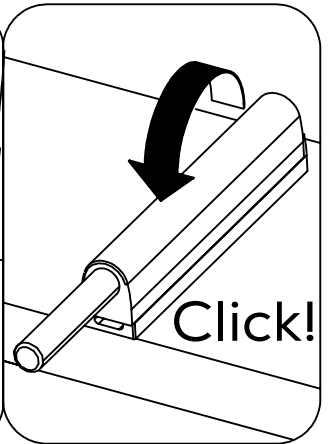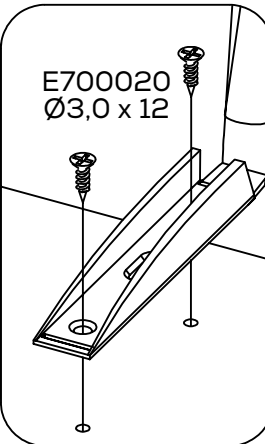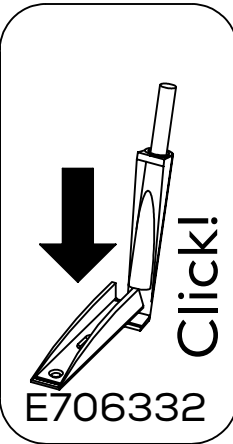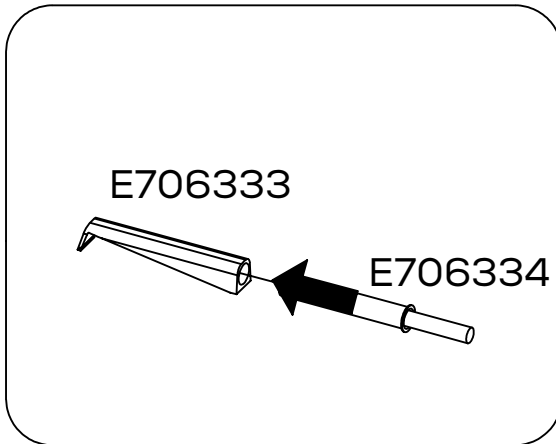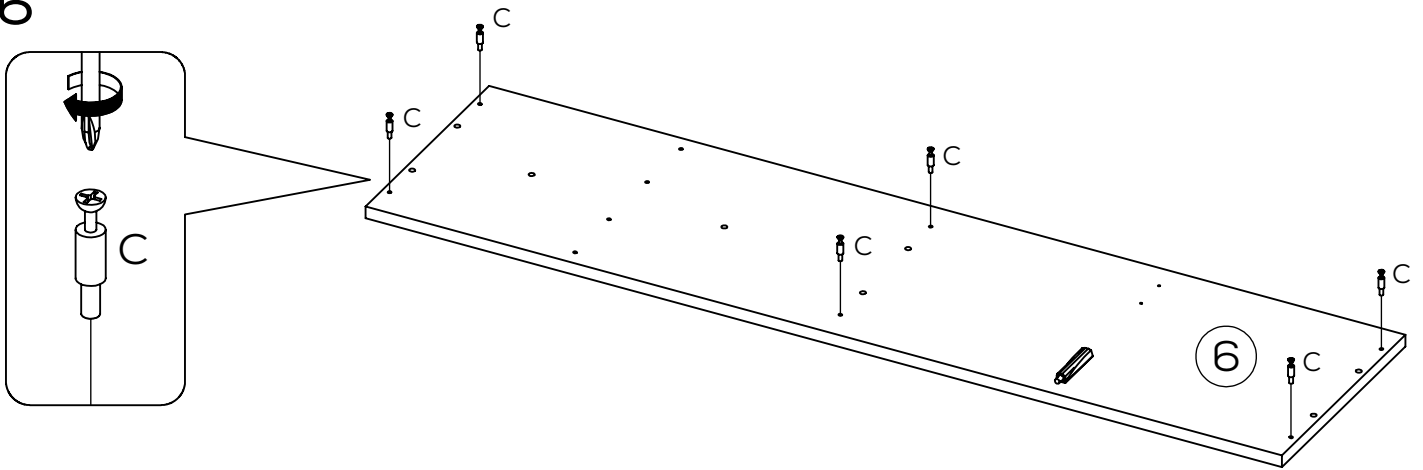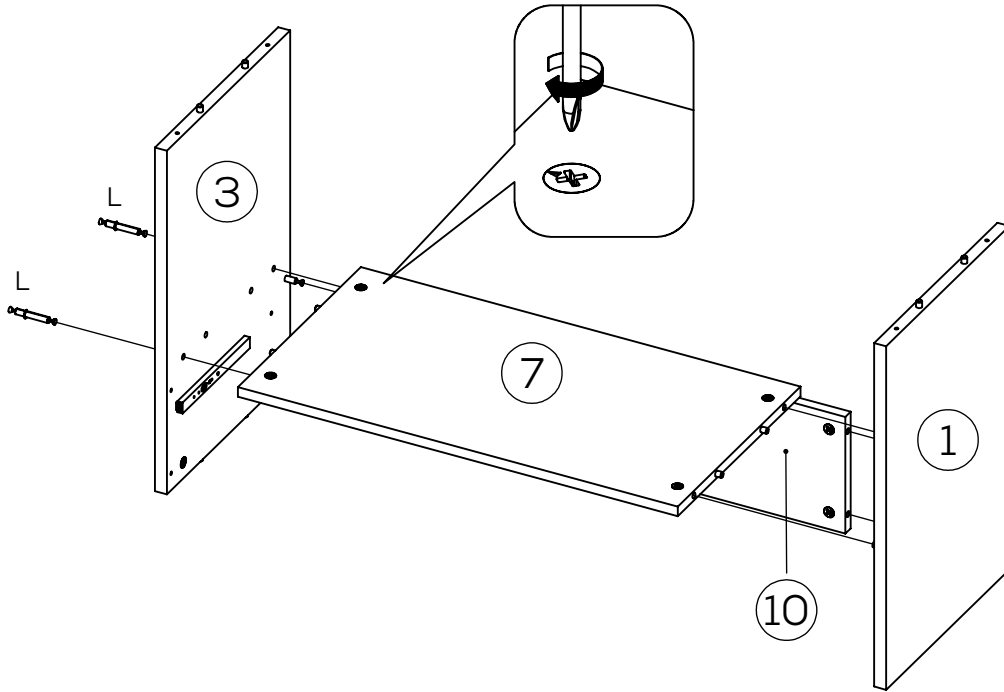


7

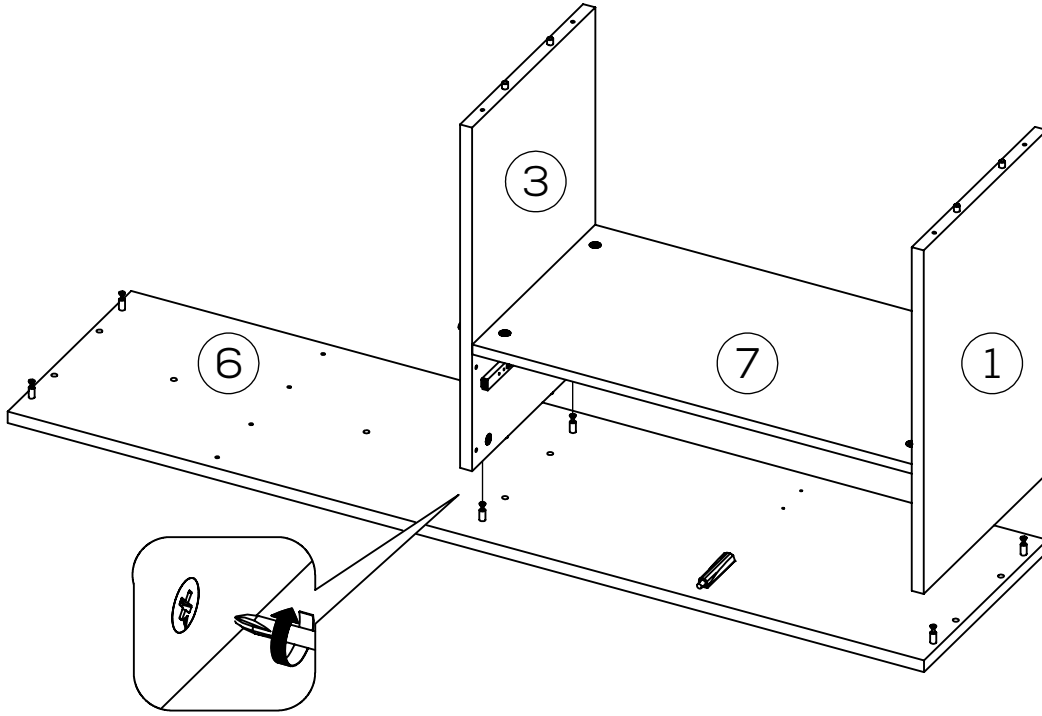


8

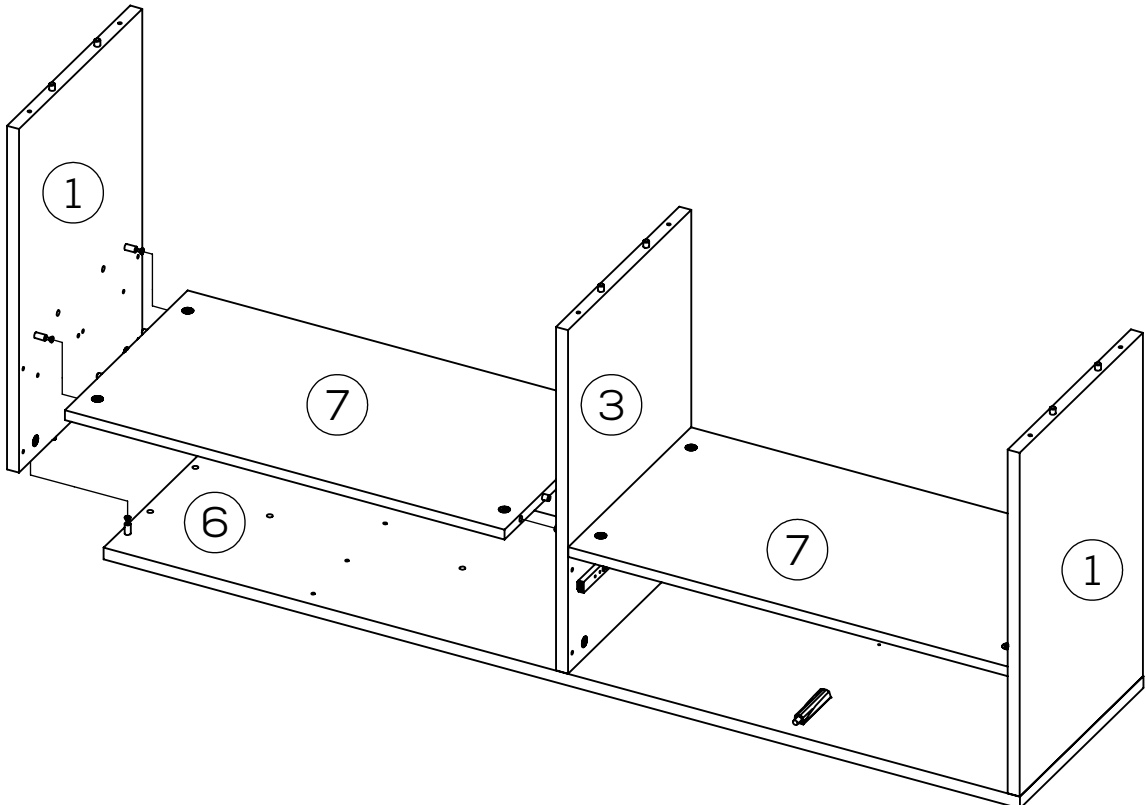


9

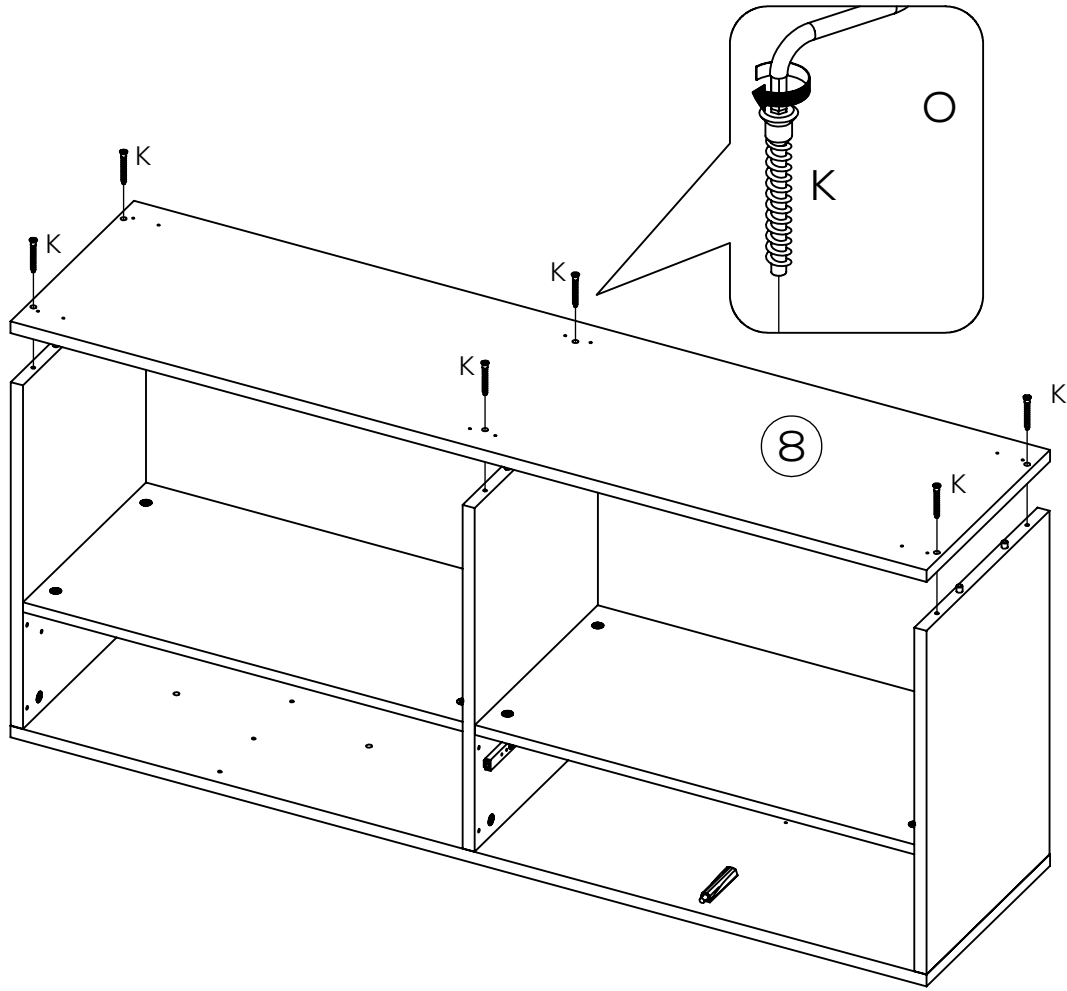


10

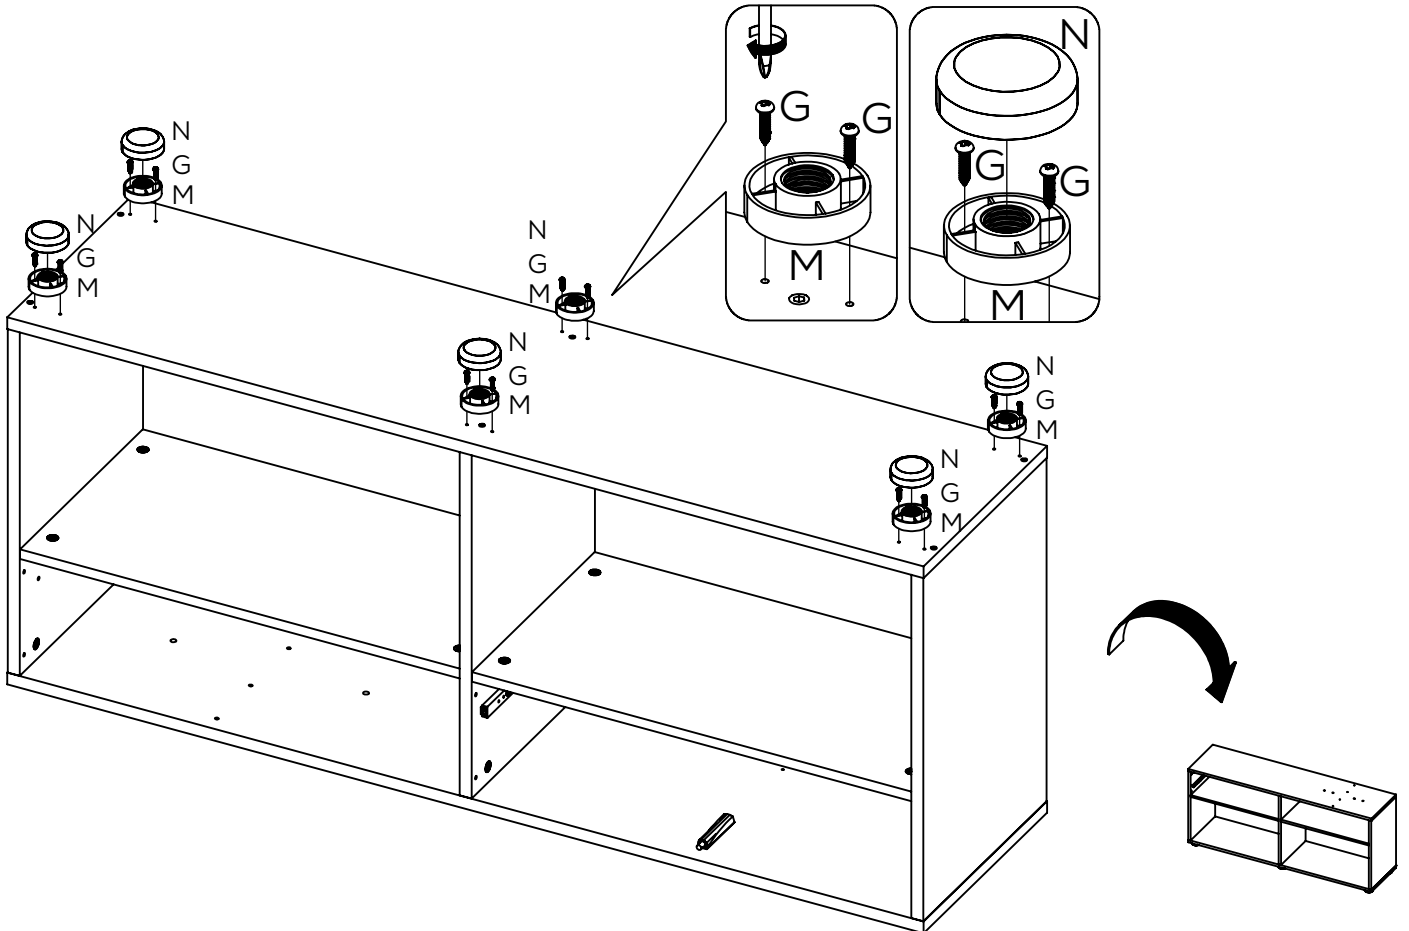


11

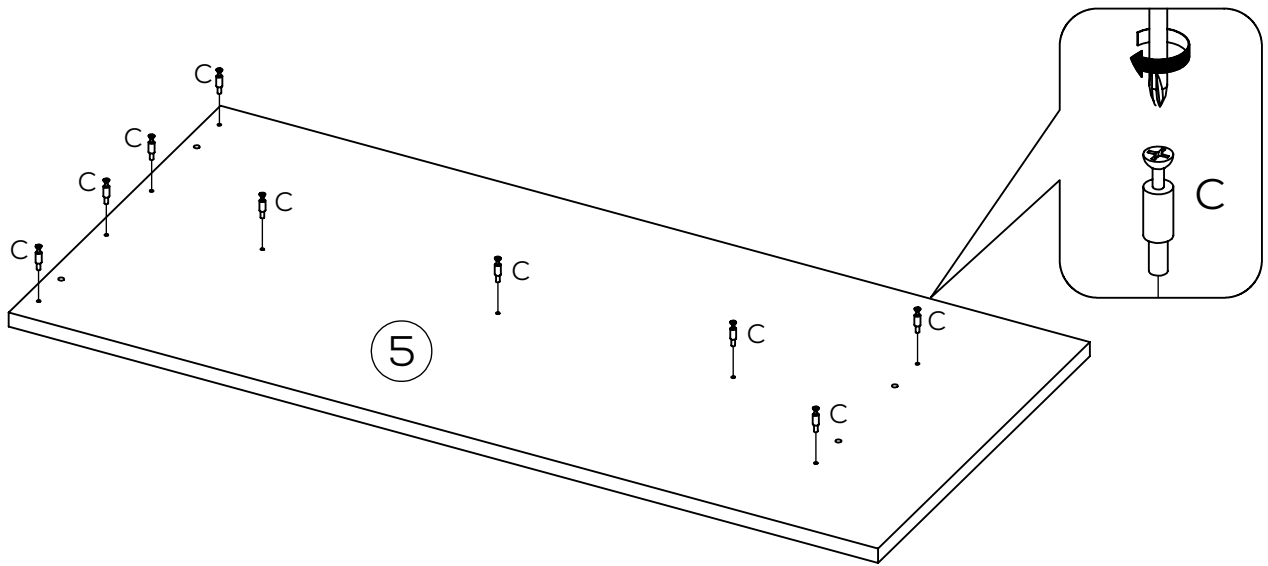


12

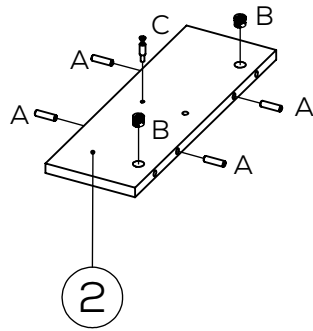


13

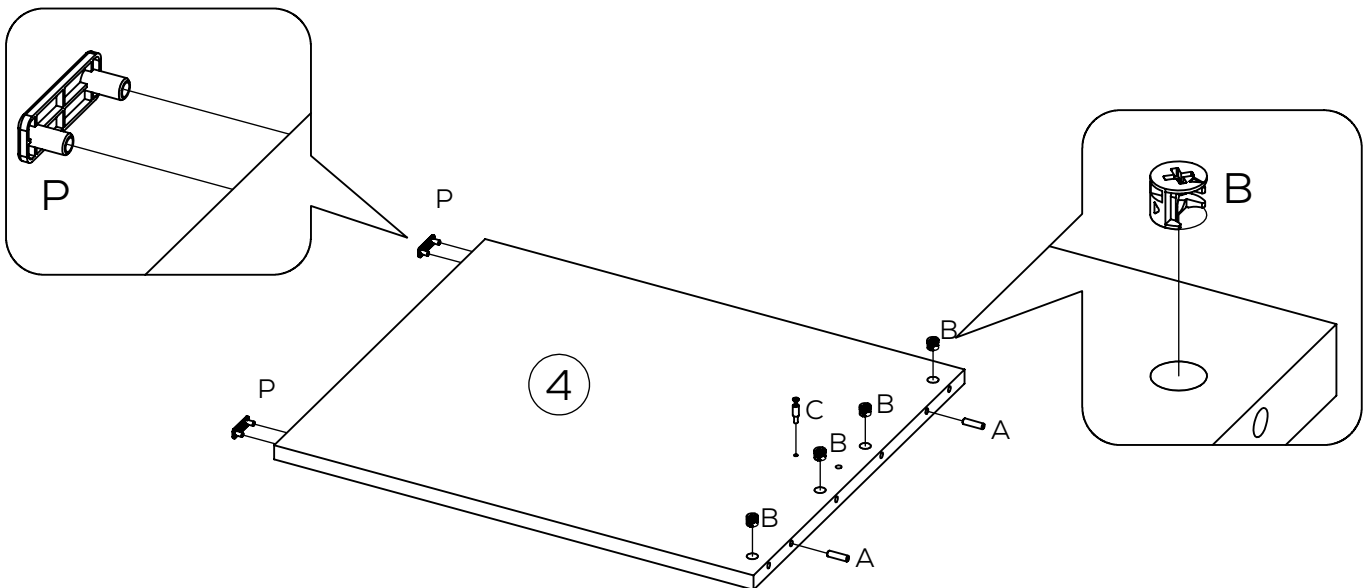


14

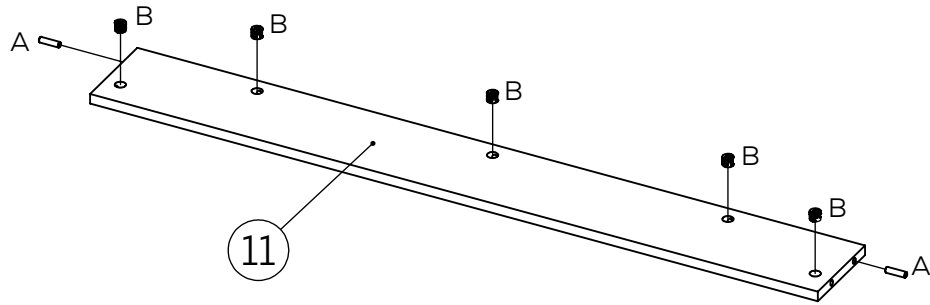


15


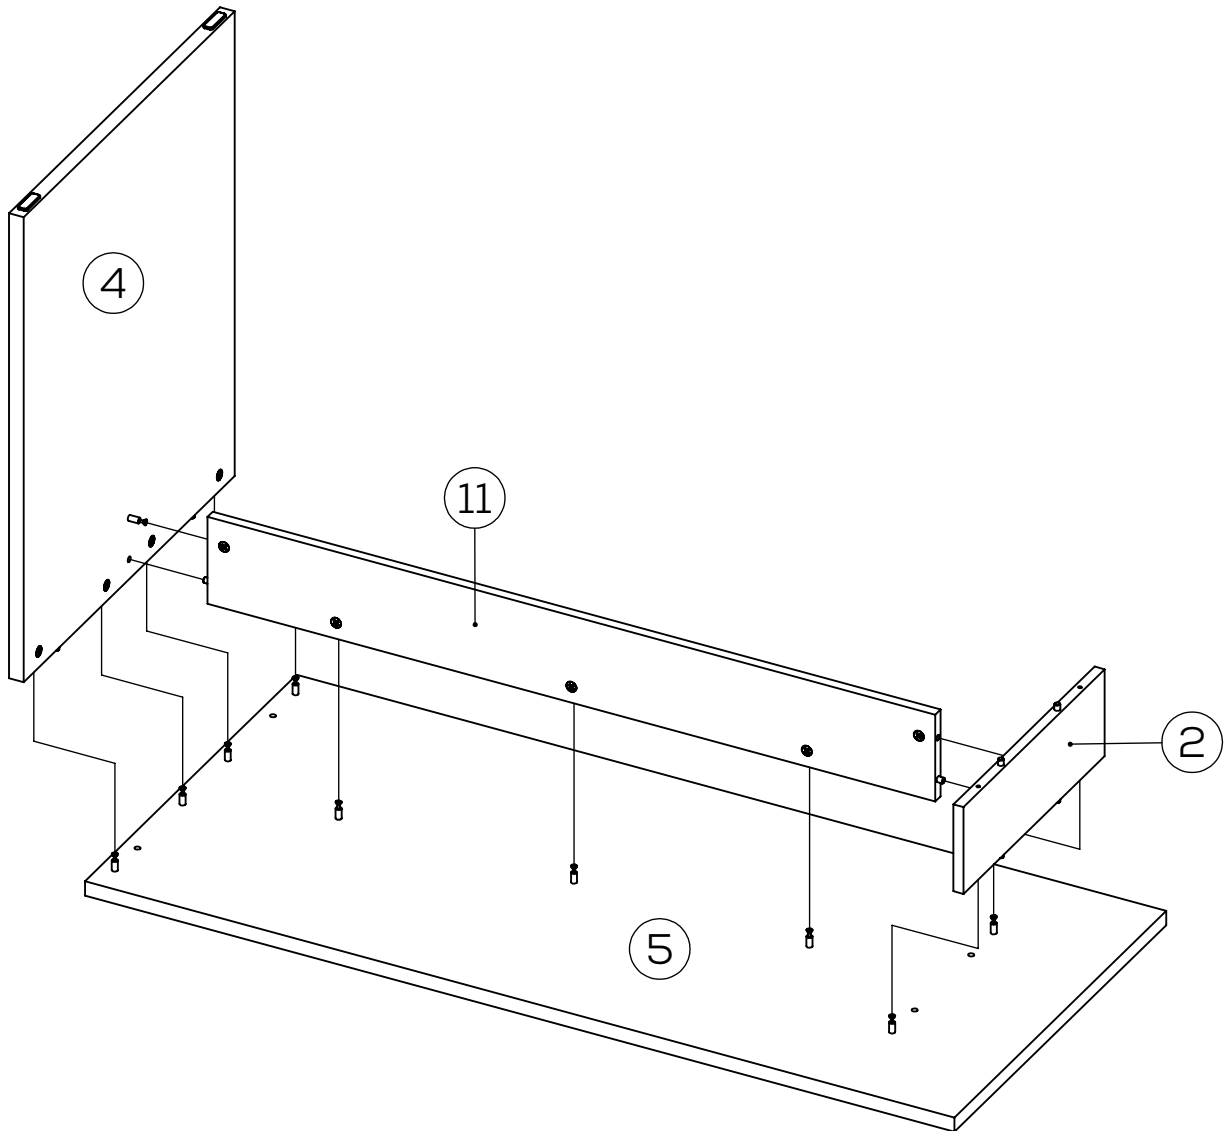



16




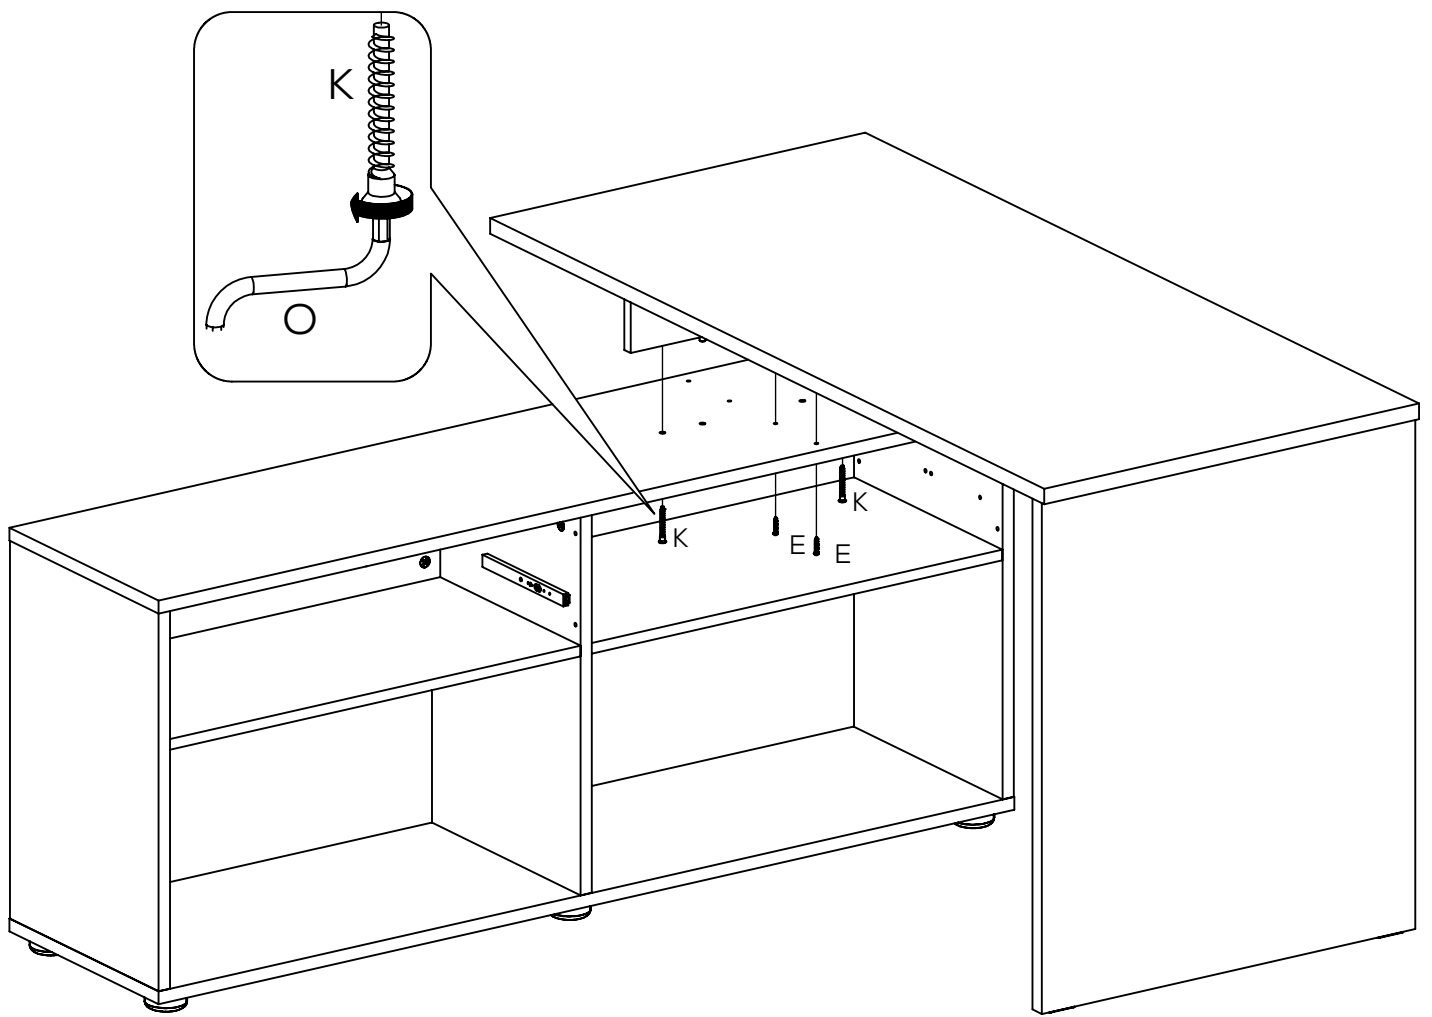


17

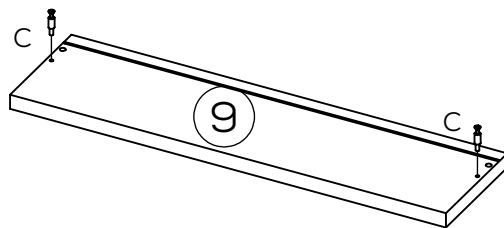

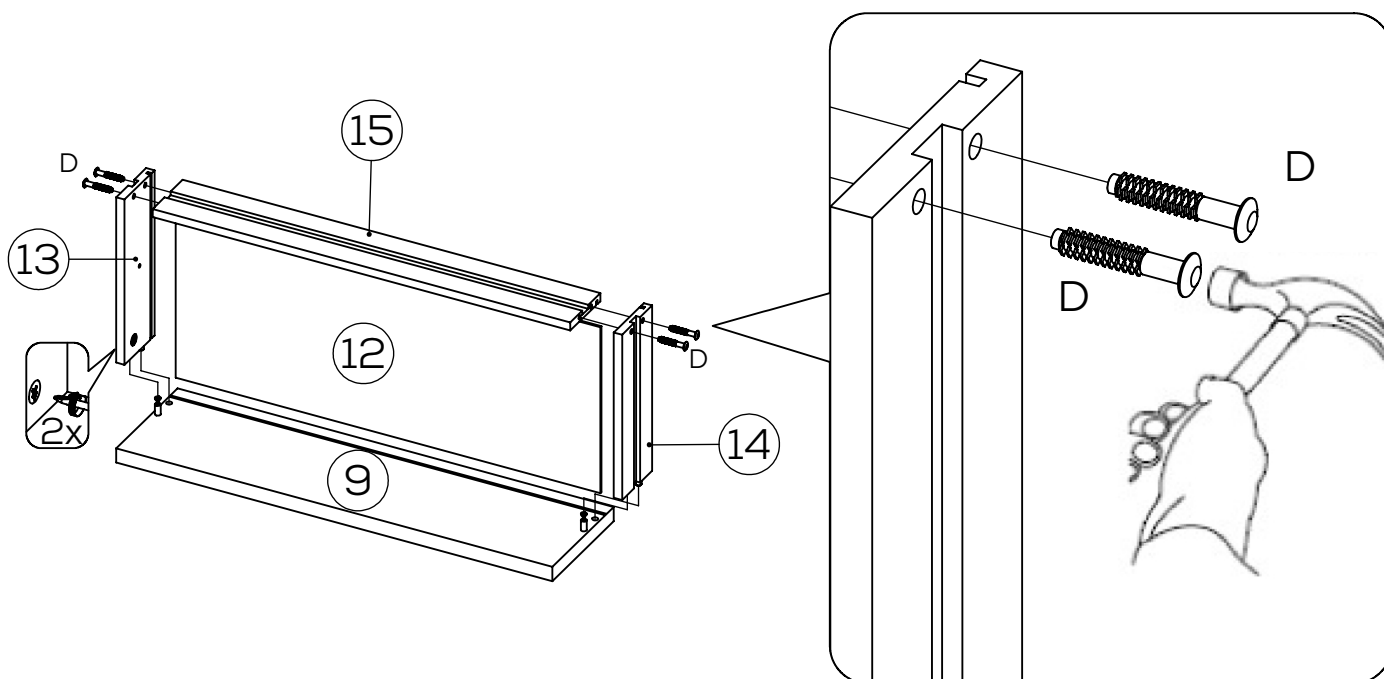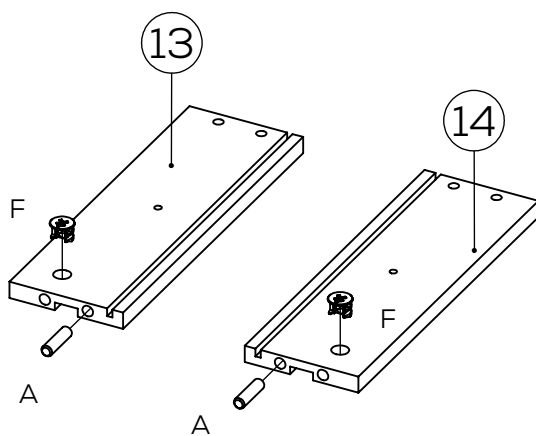

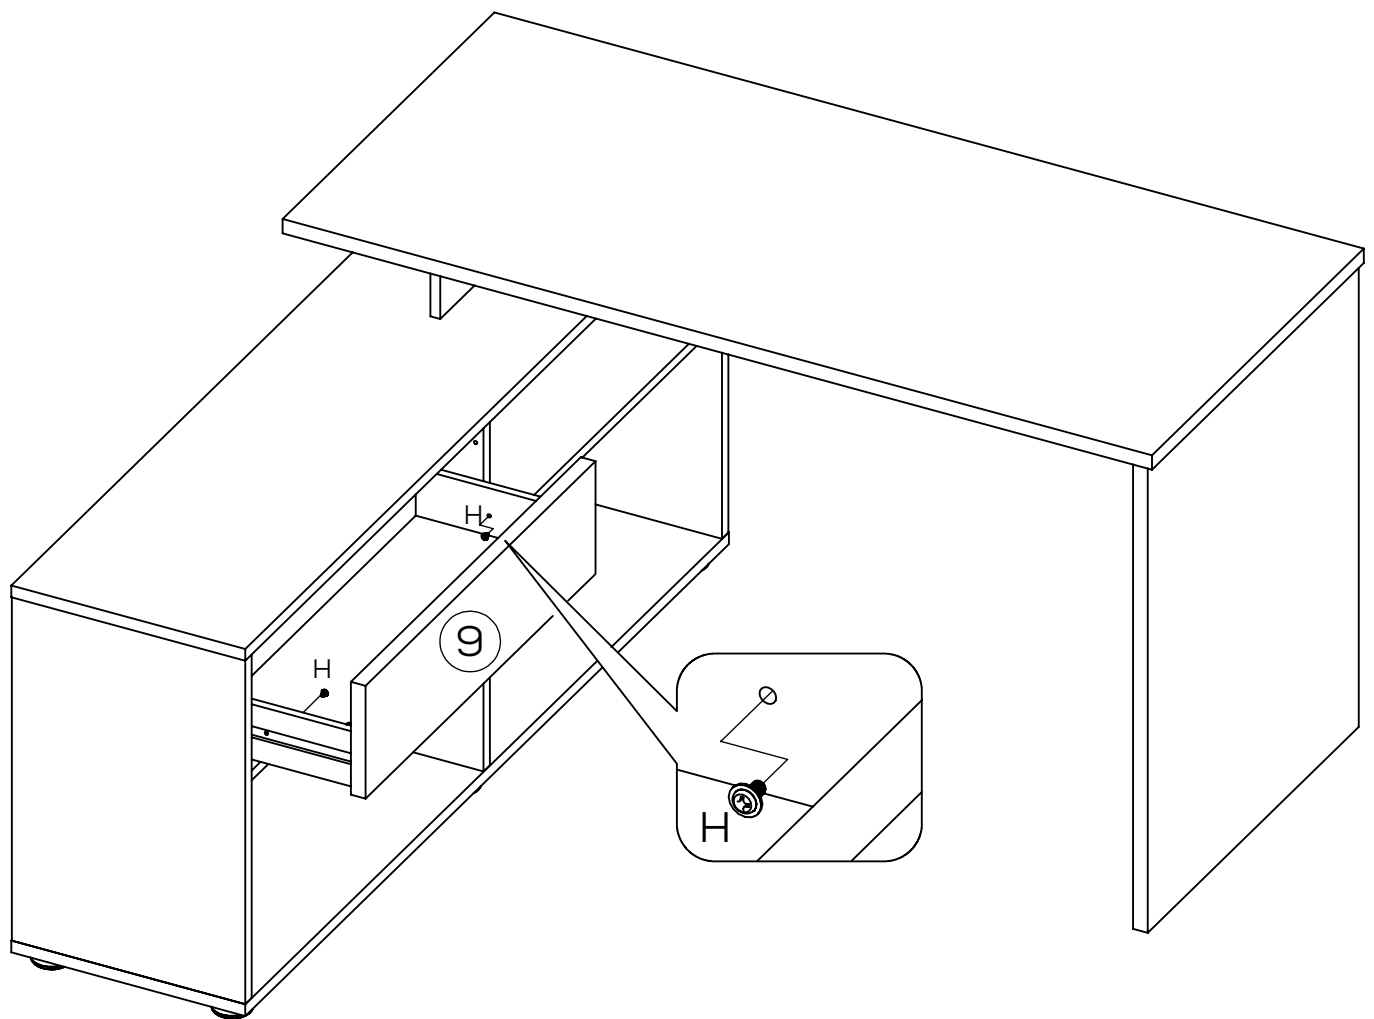


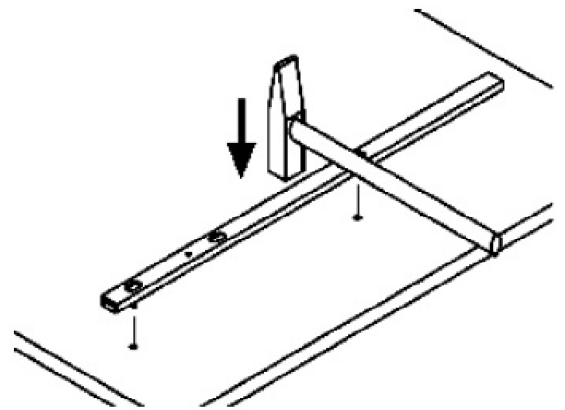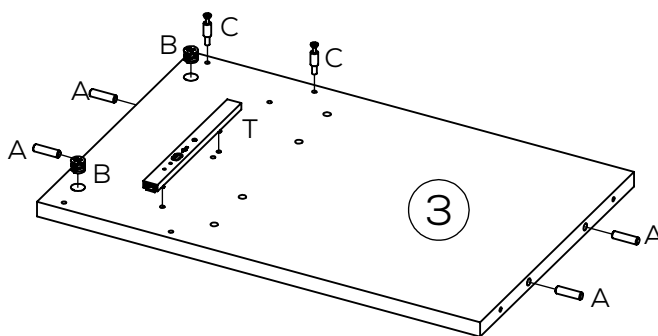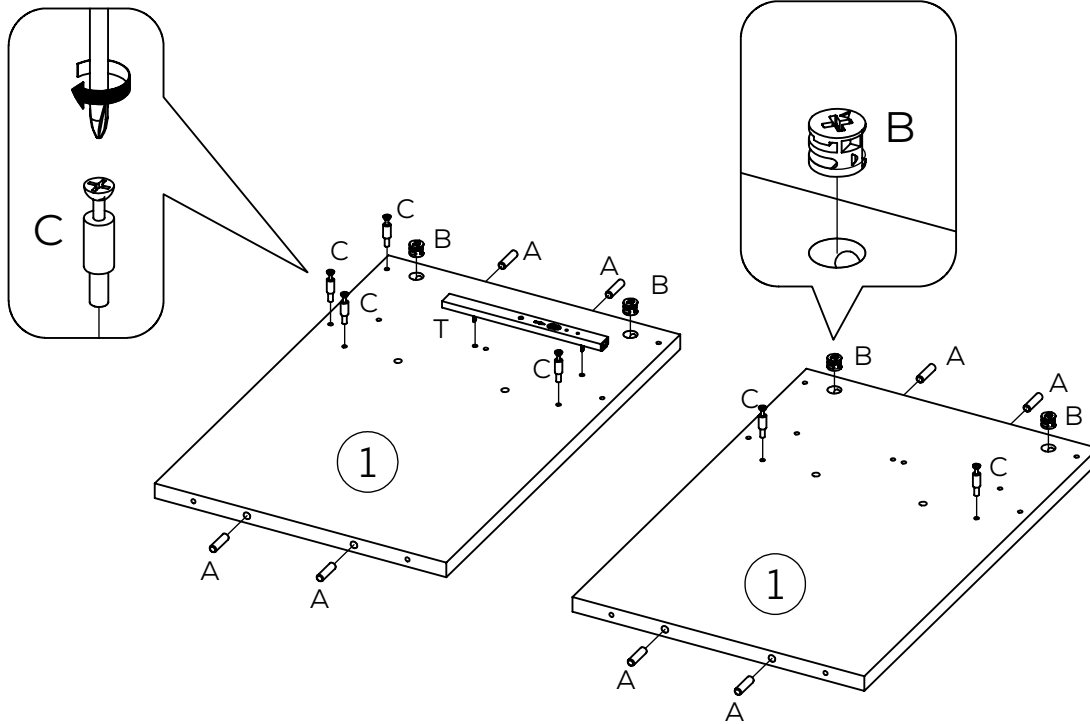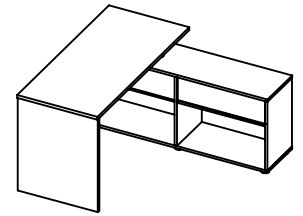

ACHTUNG !!!



Falsch




Richtig

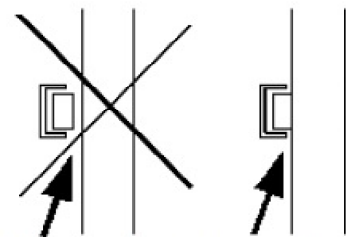


Schienen auf der Fläche aufliegend montieren.
Runners have to be flush mounted.
Montage affleuré pour les rails.

2x

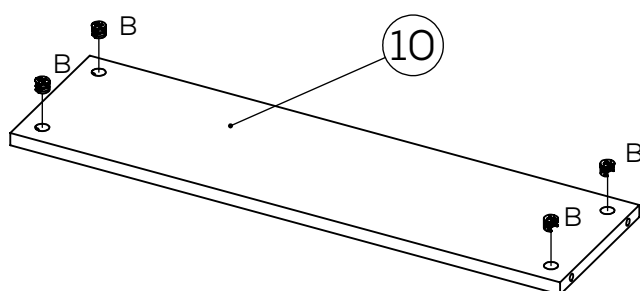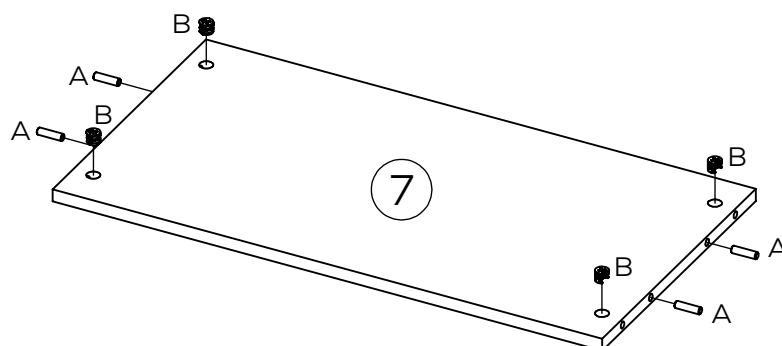


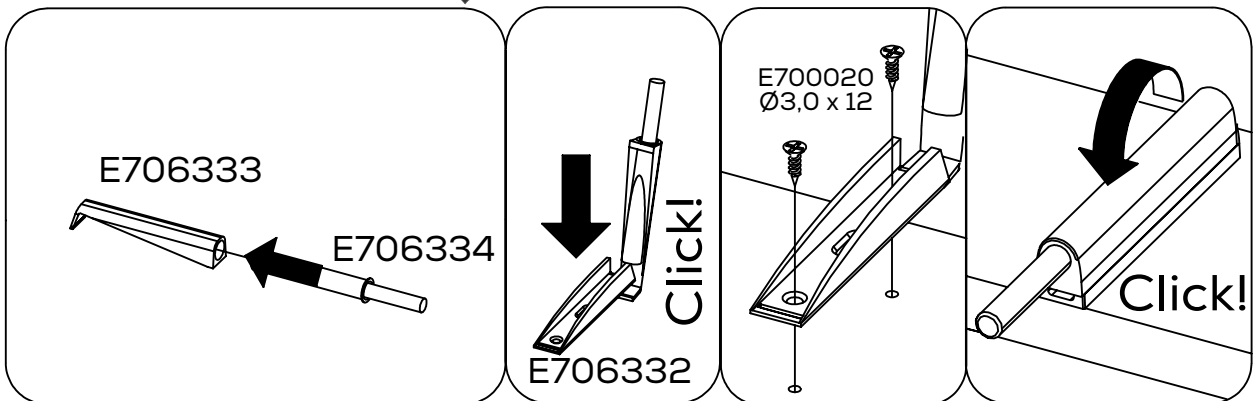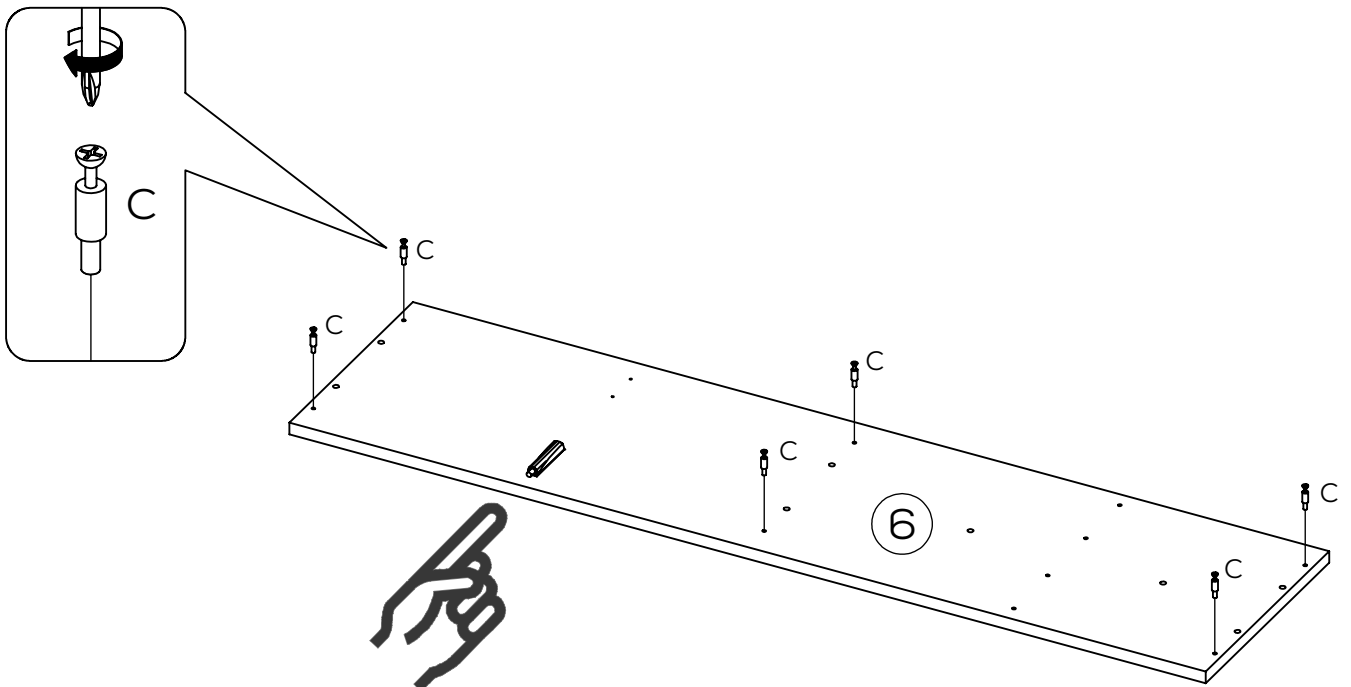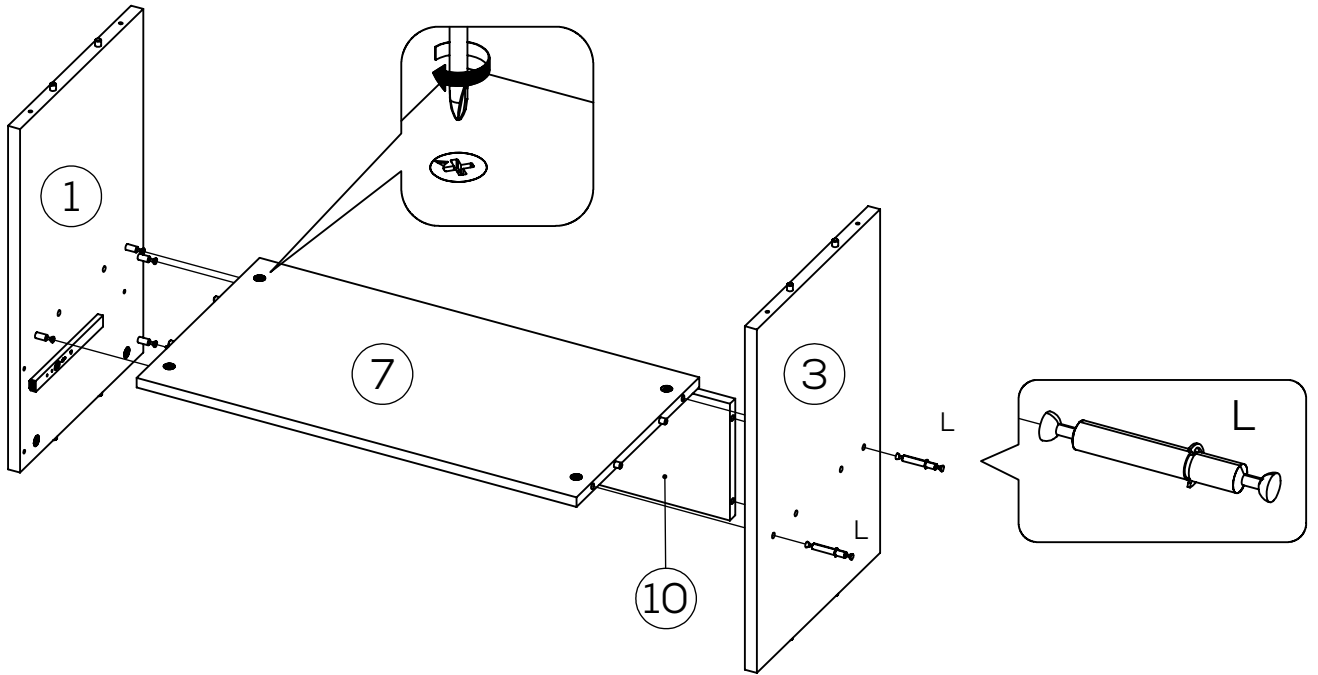


27

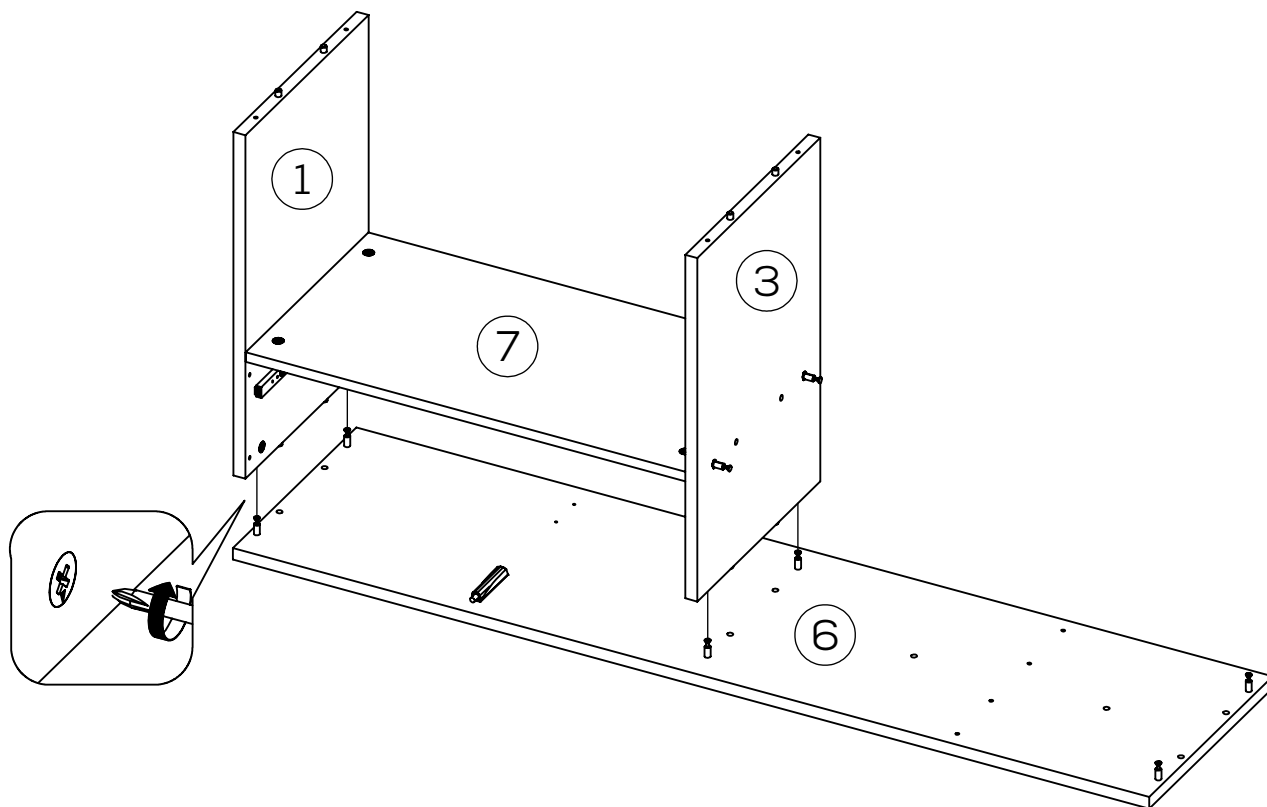


28

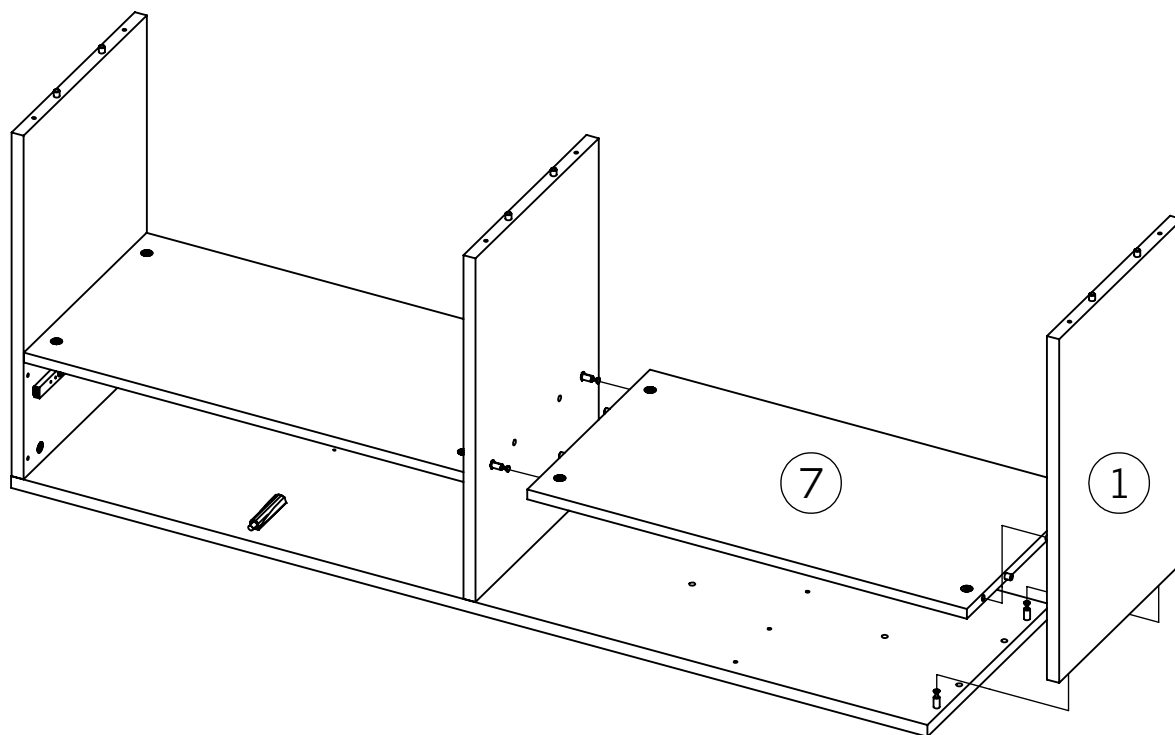


29

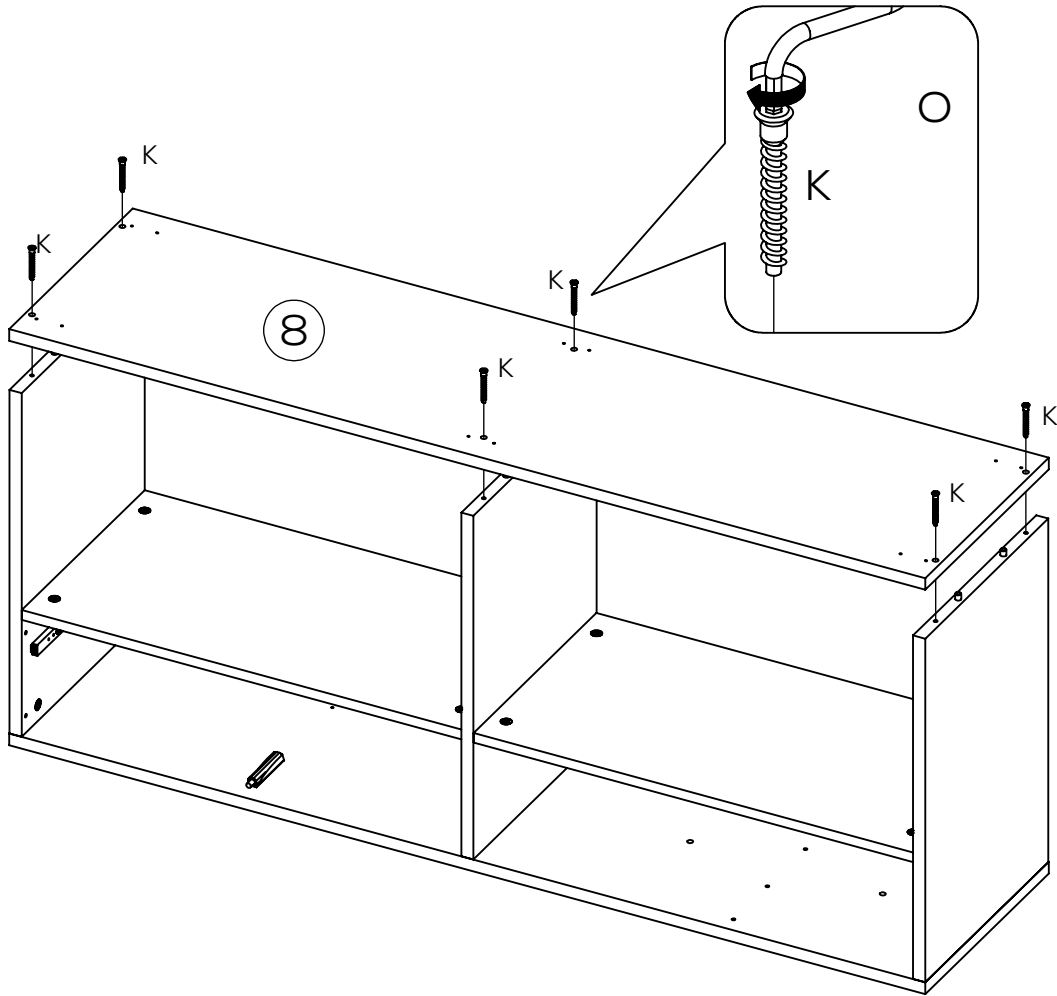


30

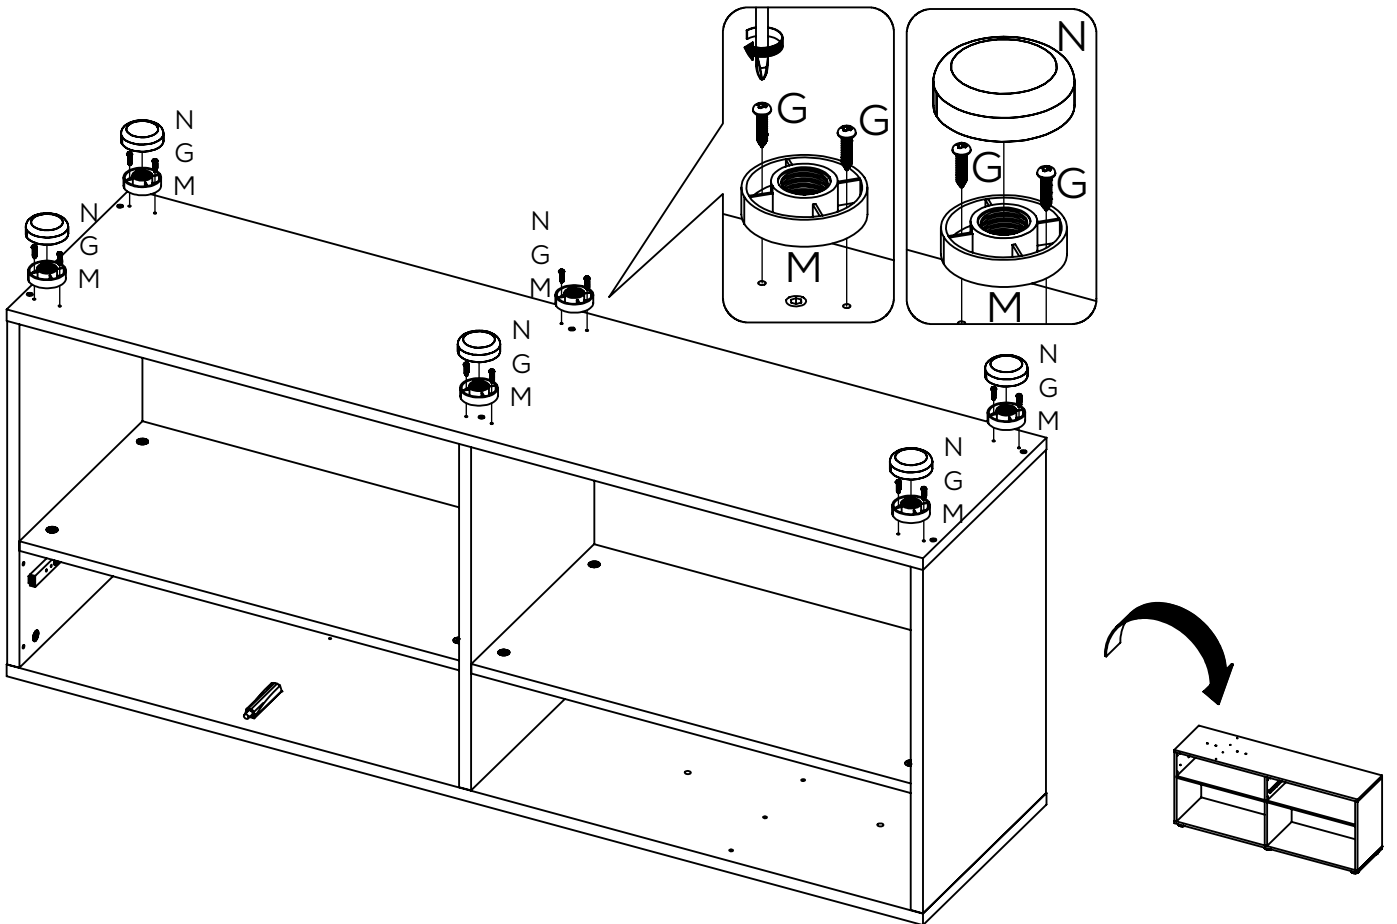


31

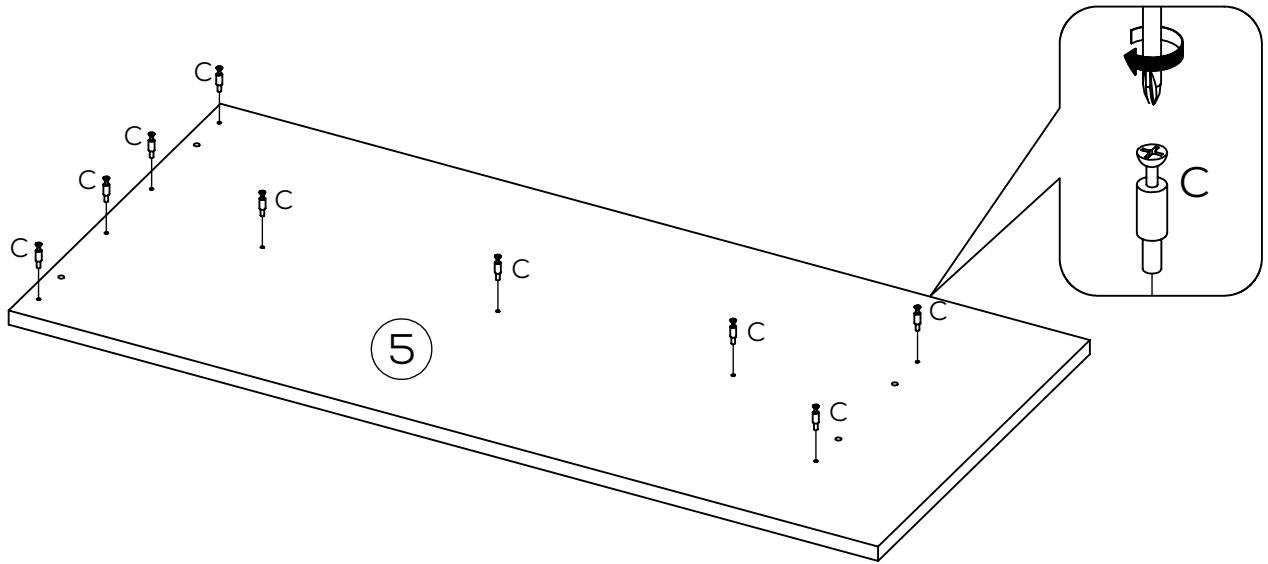


32

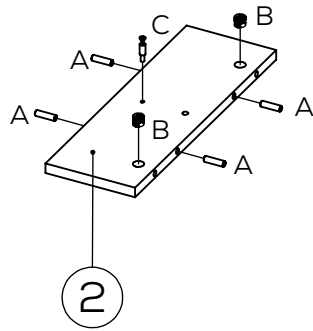


33

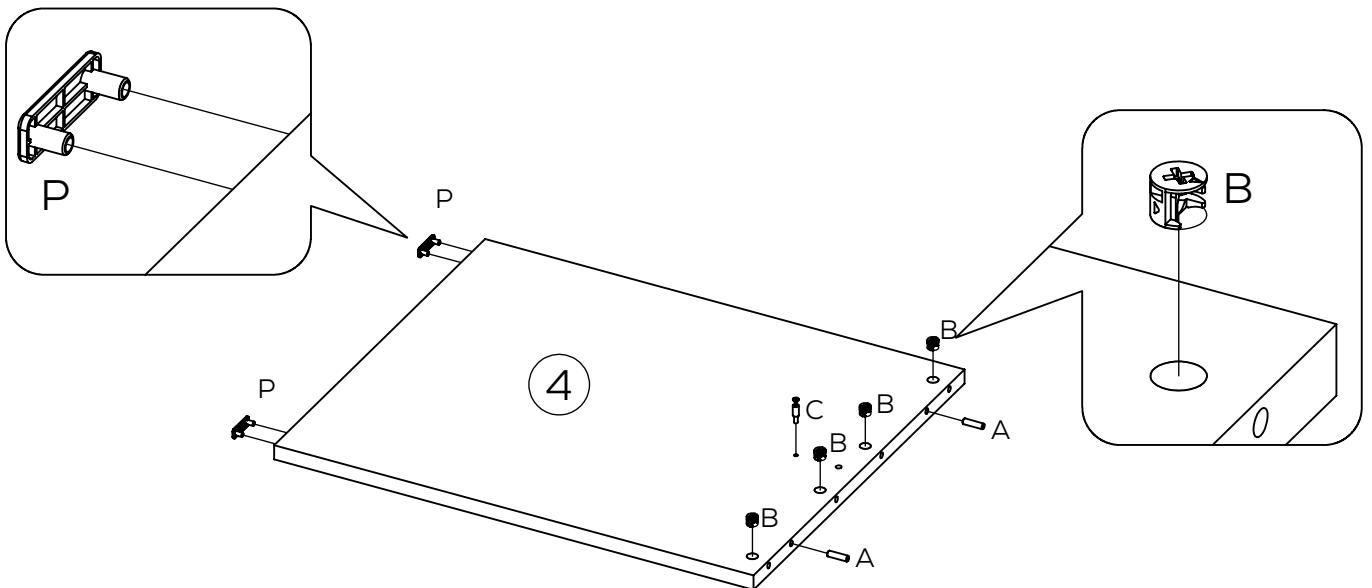


34

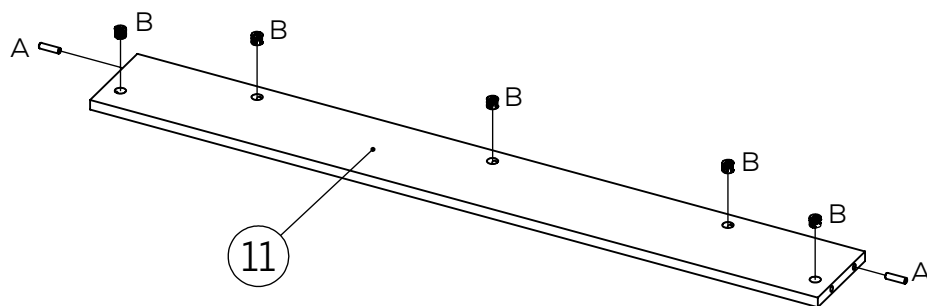

35

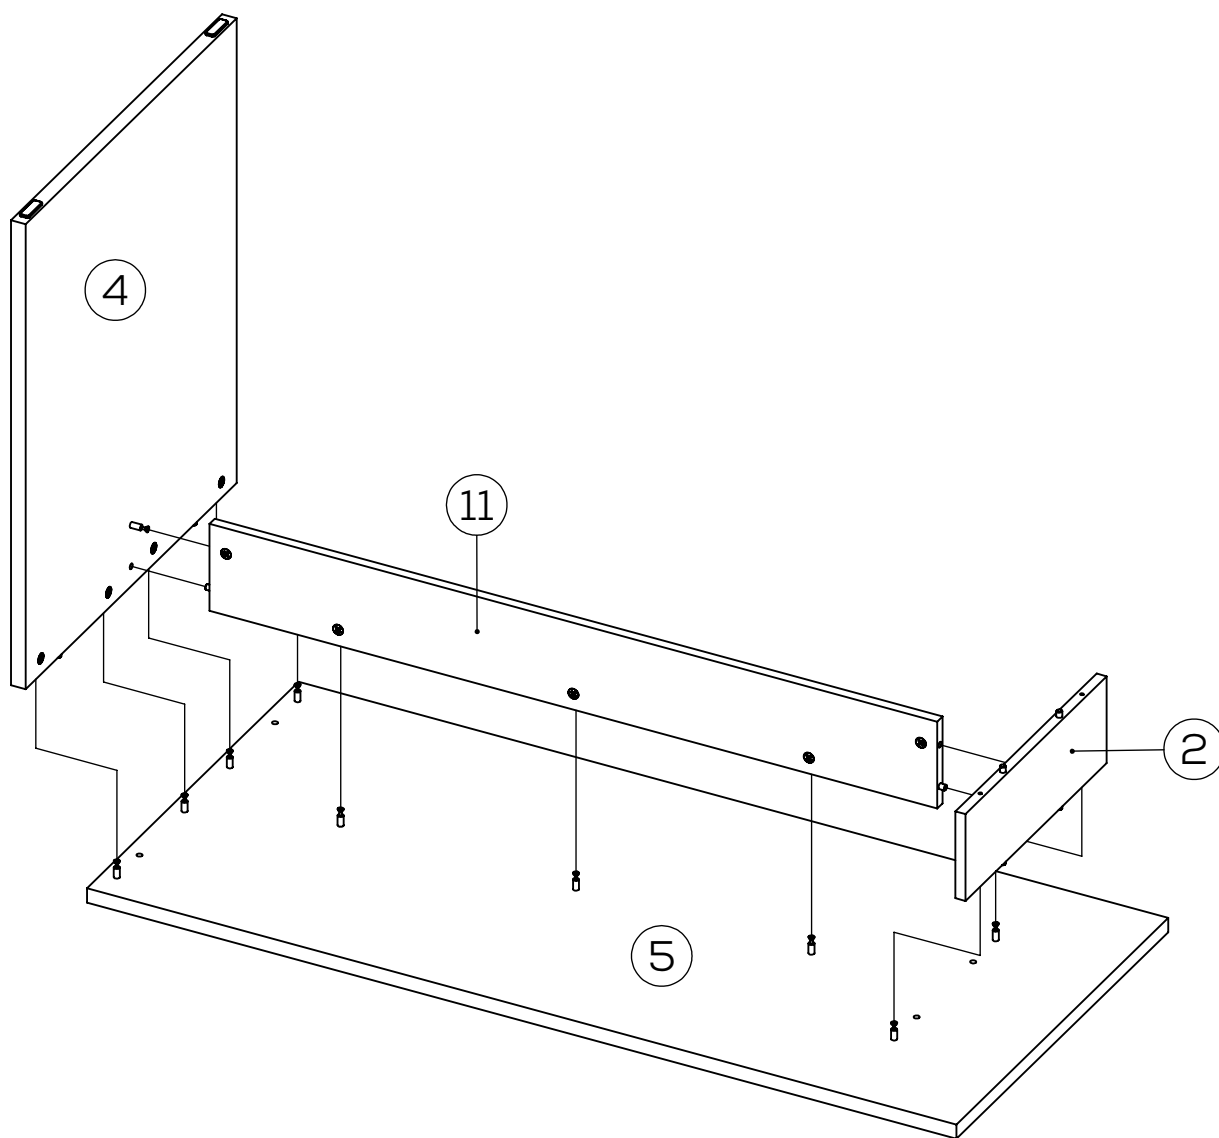

36

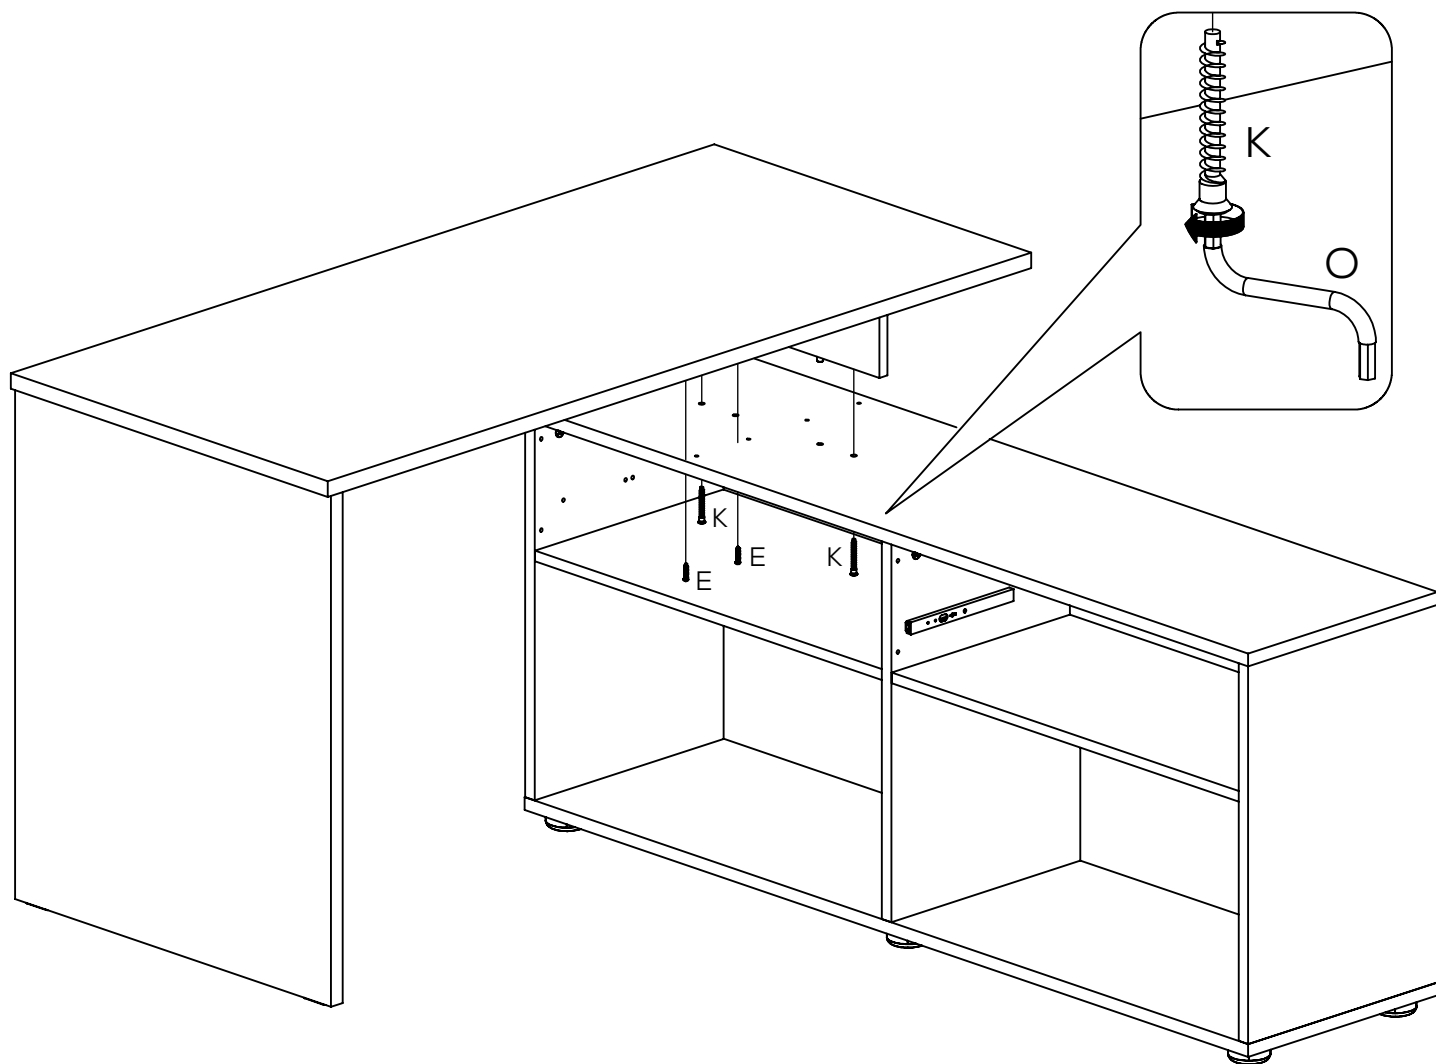

37

