


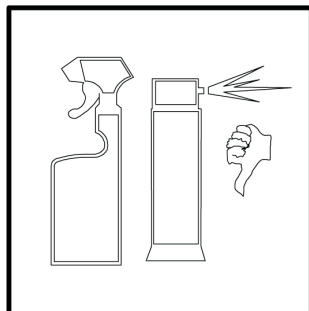
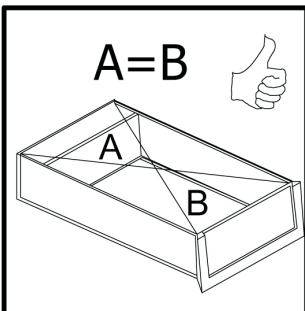
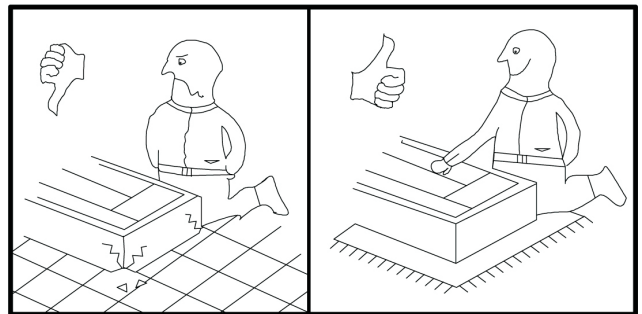
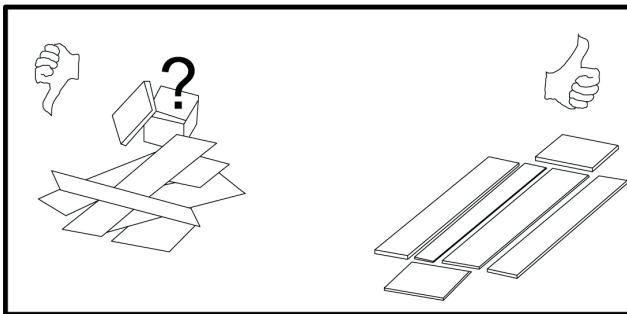
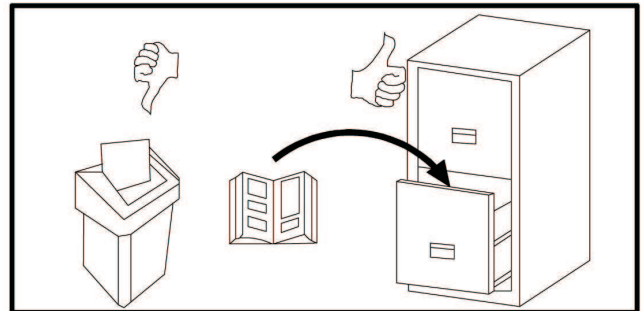


ROY 3










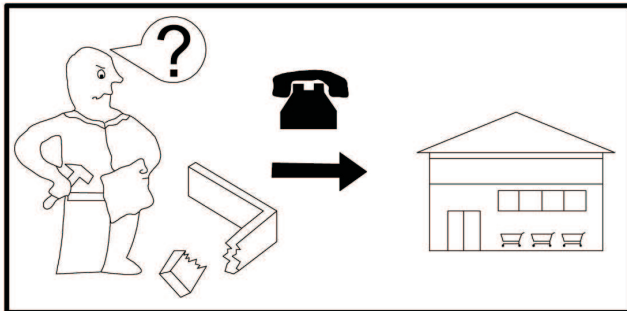

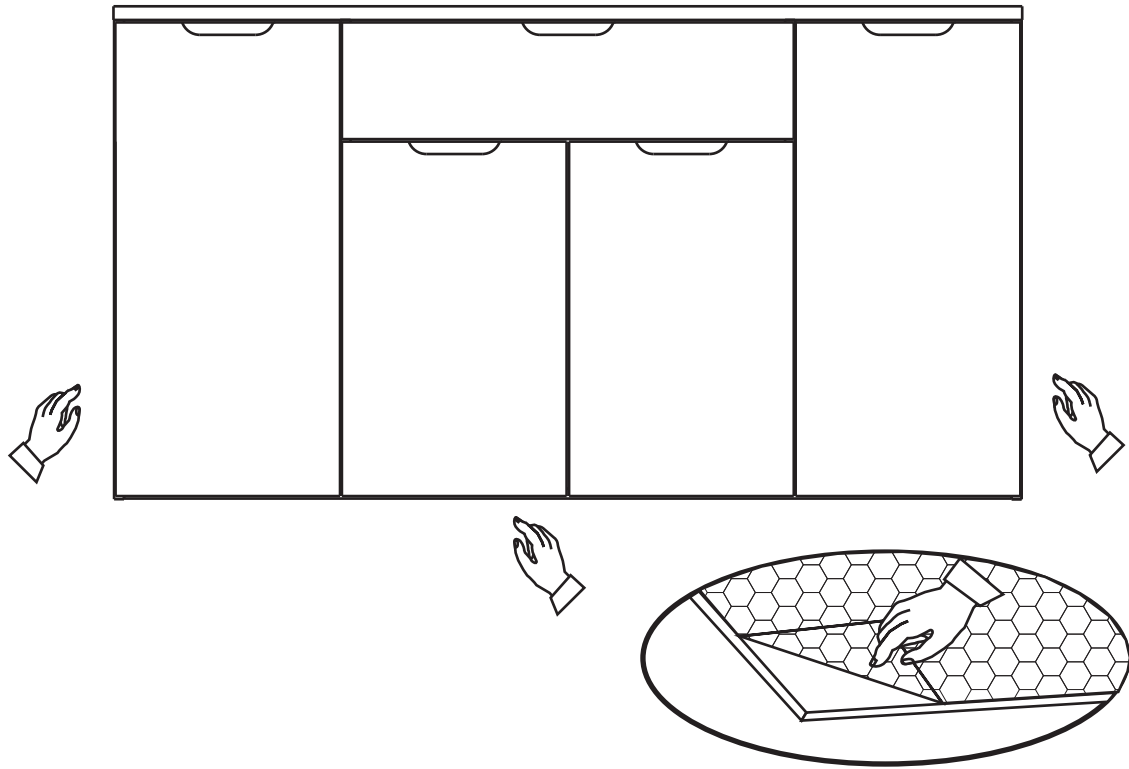







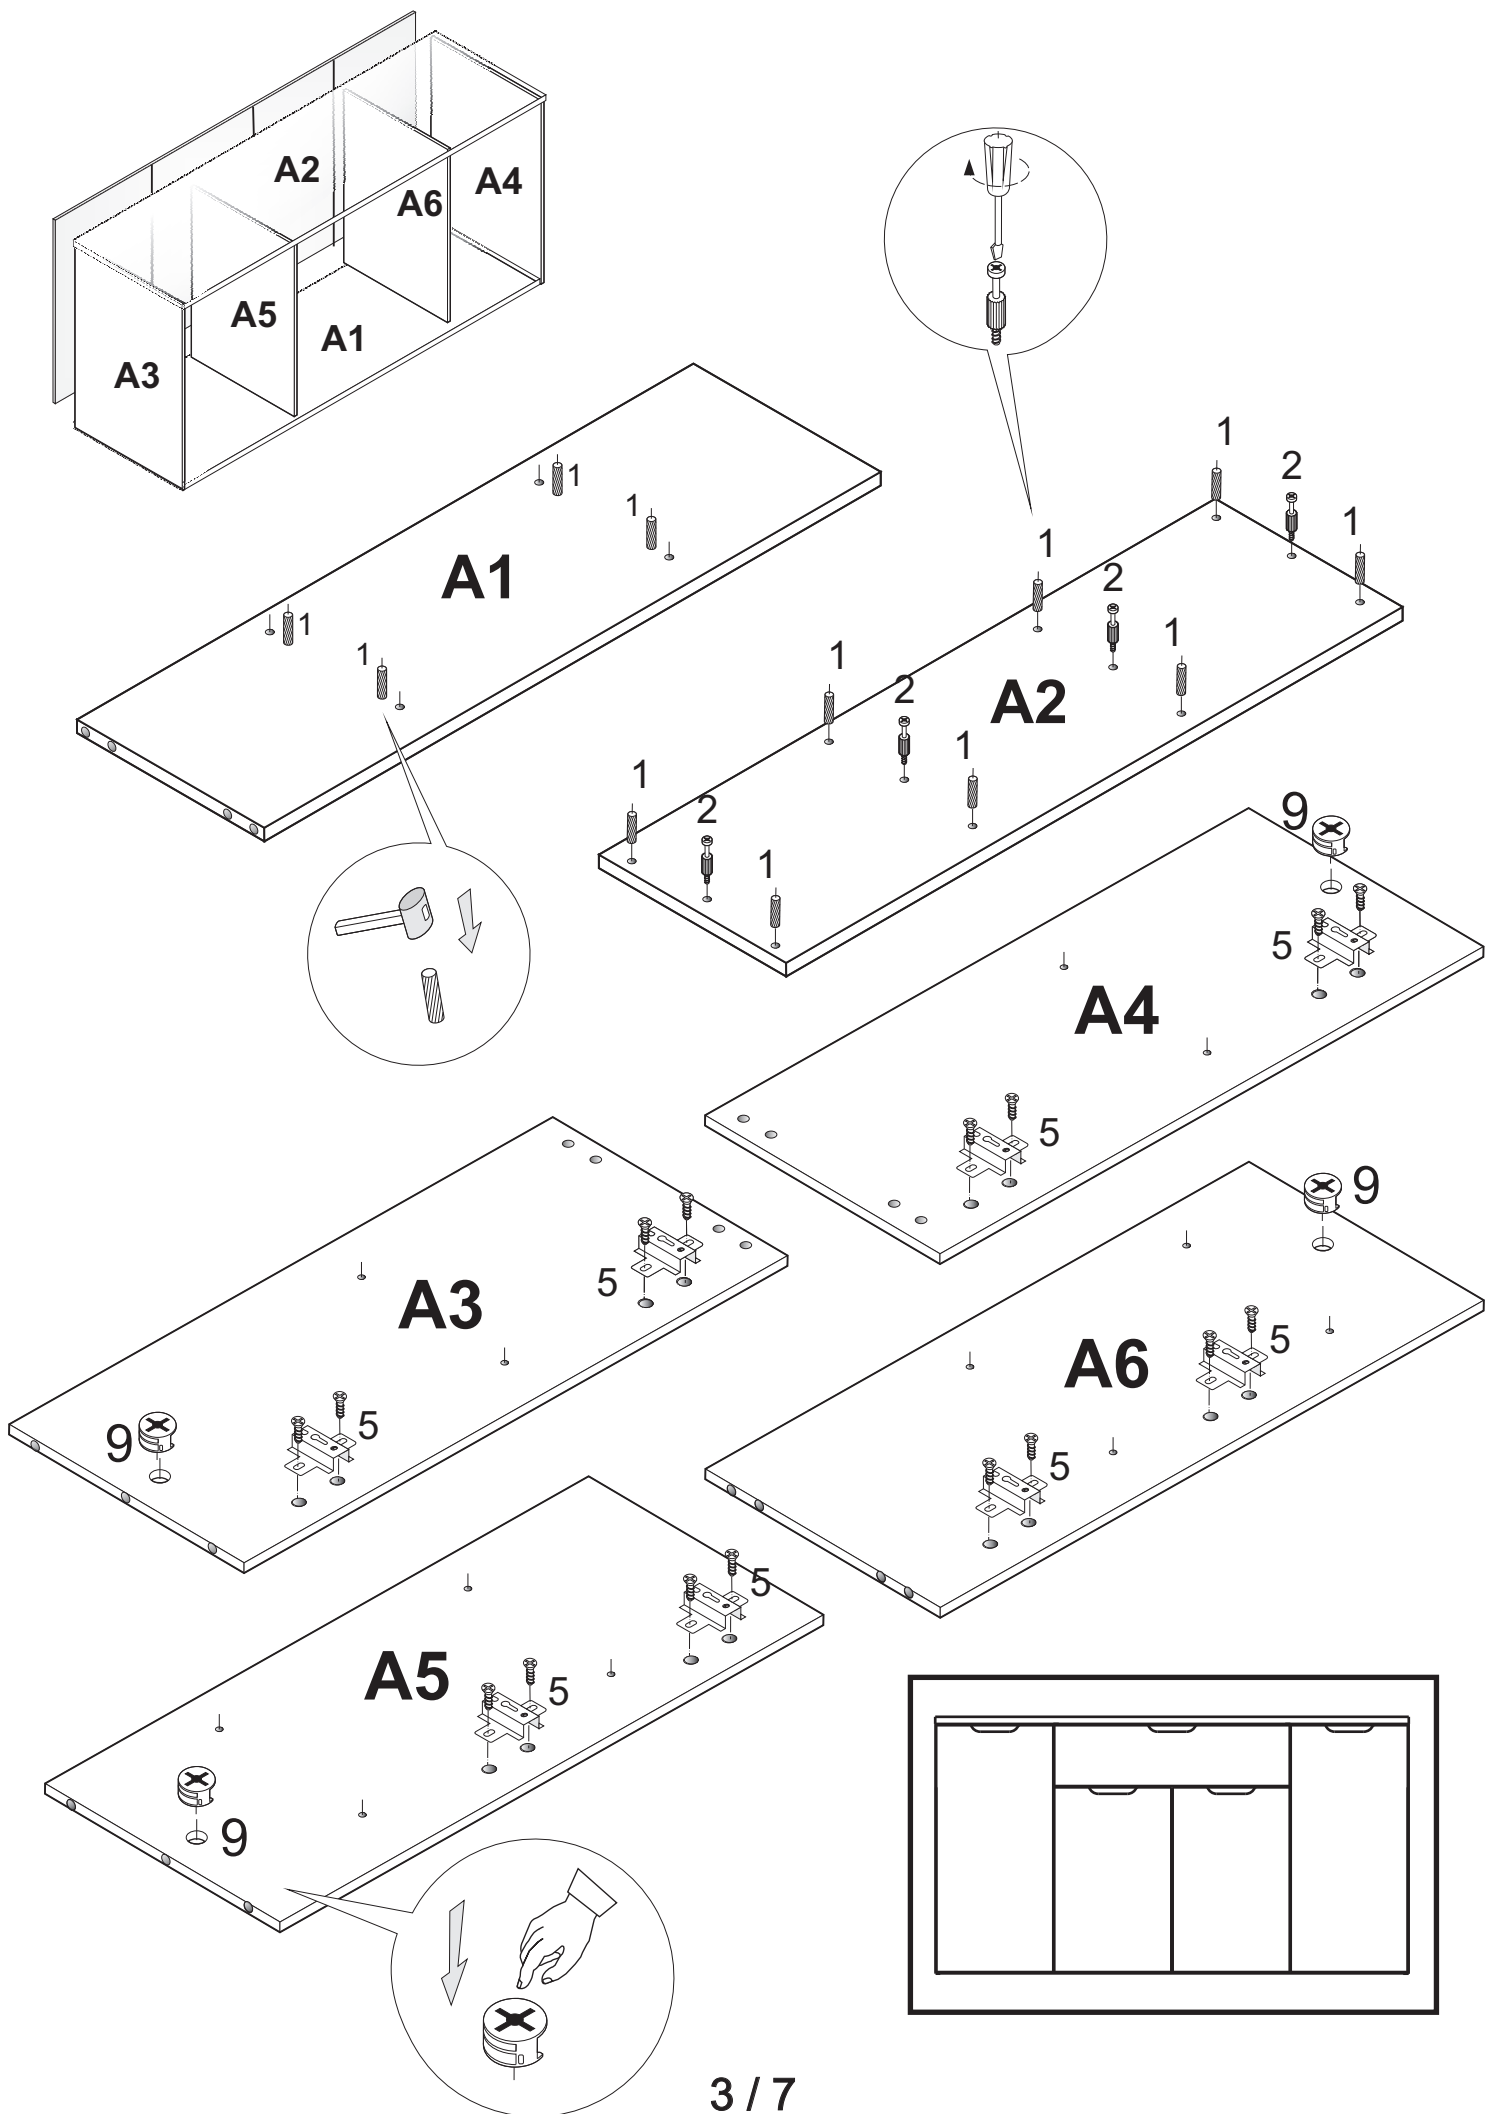
- (D)** Montageanleitung
- (NL)** Handleiding voor de montage
- (TR)** Montaj talimatı
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (GB)** Assembly instructions
- (PL)** Instrukcja montażu
- (RU)** Инструкция по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instrucțiuni de asamblare
- (SK)** Montážny návod






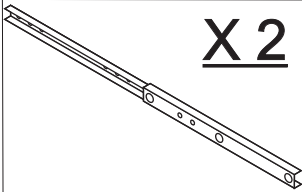


ACHTUNG!
 SCHUTZFOLIE AUF DIE FRONTEN. BITTE VORSICHTIG ABZIEHEN
 UND 14 TAGE DIE FRONTEN NICHT PUTZEN, DA DIE OBERFLACHE
 ABHARTEN MUSS. SONST WIRD DIE FRONT ZERKRATZT!

1	 8x35	<u>X 16</u>	12	 3x20	<u>X 60</u>	30	 GLUE LEIM	<u>X 1</u>
2	 5x11	<u>X 6</u>	35	 X 12	<u>X 12</u>	22	 7x50	<u>X 12</u>
5	 X 8	<u>X 8</u>	13	 X 12	<u>X 12</u>	25	 M 4 X 8	<u>X 2</u>
6	 5x11	<u>X 20</u>	39	 3x20	<u>X 12</u>	23	 X 2	<u>X 2</u>
9	 X 4	<u>X 4</u>	24	 X 2	<u>X 2</u>	60	 754 mm	<u>X 1</u>
10	 X 8	<u>X 8</u>	26	 X 1	<u>X 1</u>			



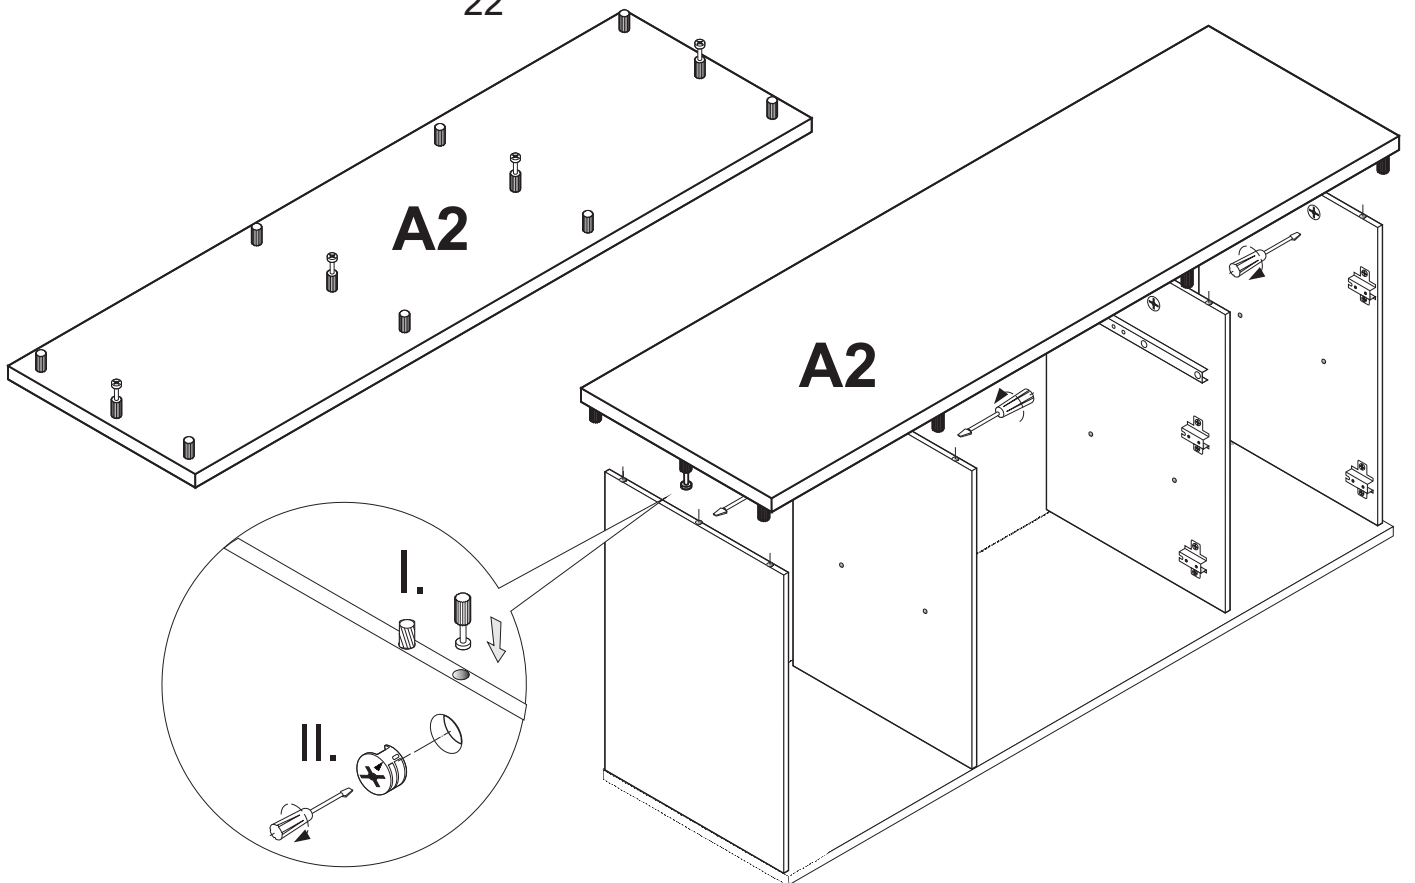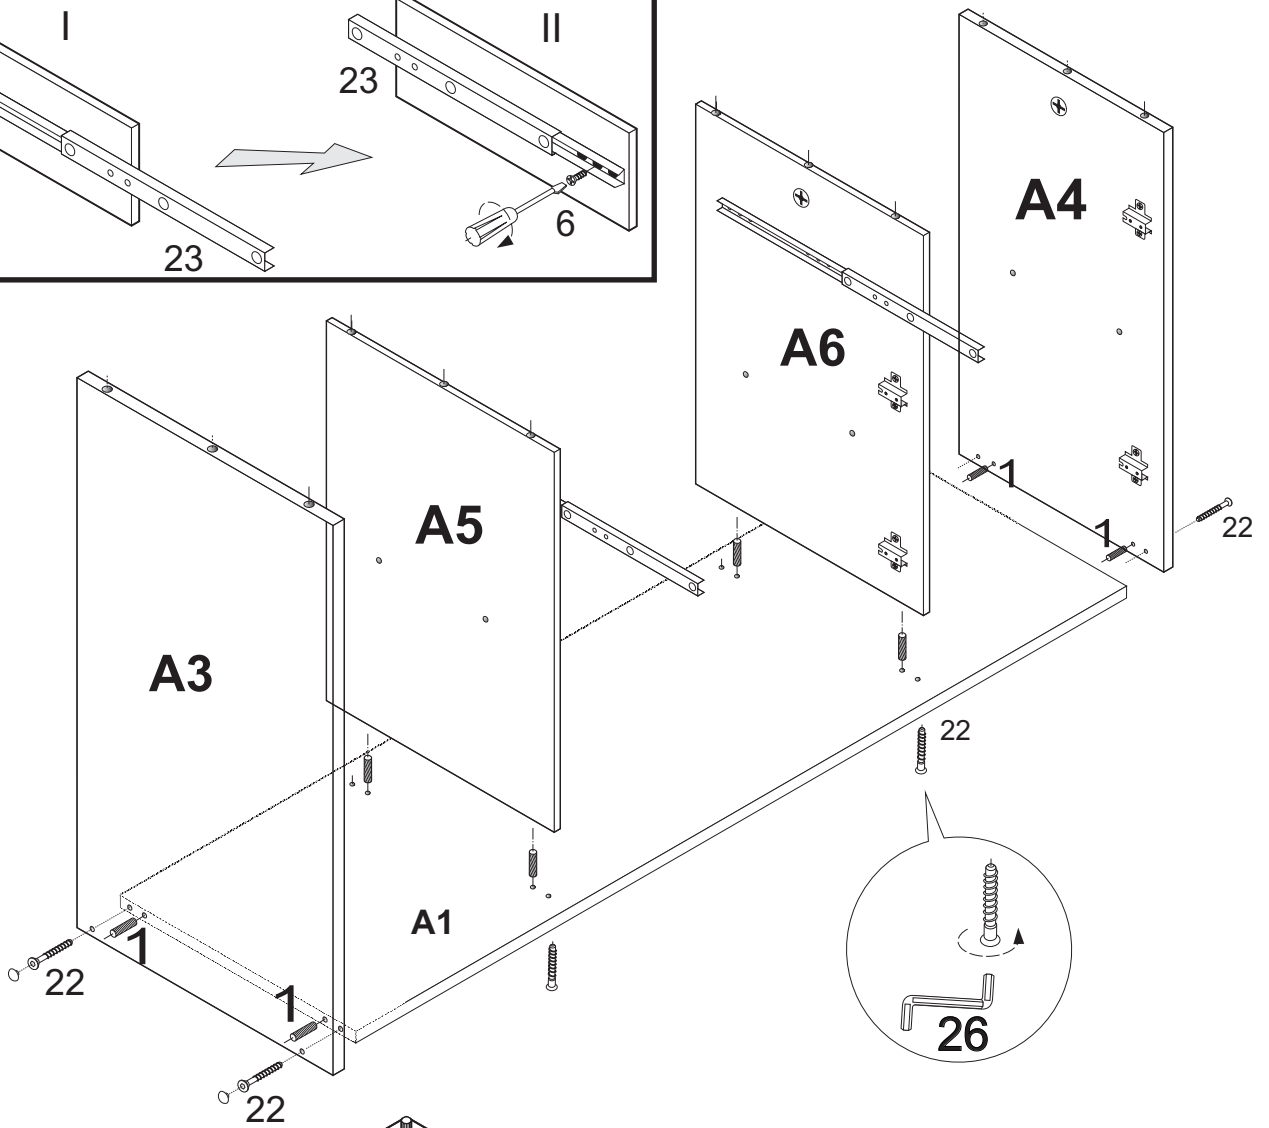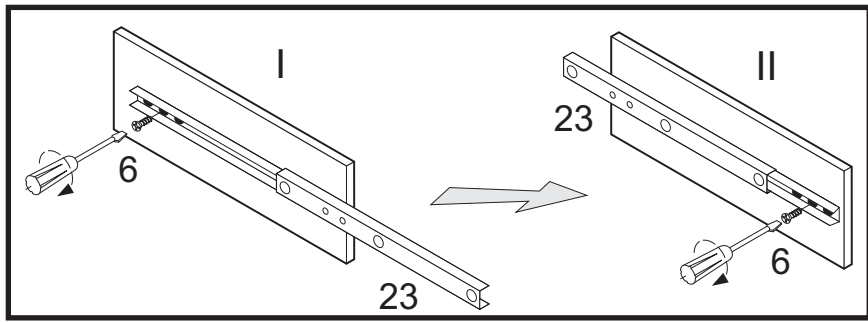

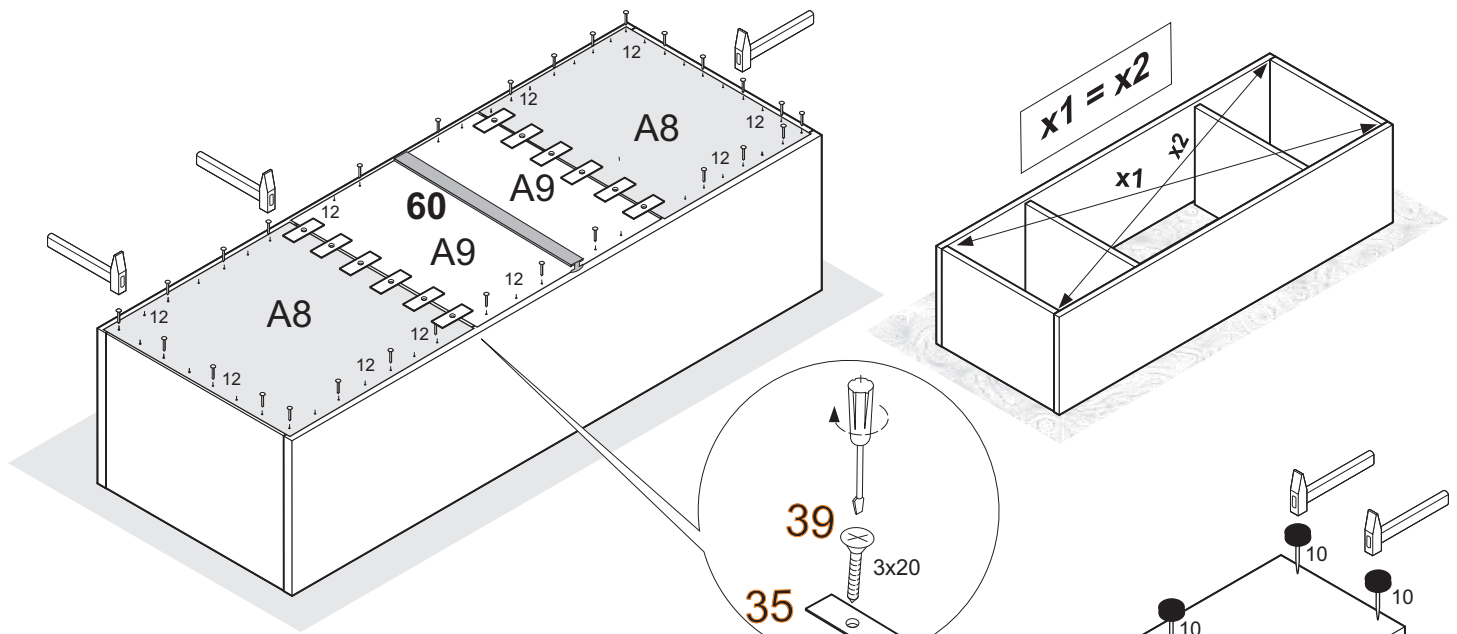

A8 790mmx371mm
A9 790mmx357mm

