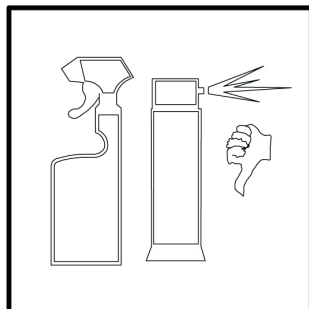
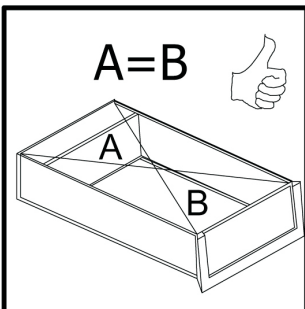
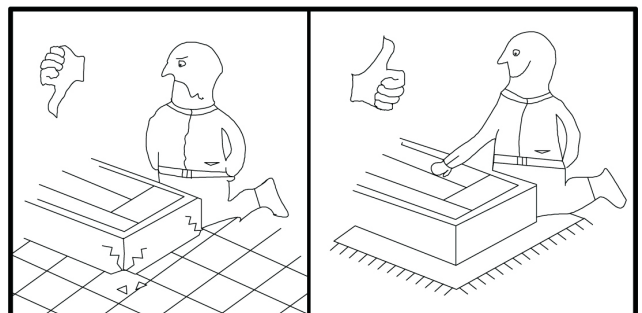
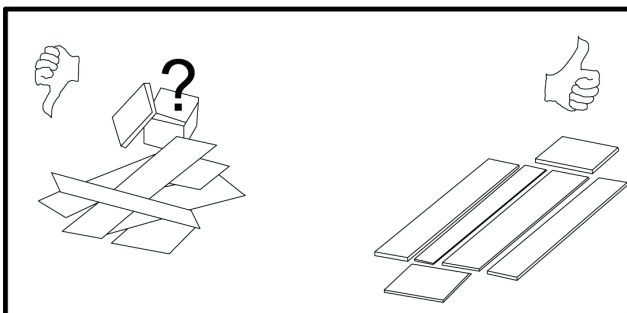
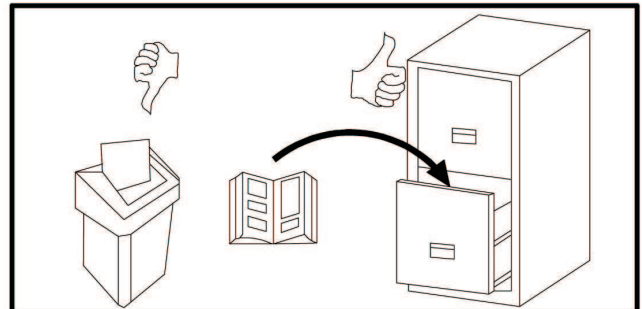
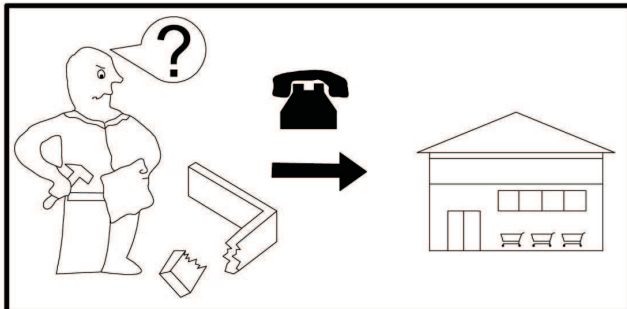
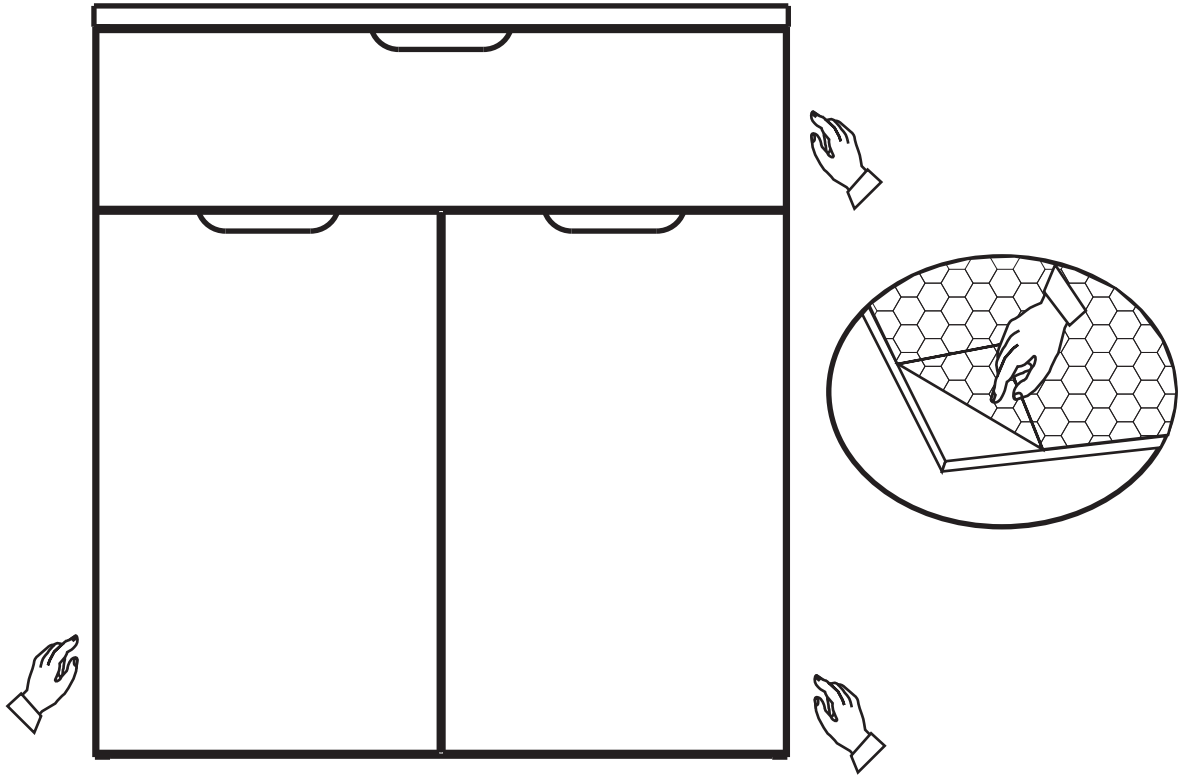



ROY 1










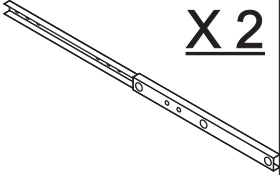







- (D)** Montageanleitung
- (NL)** Handleiding voor de montage
- (TR)** Montaj talimatı
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (GB)** Assembly instructions
- (PL)** Instrukcja montażu
- (RU)** Инструкция по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instructiuni de asamblare
- (SK)** Montážny návod





ACHTUNG!
 SCHUTZFOLIE AUF DIE FRONTEN. BITTE VORSICHTIG ABZIEHEN
 UND 14 TAGE DIE FRONTEN NICHT PUTZEN, DA DIE OBERFLÄCHE
 ABHARTEN MUSS. SONST WIRD DIE FRONT ZERKRATZT!

1	 <u>X 8</u> 8mm x 35mm			30	 <u>X 1</u> GLUE LEIM
2	 <u>X 4</u>	13	 <u>X 4</u>	22	 <u>X 8</u> 7mm x 50mm
5	 <u>X 4</u>			25	 <u>X 2</u> M 4 X 8
6	 <u>X 12</u> 5mm x 11mm	12	 <u>X 45</u>	23	 <u>X 2</u>
9	 <u>X 2</u>	24	 <u>X 2</u>	60	 <u>X 1</u> 754 mm
10	 <u>X 4</u>	26	 <u>X 1</u>		

