

Montageanleitung

Assembly instruction

Instructions de montage

Instrucciones de montaje

Instruzioni per il montaggio

Руководство по монтажу

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talmatlari

Navodilo za montažo

Montagehandleiding

A sen nus o hje

Upute o montaži

Instrucțiuni de montaj

Monteringsveiledning

إرشادات التركيب

Monteringsvejledning

Instruções de montagem

Monteringsanvisning

Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Крепления / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Oblø-ge / armaturi, balamale / Beslag / بعض التركيبات / Beslag / Guarnições / Beslag



5,0x35

12 x VB4



4 x VB14



1 x VB10



2 x
Tb24

4 x
TB20



3,5x15

52 x SP1



8,0x40

1 x VB9



2 x
TB25

16 x SO28



6,3x13

2 x ZB1




12 x

ZB 4



3,0x12

8 x SP7



2,7x20

10 x SR2




5,0x20

4 x VB19



3,5x20

4 x SP3



5,8x10,5

16 x SO1




12 x SG5



6 x GR42




18 x
WI11



4 x
SKU1

AK10




4 x
AK10



4 x
WI5



8 x GL7




7,0x50

8 x VB3




1 x W2




4,0x35

8 x SP11



8 x Ak6



16 x BT1

Sie benötigen:

You need:

Vous avez besoin de:

Necesita:

Le servono :

Бам потребуются:

Potrebujete:

Tarvitset:

Avejí nevoie de :

Du behöver:

سوف تحتاج إلى:

и

Potrzebne są:

Potřebujete:

Potrebuješte:

Szükséges eszközök:

Ha Bac ca Ви нужни:

Ihtiyacınız:

U hebt nodig:

Trebate:

Du skal bruge:

Necessita de:

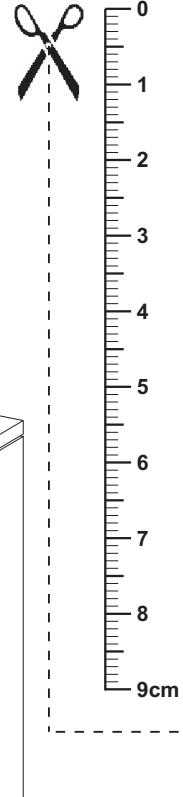
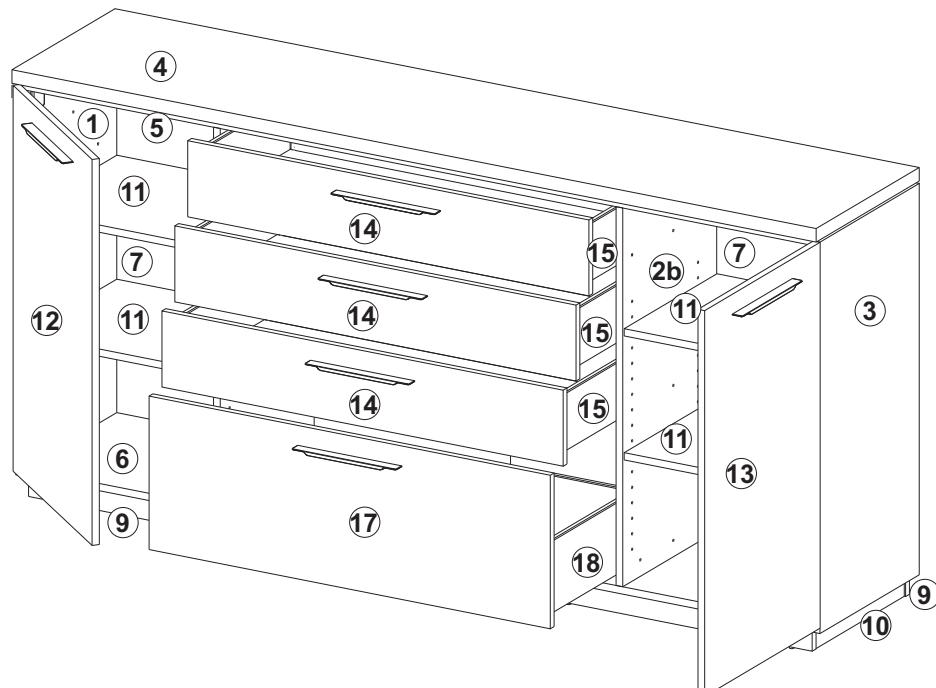
Du behöver:

и

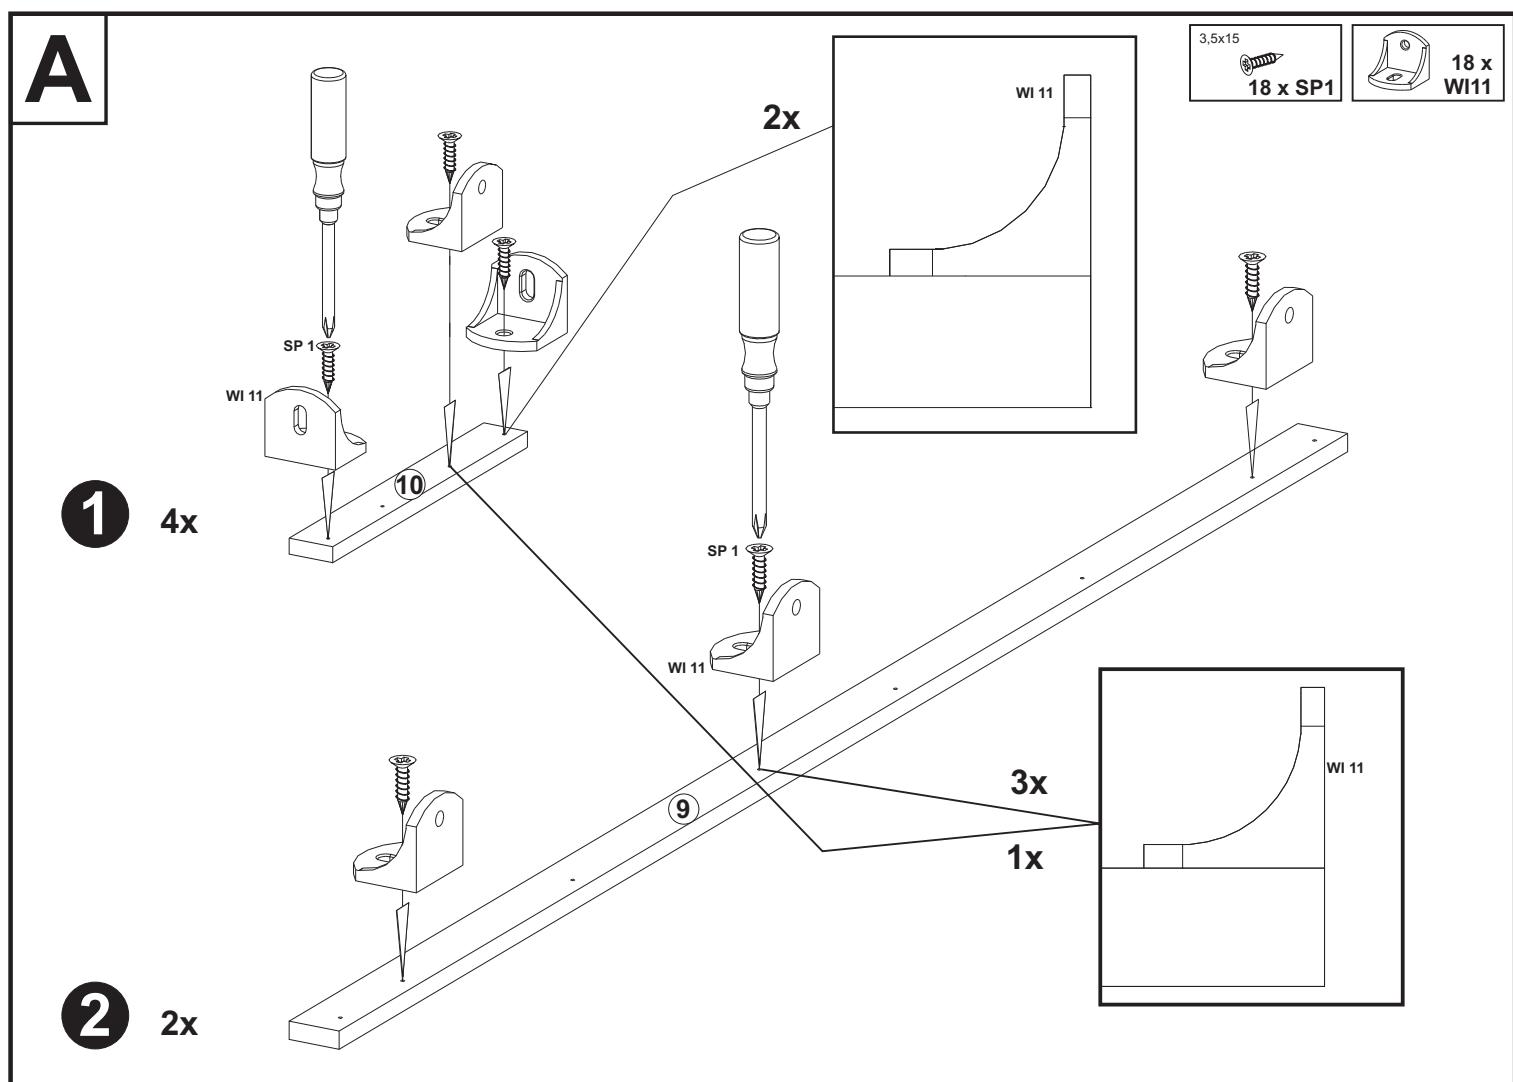
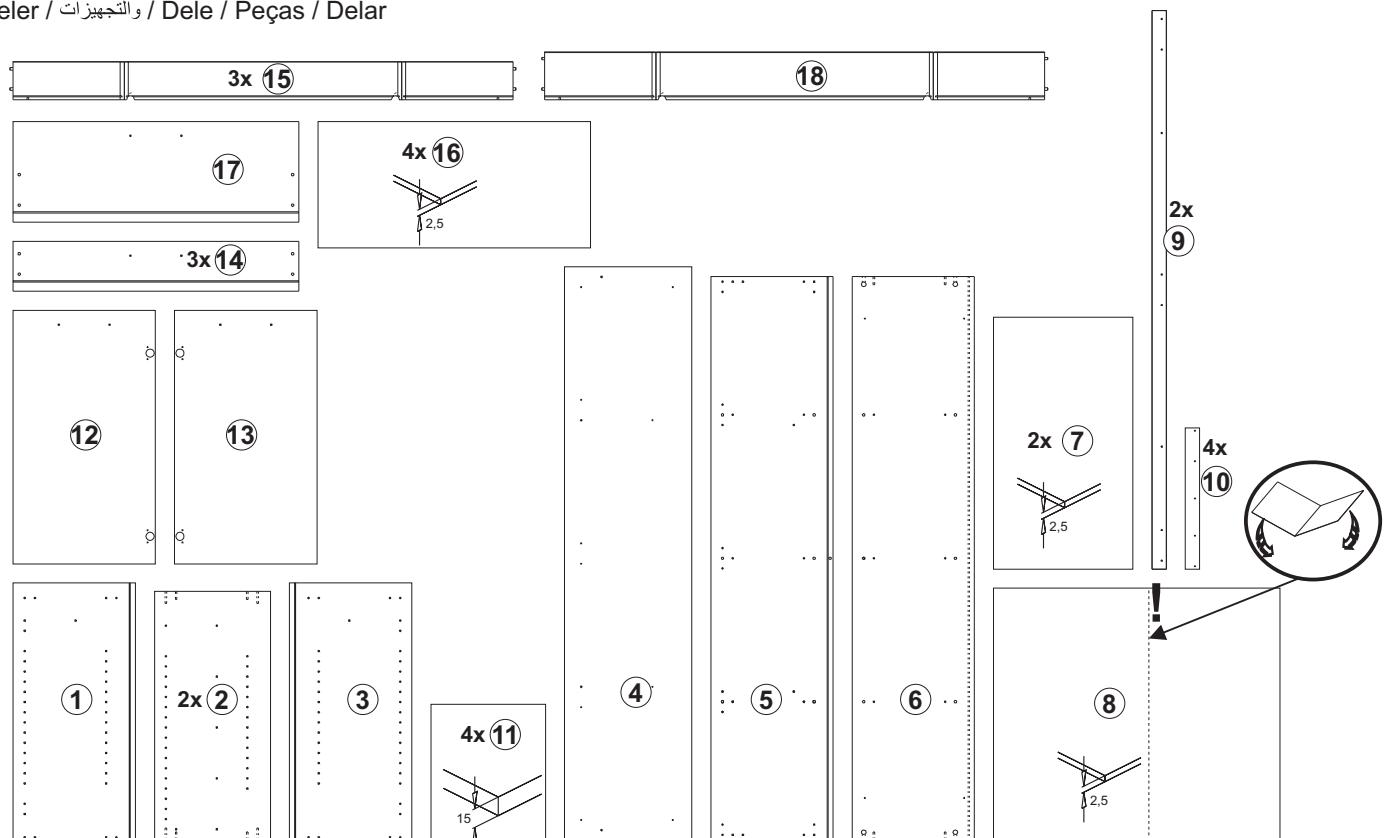




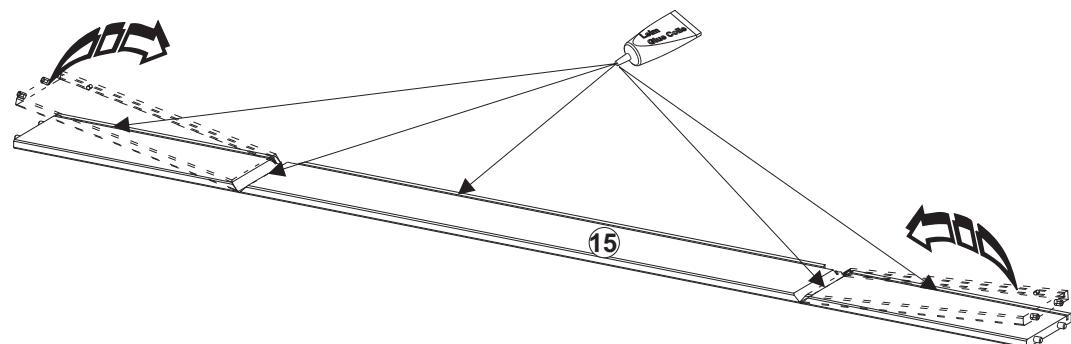
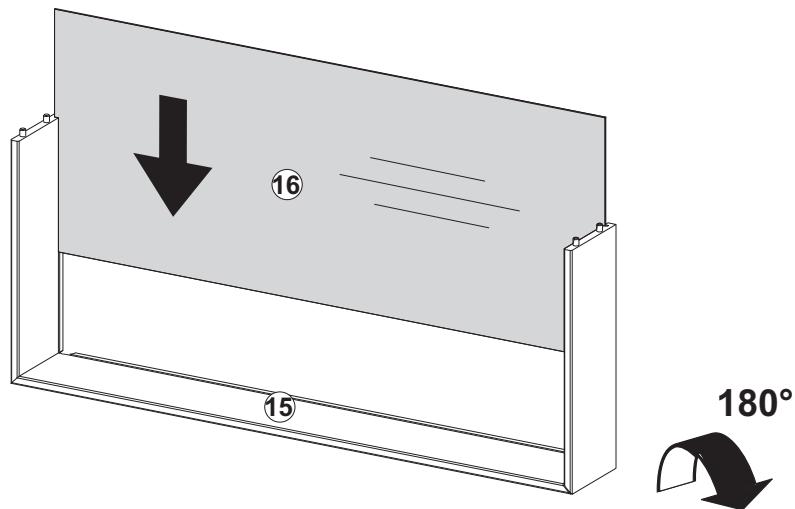
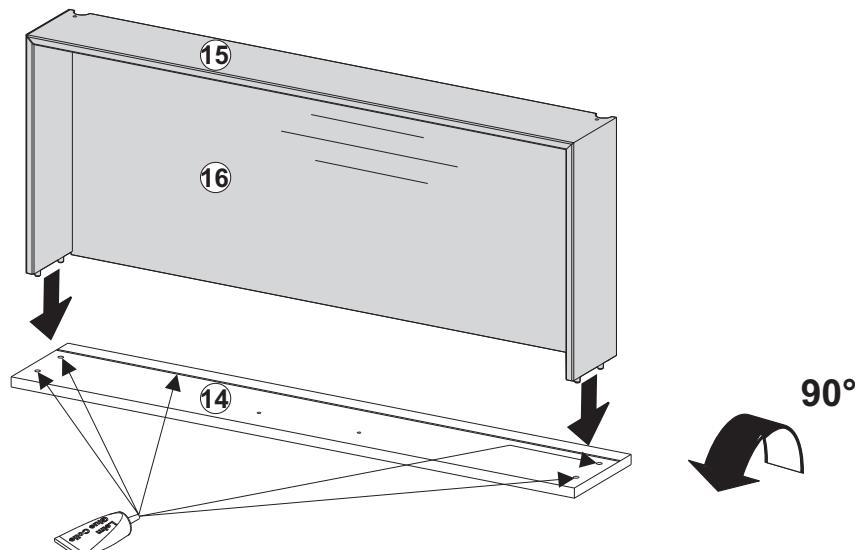
VIBORG 3

Art.-Nr. 4003-003



Teile / article / Pièces / Piezas / Pezzi / части / Części / Díly / Diely / Alkatrészek / Детали / parçalar / dele / Onderdelen / osat / Dijelovi
piese / Deler / والتجهيزات / Dele / Peças / Delar

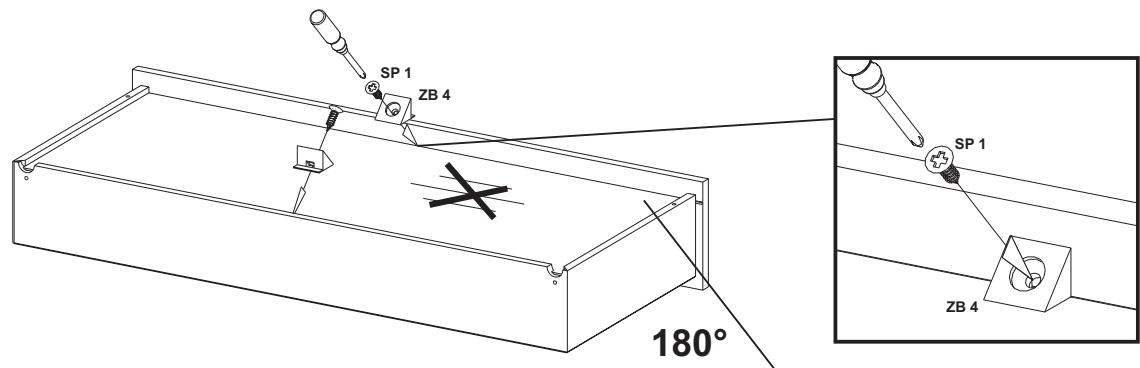
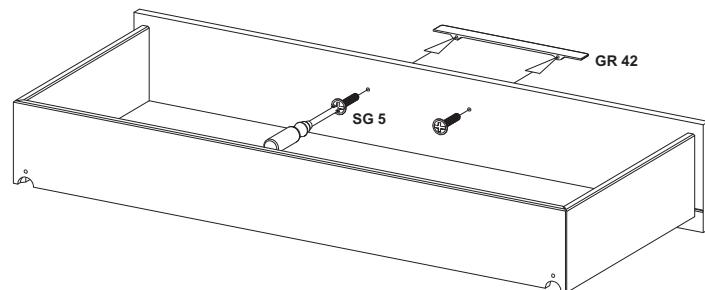
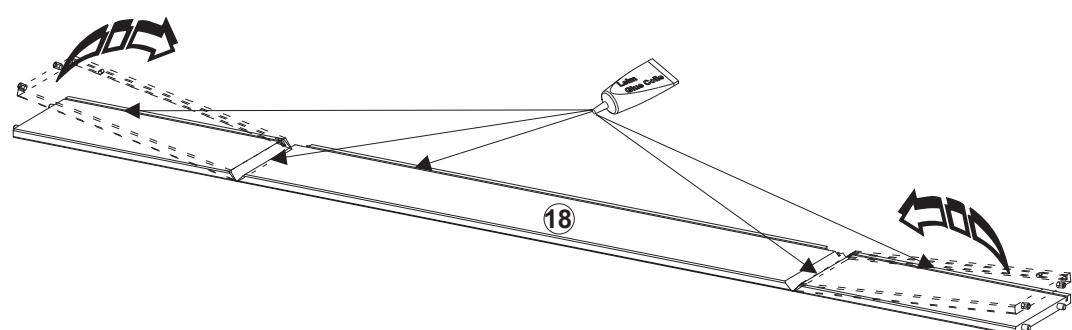
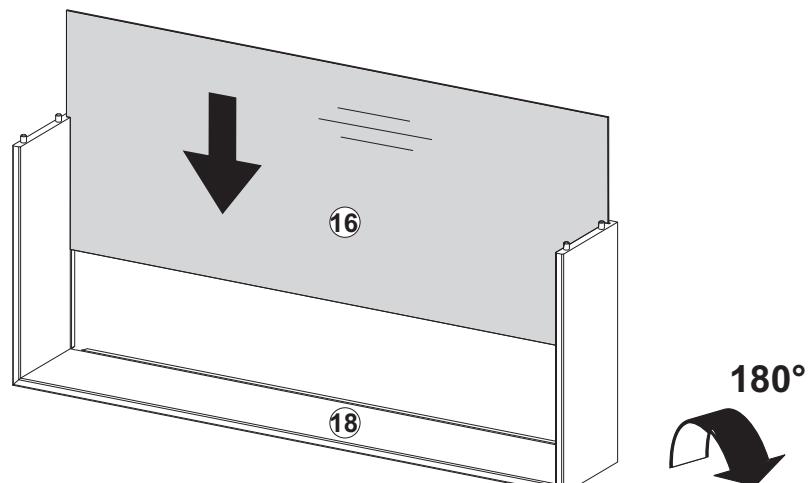


B**1****2** 3x**3** 3x**4** 3x

C3,5x15
6 x SP16 x
ZB 4M4x20
6 x SG5

3 x GR42

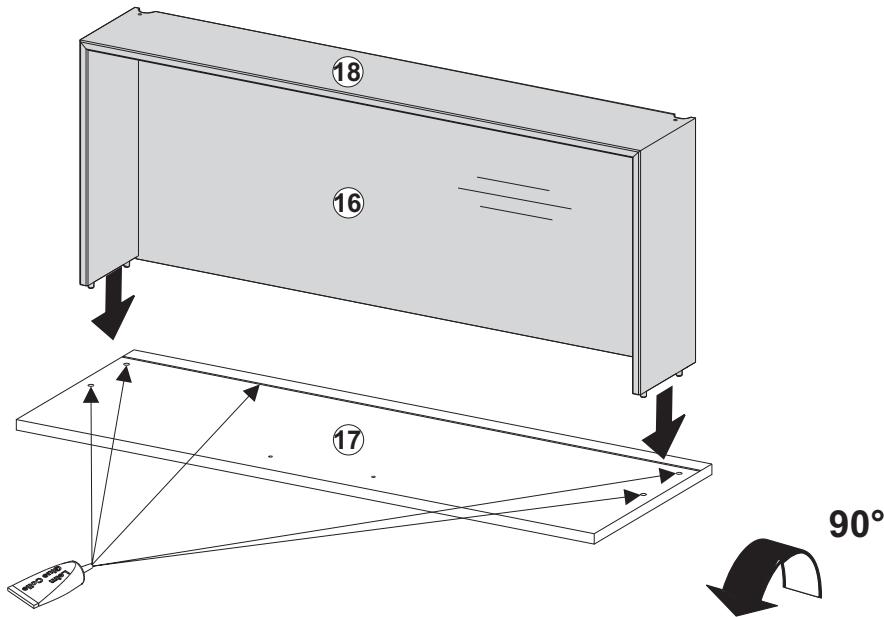
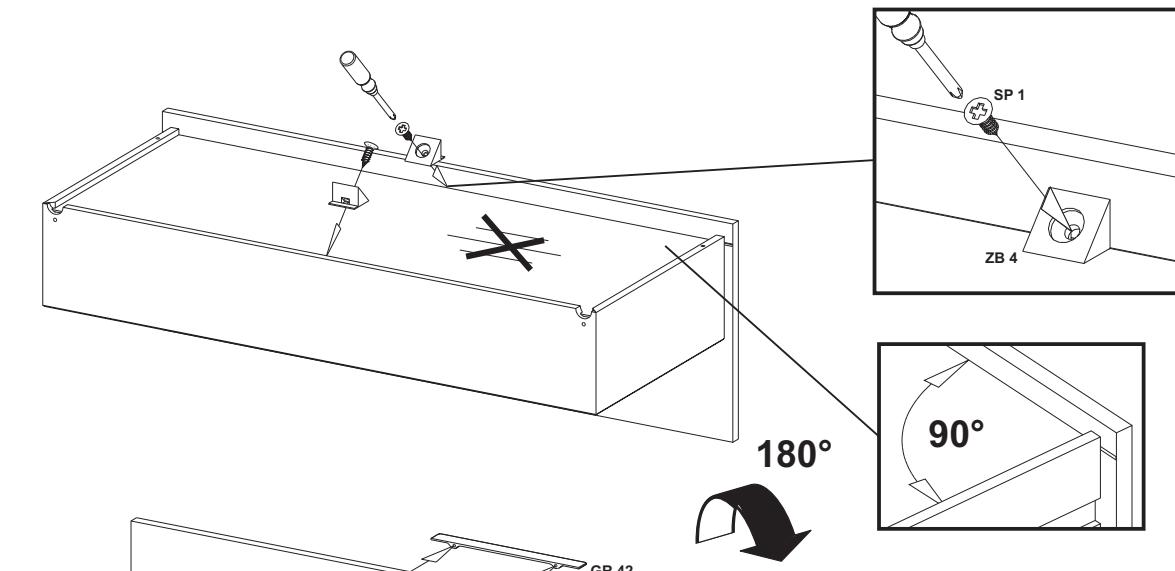
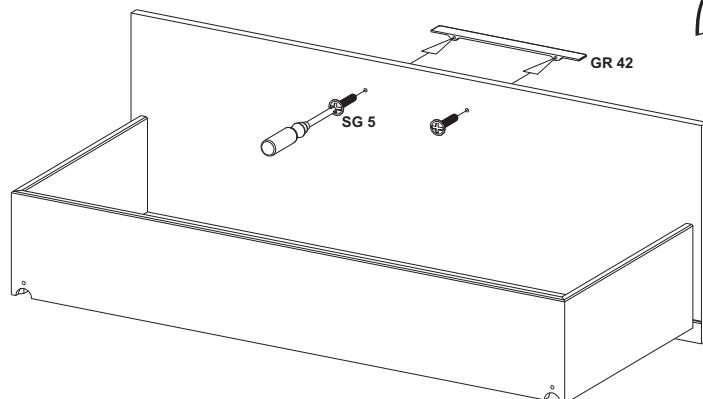
ZB1

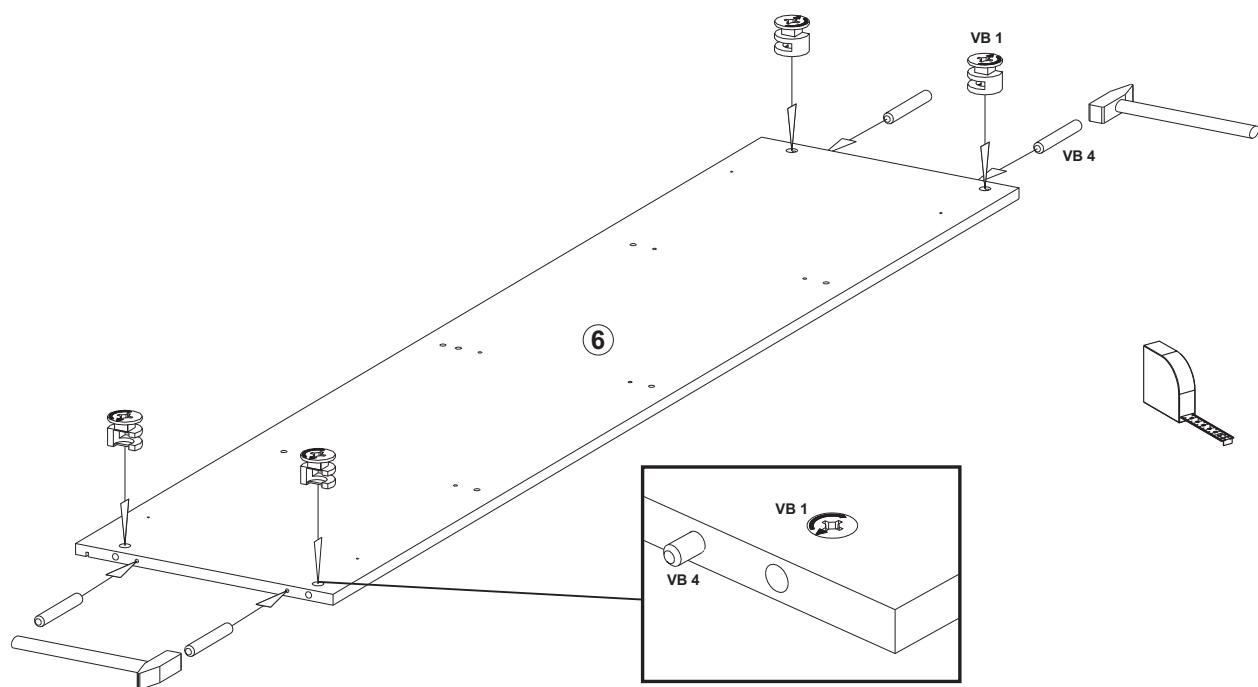
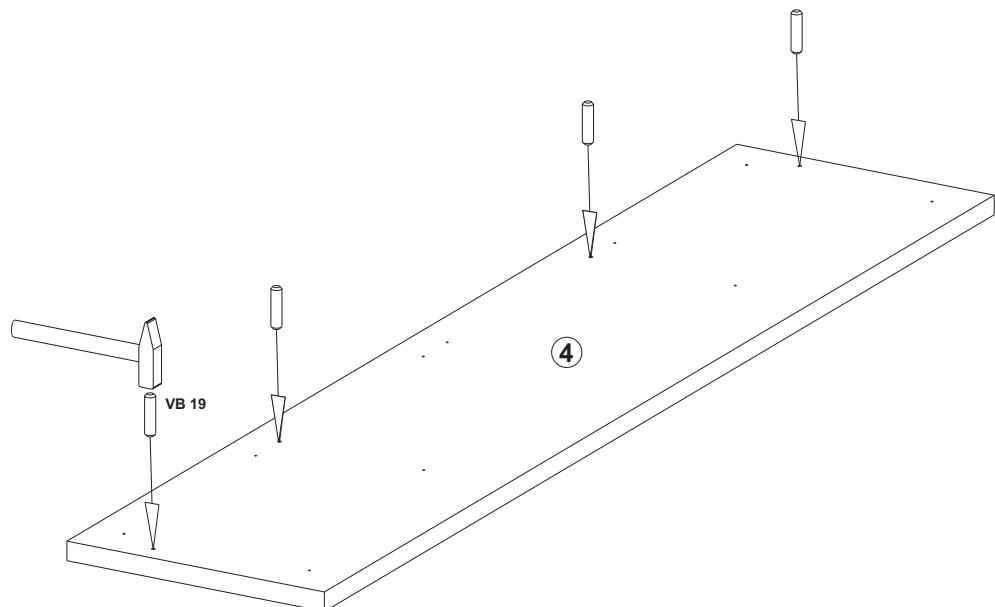

1 3x**2** 3x**3****4**


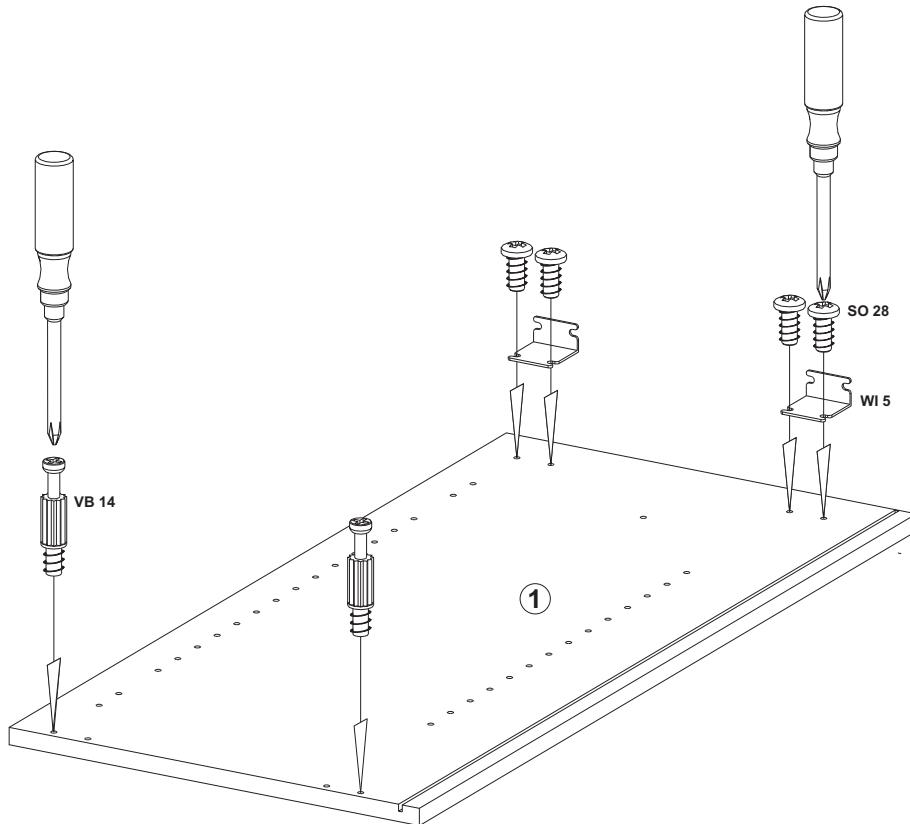
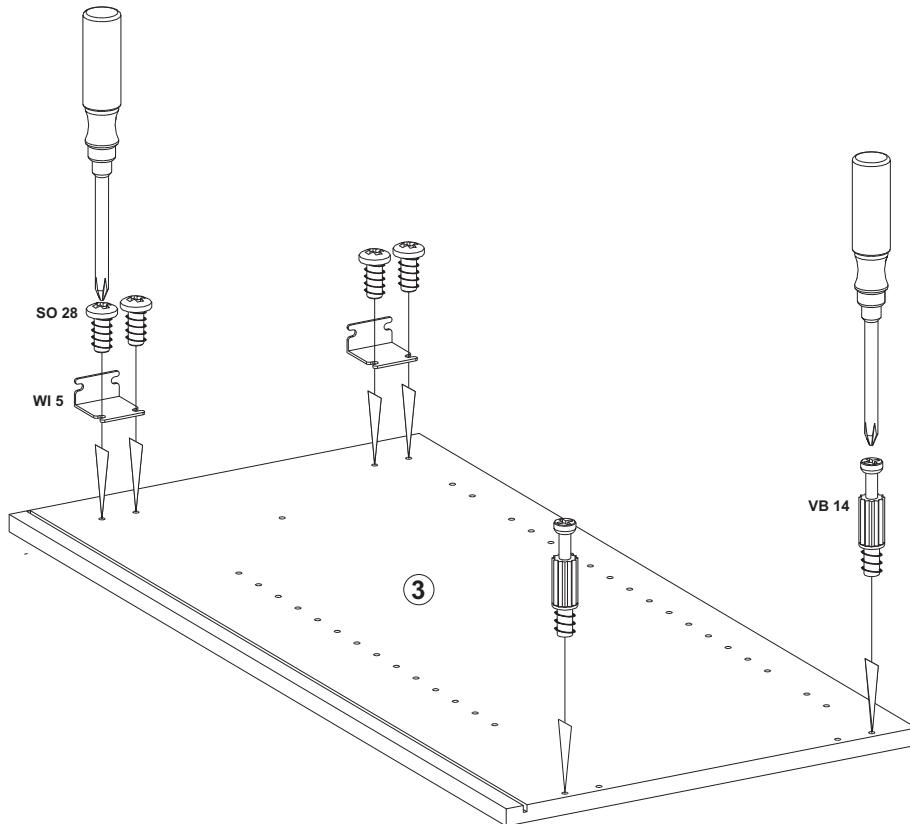
D3,5x15
2 x SP12 x
ZB 4M4x20
2 x SG5

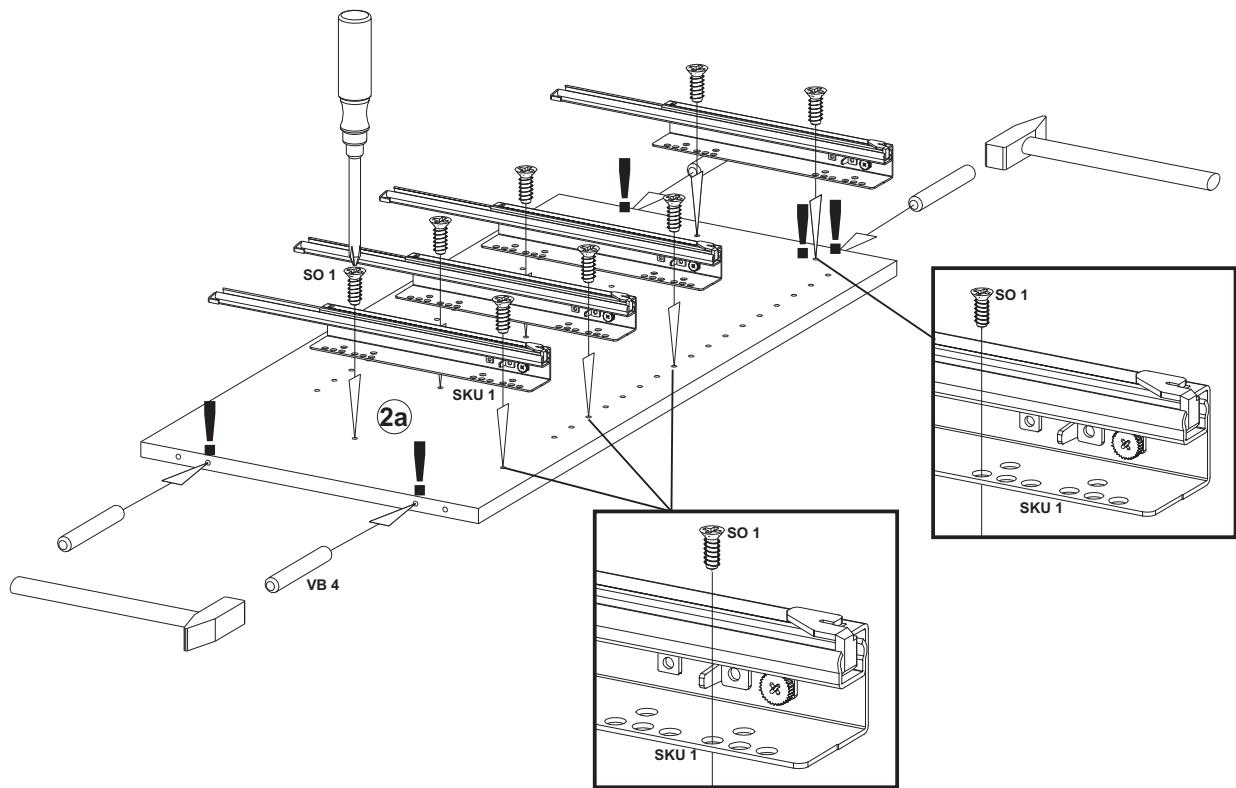
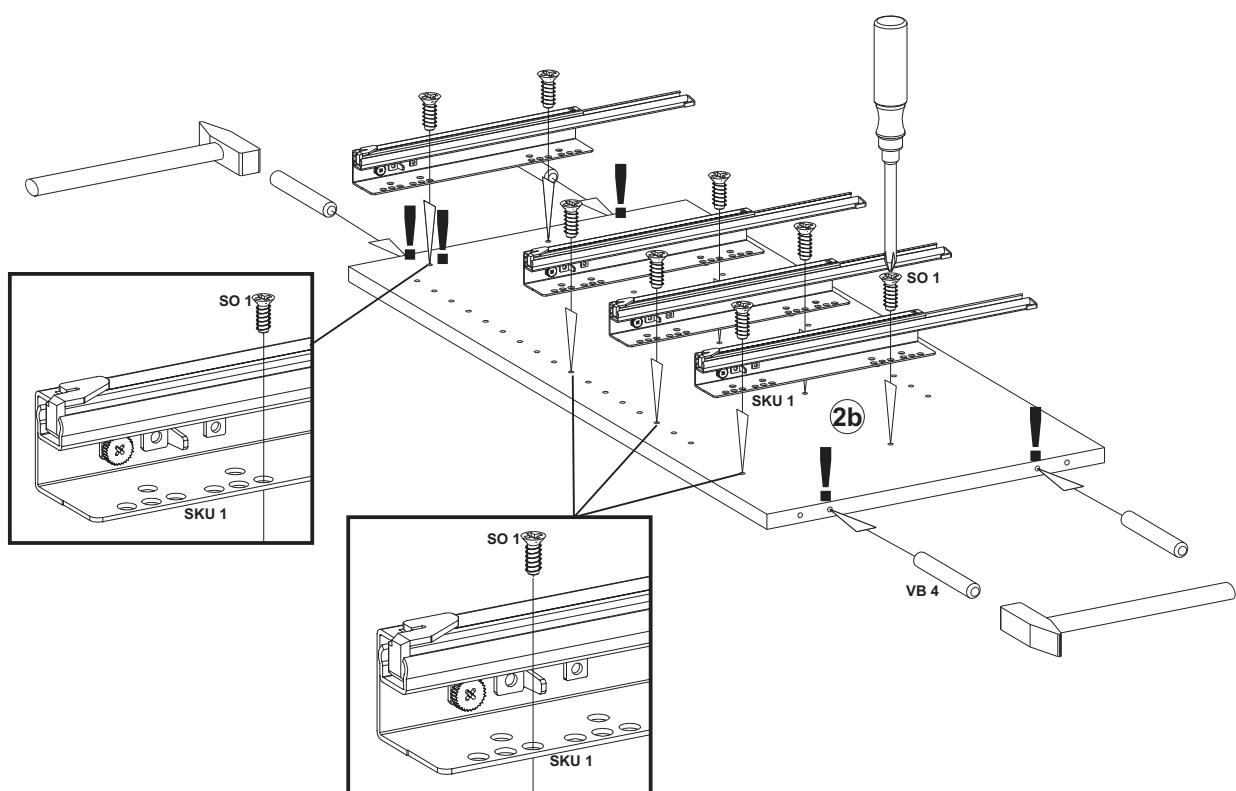
1 x GR42



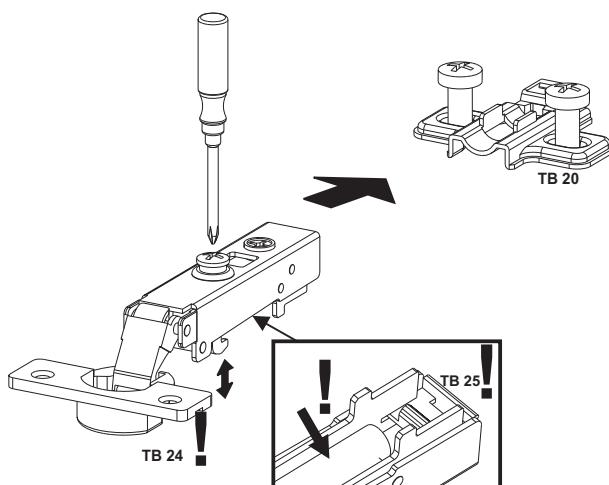
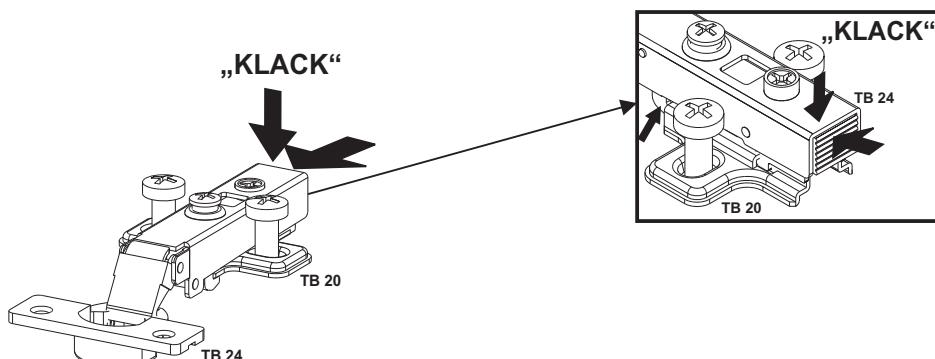
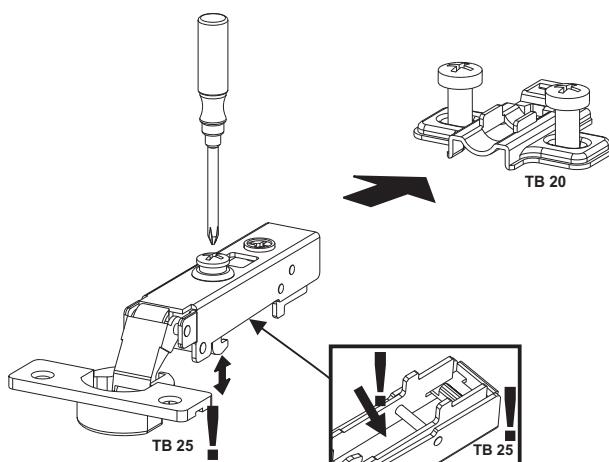
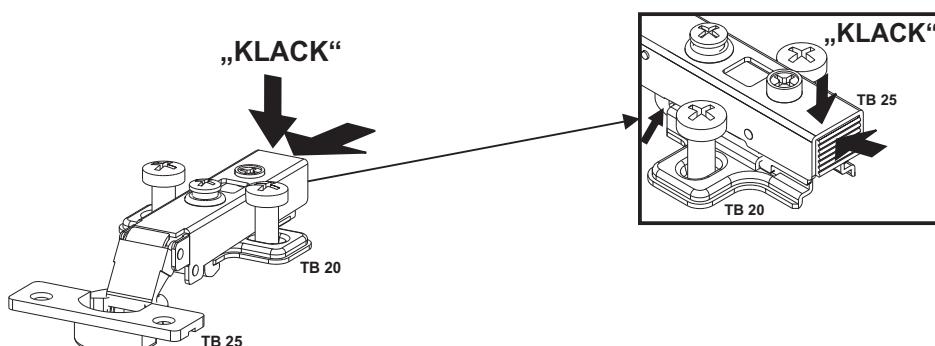
ZB1

1**2****3**

E

F**1****2**

G5,0x35
8 x VB45,8x10,5
4 x SKU15,8x10,5
16 x SO1**1****2**

H**1 2x****2 2x****3 2x****4 2x**

I

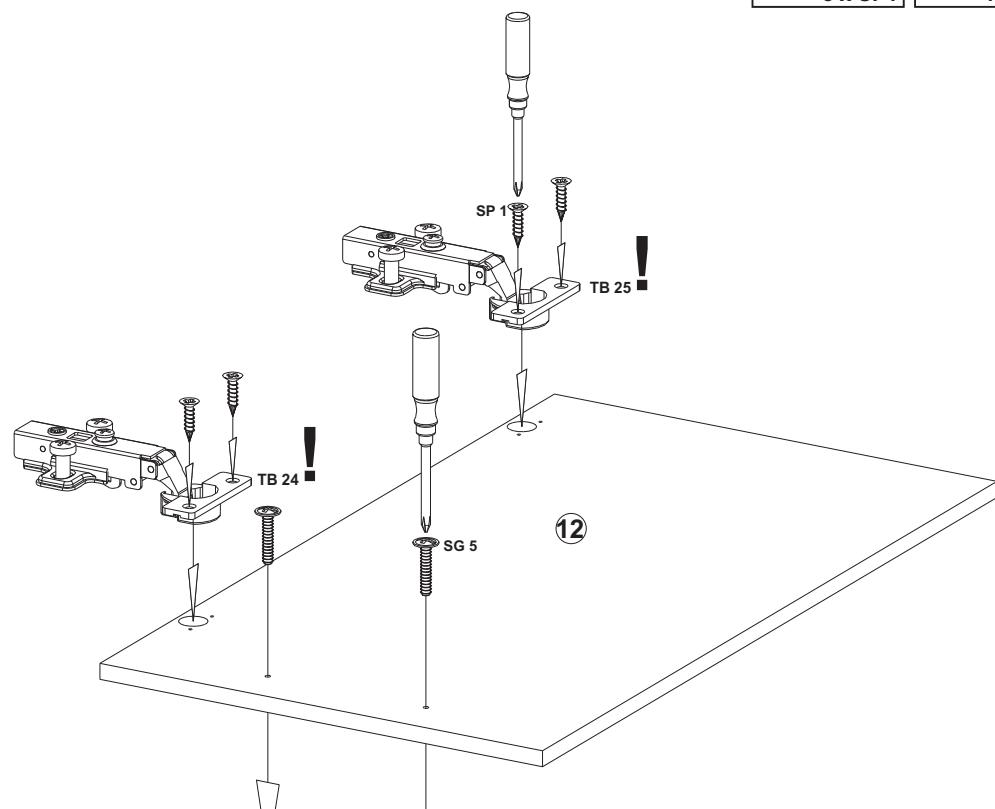
3,5x15

8 x SP1

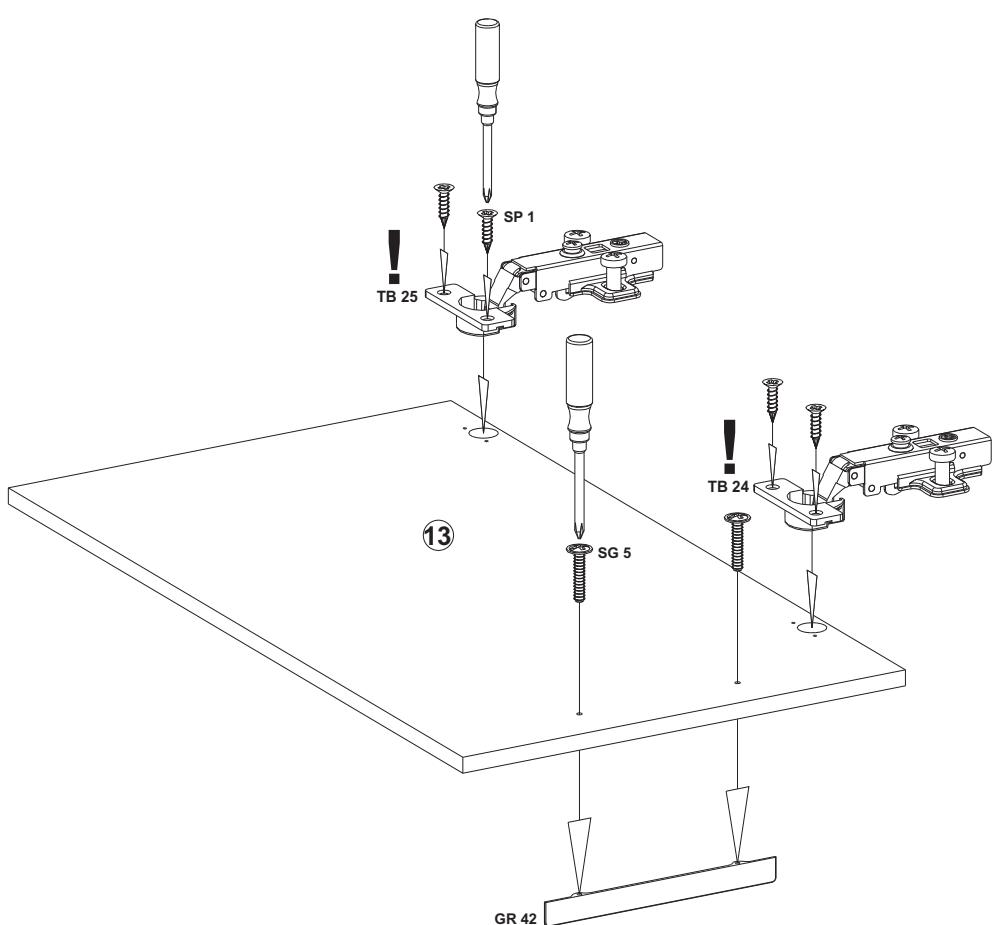
M4x20

4 x SG5

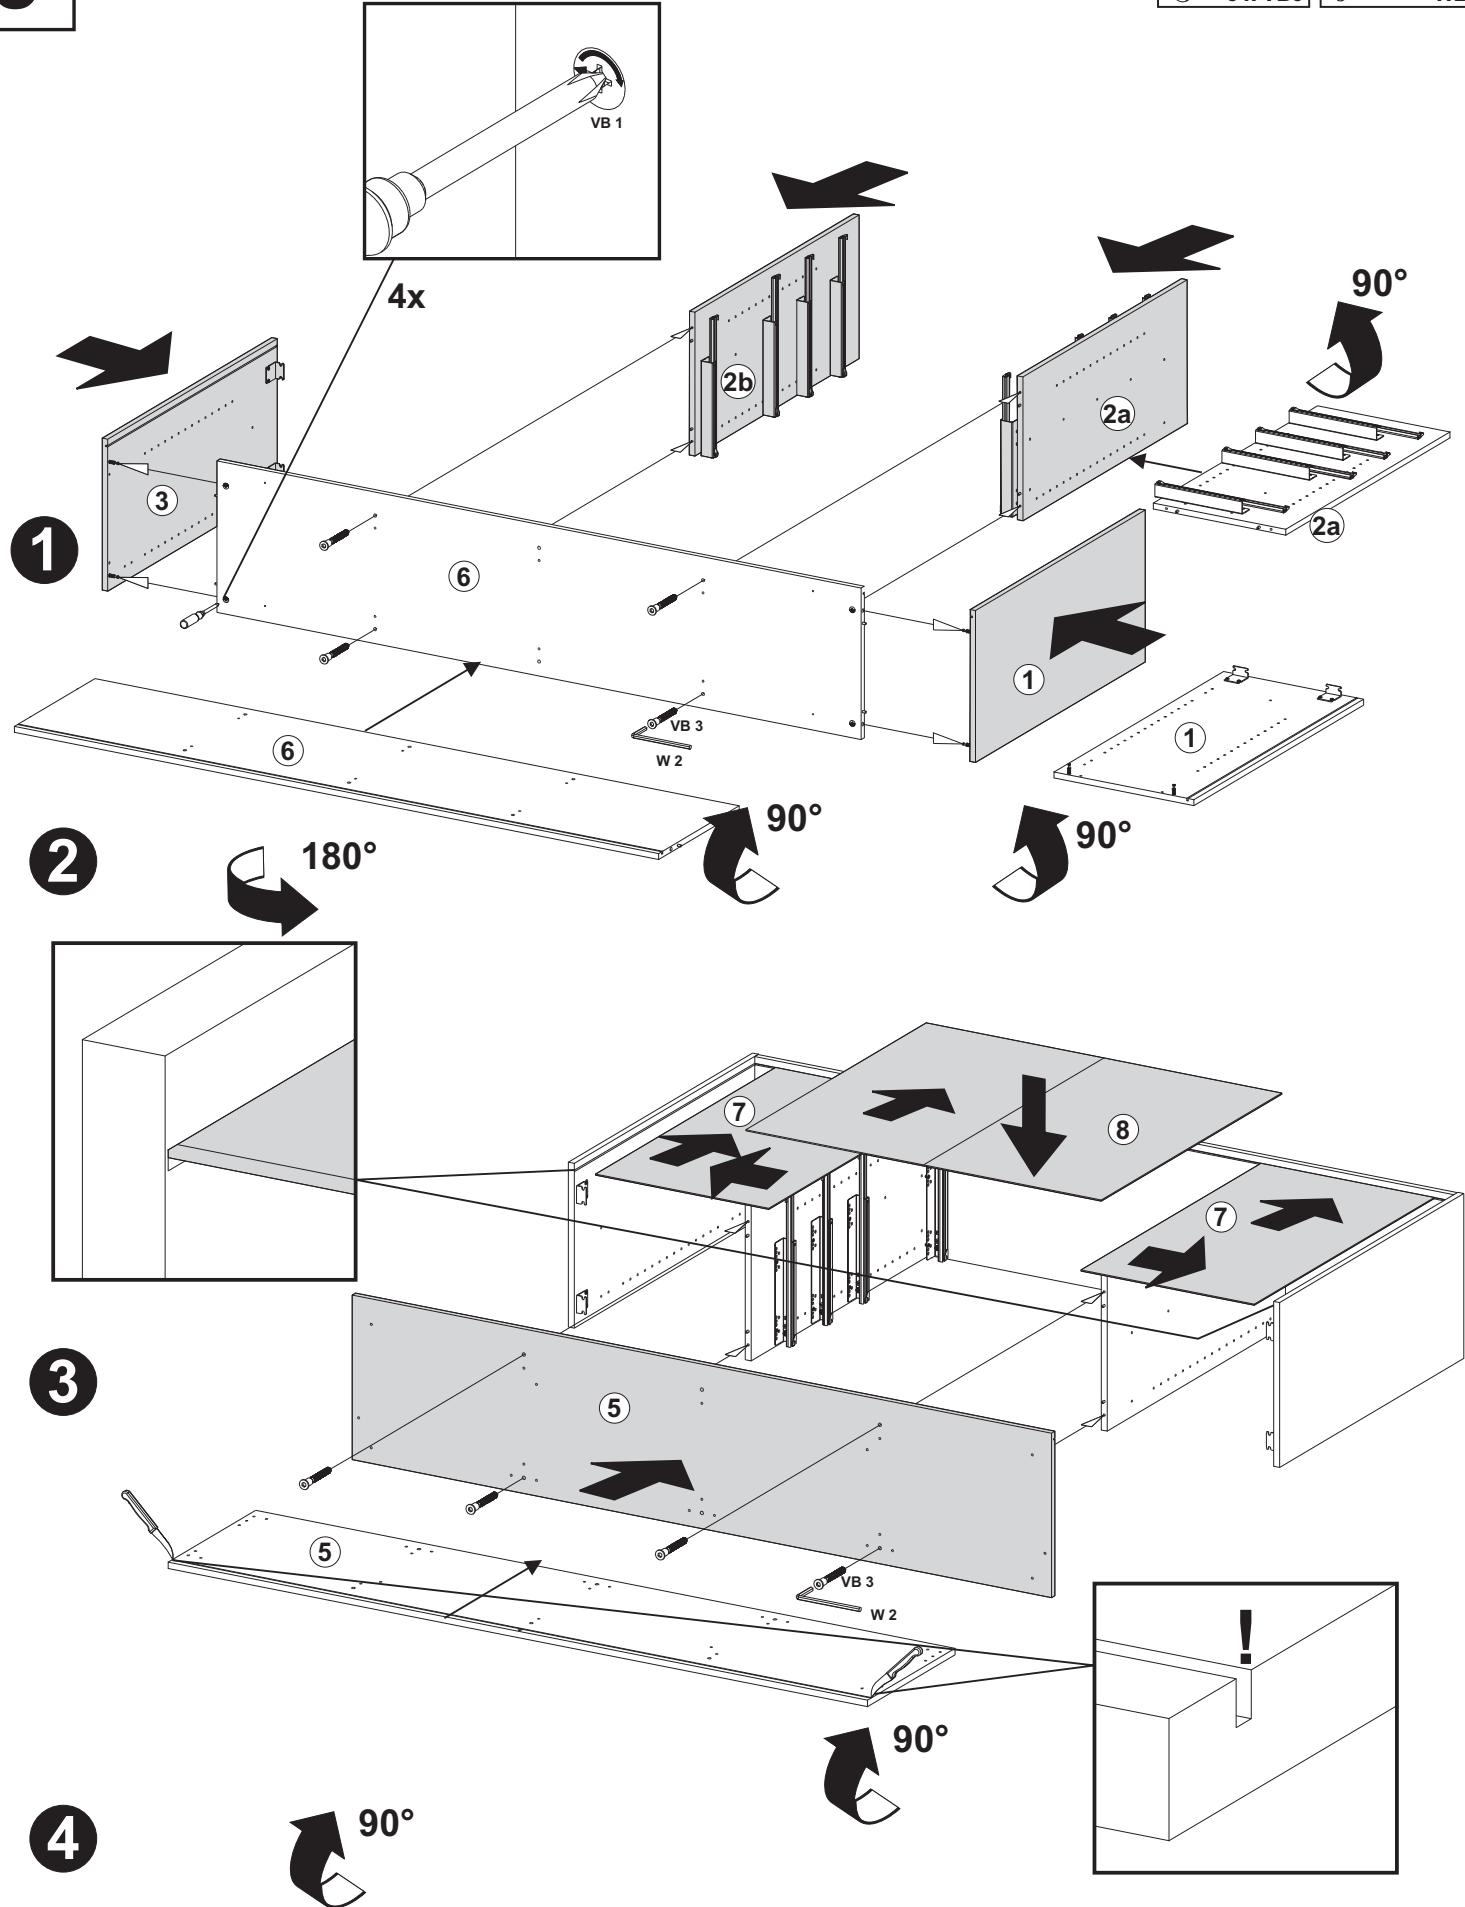

2 x GR42



1

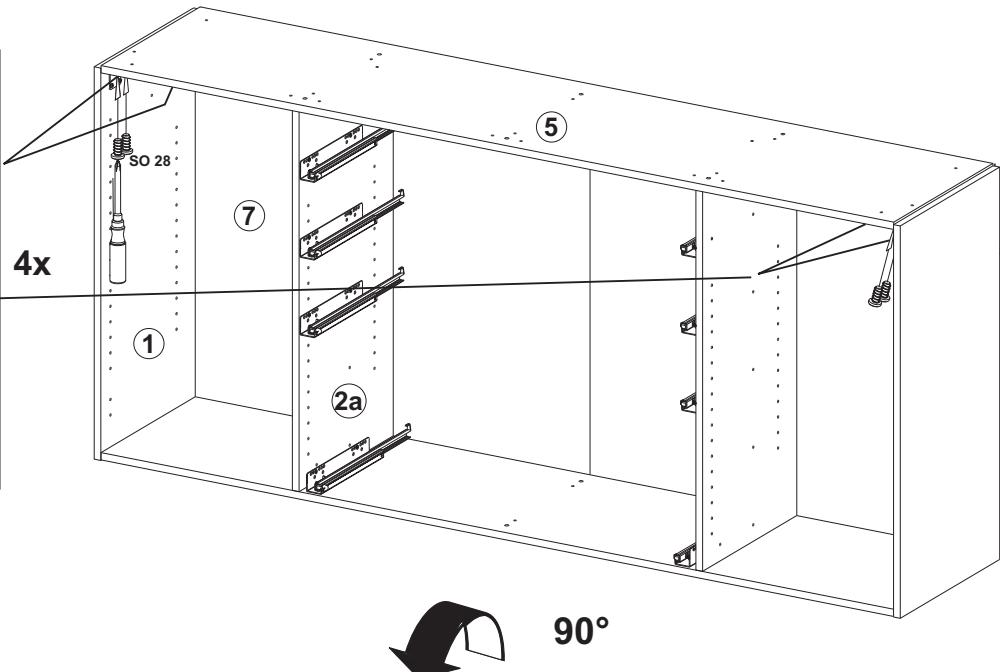
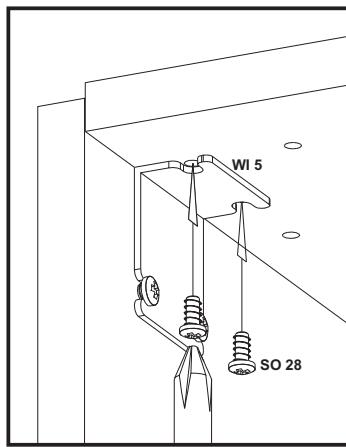
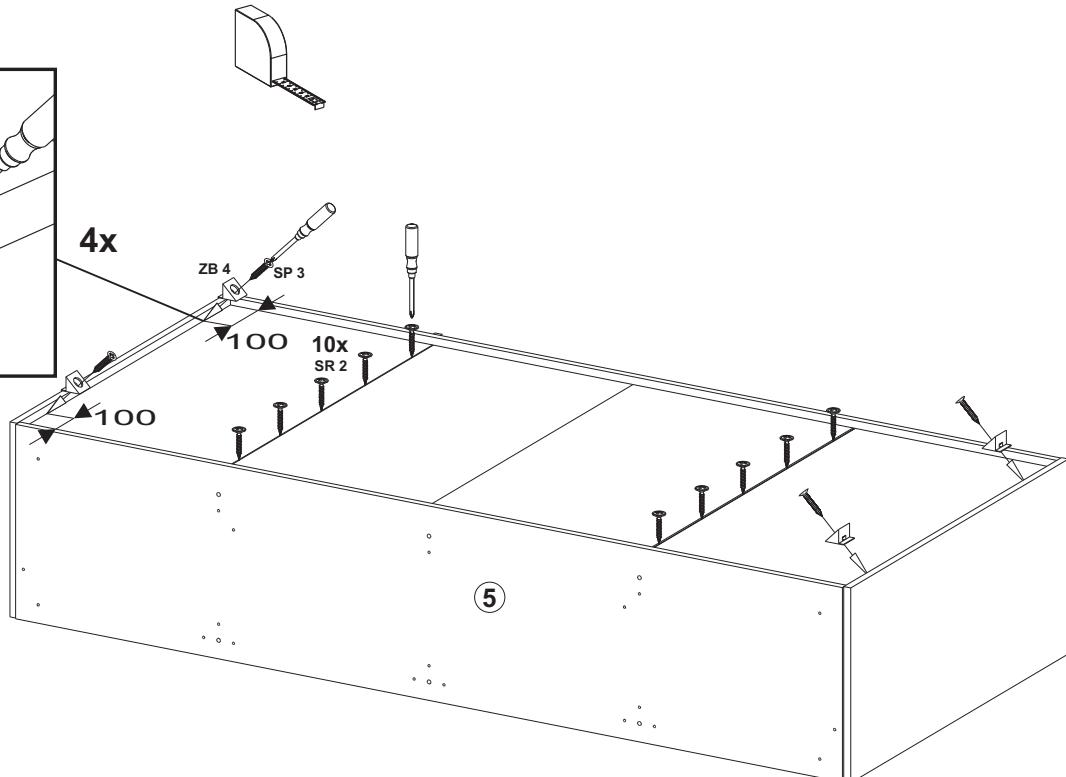
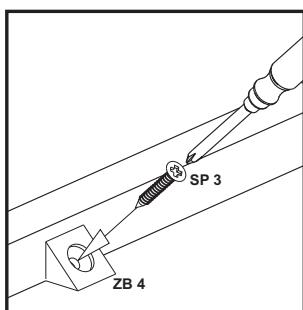


2


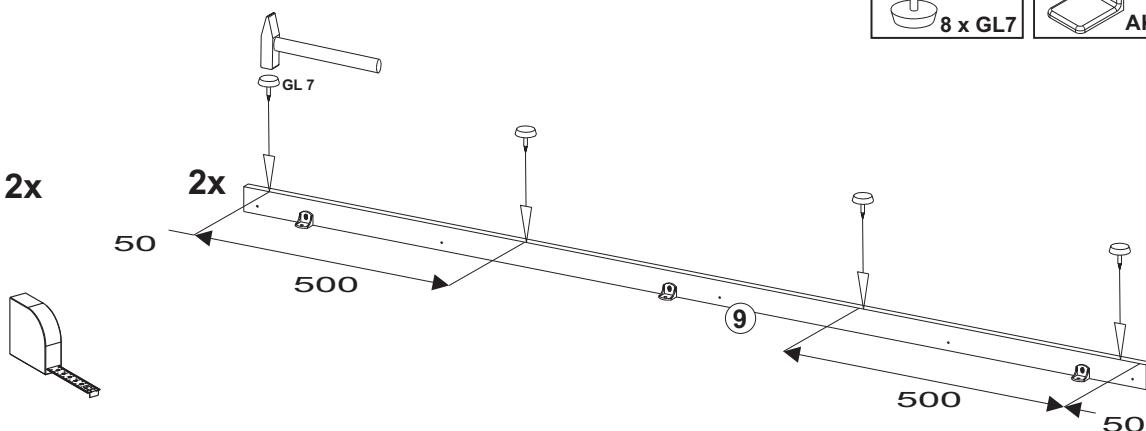
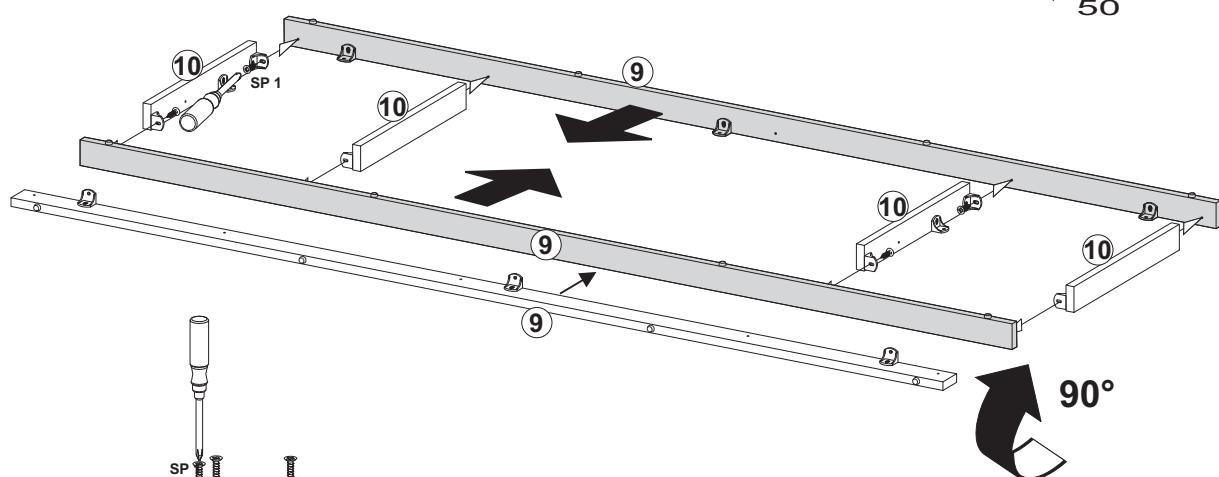
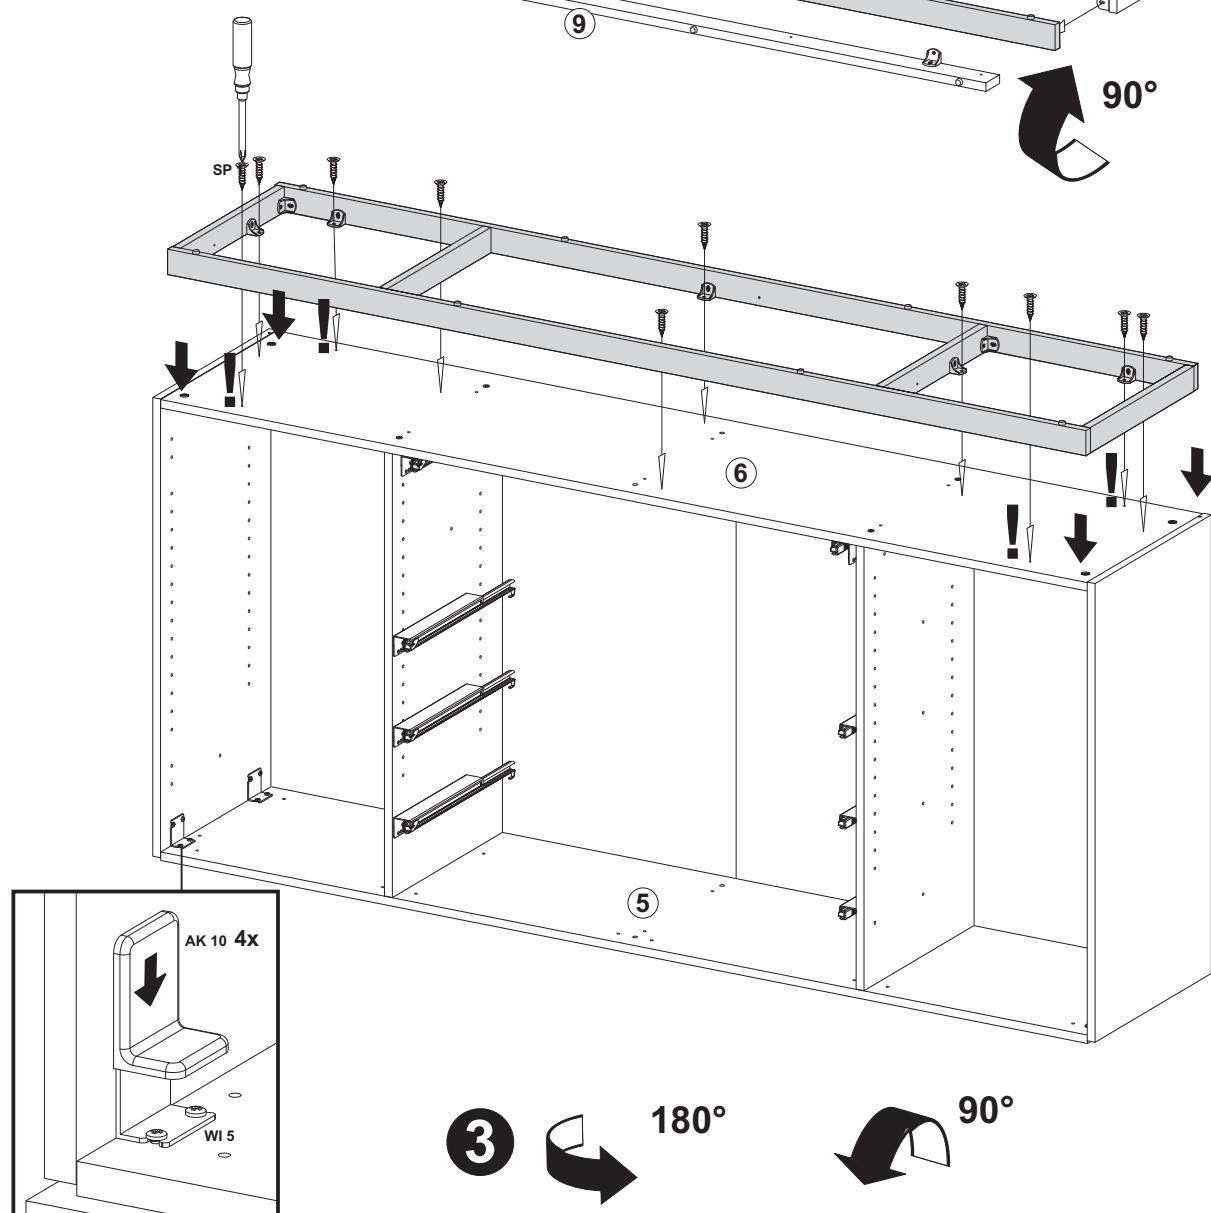
J


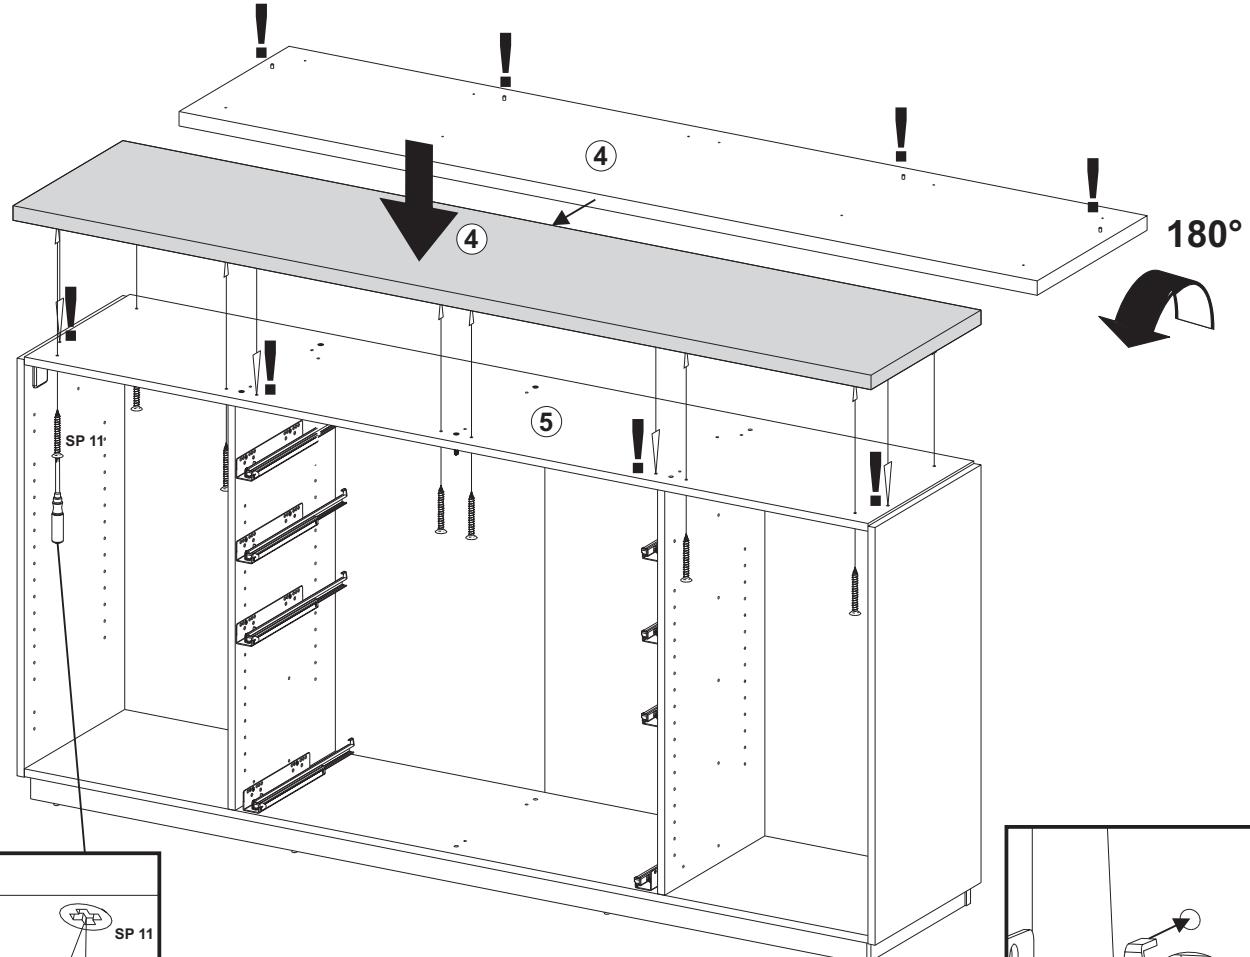
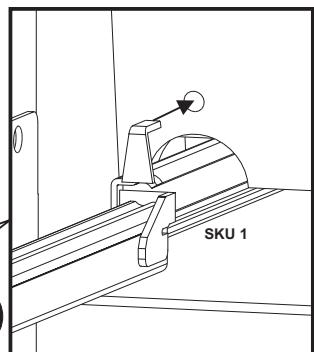
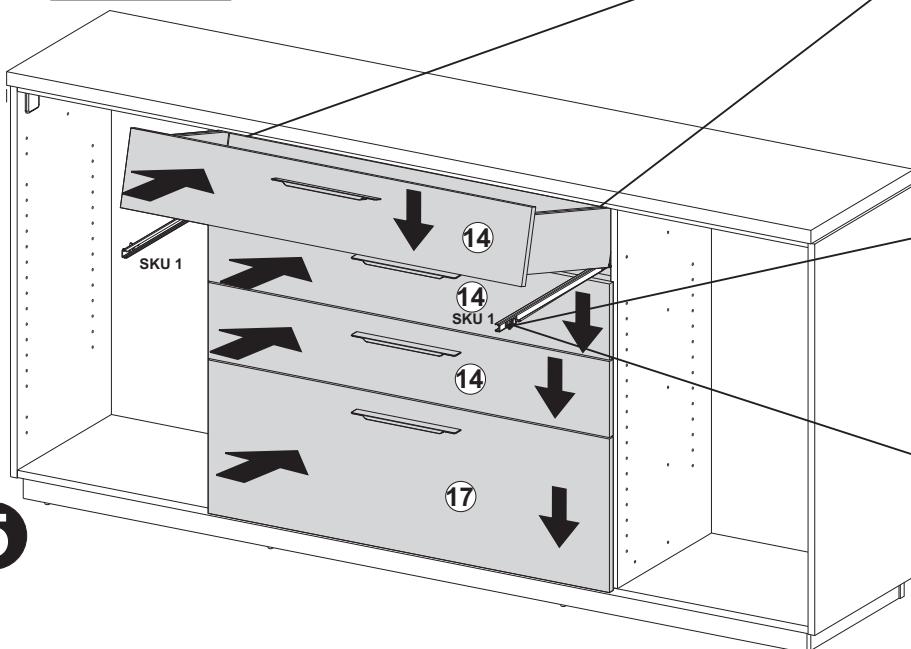
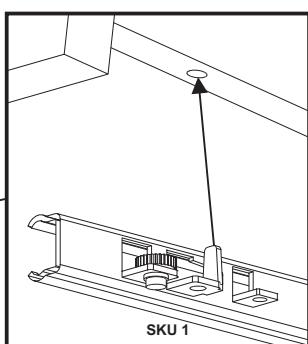
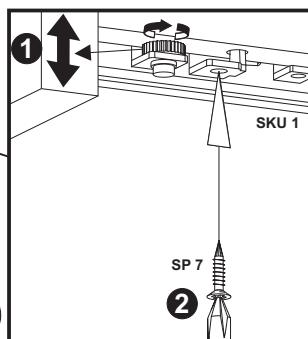
K

2,7x20 10 x SR2	3,5x20 4 x SP3	4 x ZB 4	6,3x13 8 x SO28
--------------------	-------------------	-------------	--------------------


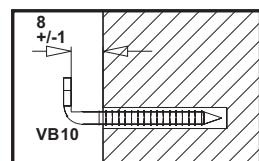
**1****2****3**

L

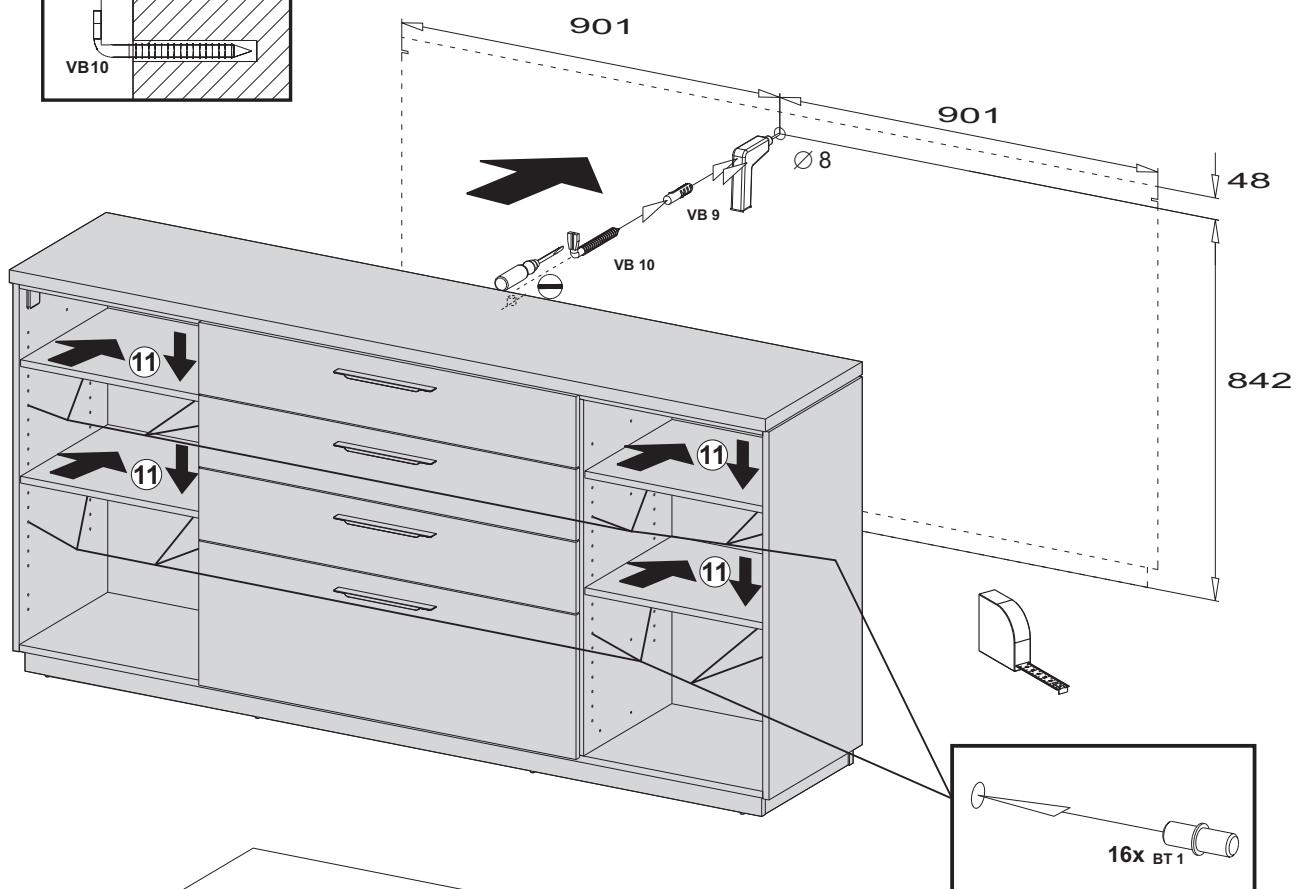
**1** 2x**2****3**

M**1****2****5****3****4**

N



1



2

